
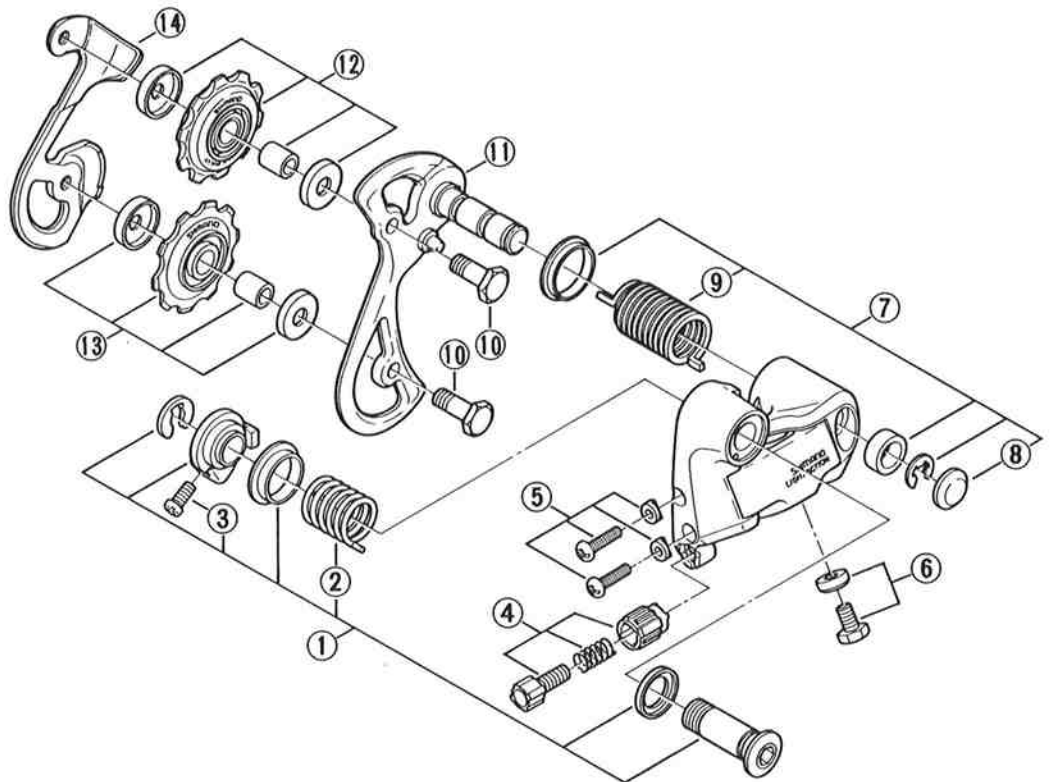
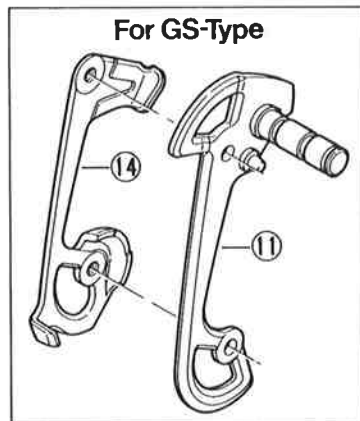


RD-L532-SS Rear Derailleur Short Cage
RD-L532-GS Rear Derailleur Long Cage
RD-L532-SGS Rear Derailleur Super Long Cage

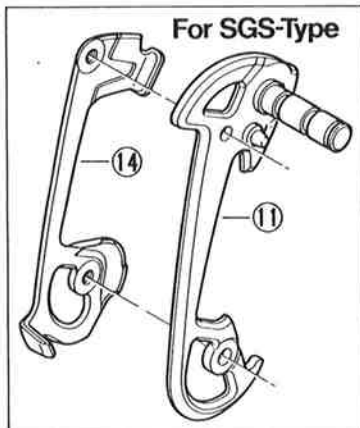


ITEM NO.	PART NO.	DESCRIPTION	Q'TY
1	516 9802	Bracket Axle Assembly	
2	516 3400	B-Tension Spring	
3	516 3500	B-Tension Adjusting Bolt	
4	516 9801	Cable Adjusting Barrel Unit	
5	516 9803	Stroke Adjusting Screw & Plate	
6	563 9834	Cable Fixing Bolt & Plate	
7	518 9804	Plate Axle Small Parts	
8	518 0600	Plate Axle Cap	
9	518 0500	P-Tension Spring	
10	569 0800	Pulley Bolt	
11	518 9801	Outer Plate w/Mounting Shaft for SS-Type	
	518 9802	Outer Plate w/Mounting Shaft for GS-Type	
	518 9803	Outer Plate w/Mounting Shaft for SGS-Type	
12	563 9837	Guide Pulley Unit	
13	563 9839	Tension Pulley Unit	
14	539 2201	Inner Plate for SS-Type	
	563 6100	Inner Plate for GS-Type	
	514 0400	Inner Plate for SGS-Type	

REAR DERAILLEUR

RD-L532-ss
Short Cage

RD-L532-Gs
Long Cage

RD-L532-SGS
Super Long Cage

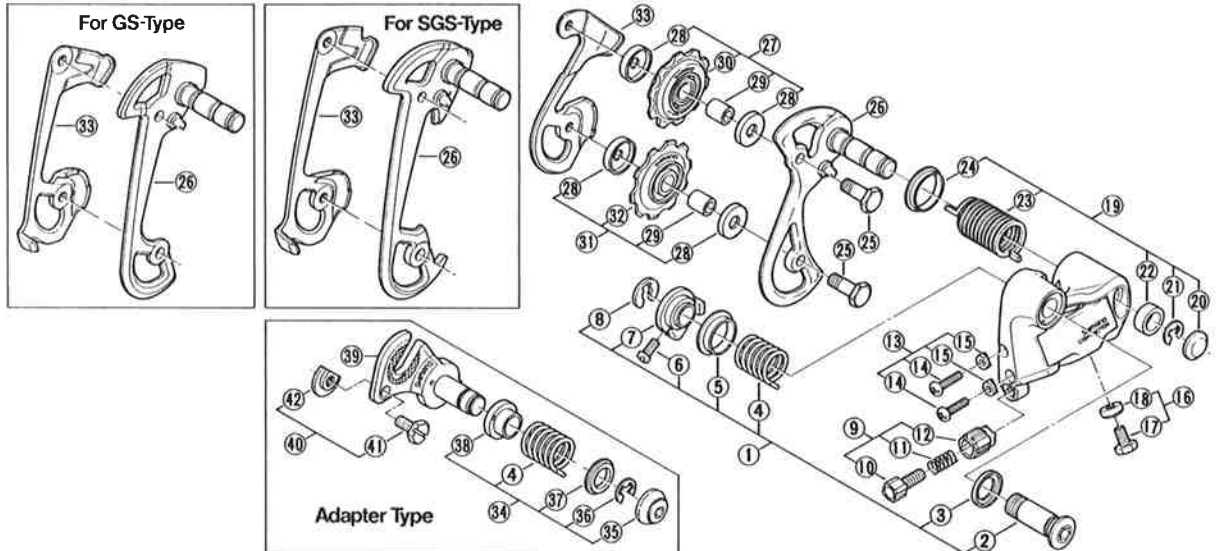

ITEM NO.	PART NO.	DESCRIPTION	Q'TY
1	3-516 9802	Bracket Axle Assembly	
2	516 0200	Bracket Axle	
3	516 0300	Bracket Axle Collar	
4	516 3400	B-Tension Spring	
5	516 0400	B-Seal Ring	
6	516 3500	B-Tension Adjusting Bolt	
7	3-559 9809	Bracket Axle Bushing	
8	516 0700	Stop Ring (φ6.5mm)	
9	3-516 9801	Cable Adjusting Barrel Unit	
10	516 0900	Cable Adjusting Barrel	
11	516 1000	Cable Adjusting Spring	
12	516 1100	Cable Adjusting Plate	
13	3-516 9803	Stroke Adjusting Screw & Plate	
14	582 3000	Stroke Adjusting Screw	
15	563 5000	Stroke Adjusting Plate	
16	3-563 9834	Cable Fixing Bolt & Plate	
17	000 1115	Cable Fixing Bolt	
18	563 6300	Cable Fixing Plate	
19	3-518 9804	Plate Axle Small Parts	
20	518 0600	Plate Axle Cap	
21	518 0800	Stop Ring (φ5mm)	
22	518 0200	Plate Mounting Collar A	
23	518 0500	P-Tension Spring	
24	559 1000	Plate Mounting Collar B	
25	569 0800	Pulley Bolt	
26	3-518 9801	Outer Plate w/Mounting Shaft for SS-Type	
27	3-518 9802	Outer Plate w/Mounting Shaft for GS-Type	
28	3-518 9803	Outer Plate w/Mounting Shaft for SGS-Type	
29	3-563 9837	Guide Pulley Unit	
30	511 2700-1	Pulley Cap	
31	511 2901	Pulley Bush	
32	3-513 9817	Guide Pulley	
33	3-563 9839	Tension Pulley Unit	
34	521 3100	Tension Pulley	
35	539 2201	Inner Plate for SS-Type	
36	563 6100	Inner Plate for GS-Type	
37	514 0400	Inner Plate for SGS-Type	
38	3-515 9807	Bracket Axle Small Parts	
39	554 0900	Cap	
40	521 3001	Stop Ring (φ6mm)	
41	515 0600	Bracket Axle Collar A	
42	515 0800	Bracket Axle Collar B	
43	3-515 9808	Adapter w/Mounting Shaft	
44	3-525 9069	Adapter Screw & Nut	
45	000 1104-1	Adapter Screw	
46	511 3500-1	Adapter Nut	