

Dealer's Manual

ROAD	GRAVEL	MTB
E-BIKE	LIFESTYLE	GENERAL

Rear Derailleur

DEORE XT

RD-M8200

RD-M8230

DEORE

RD-M7200

RD-M7230

Contents

IMPORTANT NOTICE.....	3
TO ENSURE SAFETY.....	4
NOTICE	5
Cautions regarding LINKGLIDE 11-speed type.....	6
List of tools to be used	8
Installation / removal	9
Installing the rear derailleur	9
Adjustment.....	11
Adjusting the stroke on the high limit	11
Checking the chain length	12
Installing the chain	14
Connection and securing of the inner cable	15
• Outer casing length	15
• Connection and securing of the inner cable	16
Adjusting the stroke on the low limit	19
Adjusting the B-screw.....	20
SIS adjustment.....	21
Maintenance.....	23
Replacing the pulleys.....	23
Replacing the B-axle	24
Removing the plate and replacing the P-tension spring	25
• Removal	25
• Installation	26

IMPORTANT NOTICE

- **This dealer's manual is intended primarily for use by professional bicycle mechanics.**

Users who are not professionally trained for bicycle assembly should not attempt to install the components themselves using the dealer's manuals.

If any part of the information on the manual is unclear to you, do not proceed with the installation. Instead, contact your place of purchase or a distributor for assistance.

- Make sure to read all manuals included with each product.
- Do not disassemble or modify the product other than as stated in the information contained in this dealer's manual.
- All manuals and technical documents are accessible online at <https://si.shimano.com>.
- For consumers who do not have easy access to the internet, please contact a SHIMANO distributor or any of the SHIMANO offices to obtain a hardcopy of the user's manual.
- Please observe the appropriate rules and regulations of the country, state or region in which you conduct your business as a dealer.

For safety, be sure to read this dealer's manual thoroughly before use, and follow it for correct use.

The following instructions must be observed at all times in order to prevent personal injury and physical damage to equipment and surroundings.

The instructions are classified according to the degree of danger or damage which may occur if the product is used incorrectly.

	DANGER	Failure to follow the instructions will result in death or serious injury.
	WARNING	Failure to follow the instructions could result in death or serious injury.
	CAUTION	Failure to follow the instructions could cause personal injury or physical damage to equipment and surroundings.

TO ENSURE SAFETY

WARNING

- **Be sure to follow the instructions provided in the manuals when installing the product.**
Only use SHIMANO genuine parts. If a component or replacement part is incorrectly assembled or adjusted, it can lead to component failure and cause the rider to lose control and crash.
-  Wear approved eye protection while performing maintenance tasks such as replacing components.

Be sure to also inform users of the following:

- **Clean the chain and QUICK-LINK with an appropriate chain cleaner regularly. Intervals between maintenance depend on the use and riding circumstances. Never use alkali- or acid-based detergents such as rust cleaners. If those detergents are used the chain or QUICK-LINK might break and cause serious injury.**
 - Check the chain for any damage (deformation or cracking), skipping, or other abnormalities such as unintended gear shifting. The chain may break, and you may fall.
- When using TL-CT12
- Be careful not to get injured by the blade or needle while working.
 - Be careful not to get your fingers pinched by the tool while working.
 - Keep the tool out of the reach of small children.

CAUTION

For installation to the bicycle and maintenance

- Do not allow the wheel to turn while securing the inner cable and installing the inner end cap. Otherwise, you may touch the wheel and be injured.

NOTICE

Be sure to also inform users of the following:

- If gear shifting operations do not feel smooth, consult the place of purchase for assistance.
- The gears should be periodically washed with a neutral detergent then lubricated. In addition, cleaning the chain and QUICK-LINK with a neutral detergent and lubricating them can be an effective way of extending the life of the chain and QUICK-LINK.
- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend SHIMANO lubricants and maintenance products.


For installation to the bicycle and maintenance

- Depending on the shape of the frame, the rear derailleur may interfere with the chainstay. Use the B-screw to adjust so that the rear derailleur does not interfere with the chainstay.
- Grease with SIS SP41 Grease (Y04180000) the inner cable and the sliding portions of the outer casing before use to ensure that they slide properly. Do not let dust adhere to the inner cable.
- Use an OT-SP41 outer casing and a cable guide for smooth operation.
- Use an outer casing which still has some length to spare even when the handlebars are turned all the way to either side. Furthermore, check that the shifter does not touch the bicycle frame when the handlebars are turned all the way.
- If gear shifting adjustments cannot be carried out, check the alignment of the derailleur hanger and check if the cable is clean and lubricated or if the outer casing is too long or too short.
- Periodically clean the shifting unit and lubricate all moving parts (mechanism and pulleys).
- Some pulleys have arrows on them to indicate the direction of rotation. In that case, install the pulleys so that the rotation directions of the pulleys match the direction of the arrows when the crank is turned in the forward direction.
- If you hear abnormal noise as a result of excess play in a pulley, you should replace the pulley.
- Before using LINKGLIDE products, check the combinations listed in the [compatibility information](#).

The actual product may differ from the illustration because this manual is intended mainly to explain the procedures for using the product.

Cautions regarding LINKGLIDE 11-speed type

When using 11-speed type LINKGLIDE, interference may occur with the rear derailleur and spokes. Check dimensions beforehand, and check that points A and B do not interfere with the spokes or other parts.

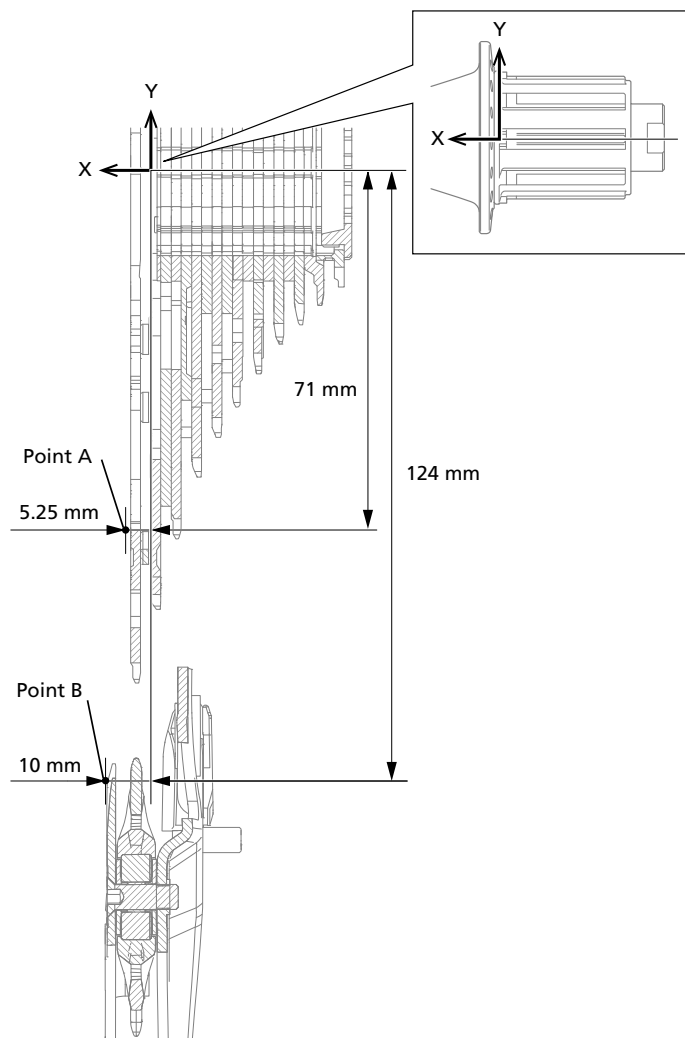

TECH TIPS


- It is also possible to check for interference by using the cassettes listed below and measuring the clearance between the largest sprocket and the spokes, etc.

HG 11-speed 11-51T (CS-M5100): 8.5 mm or more

HG 11-speed 11-46T (CS-M8000 / CS-M7000): 7.5 mm or more

LG 11-speed 11-50T (CS-LG600): 5.1 mm or more

* The latest model information can be accessed on our website (<https://productinfo.shimano.com>).

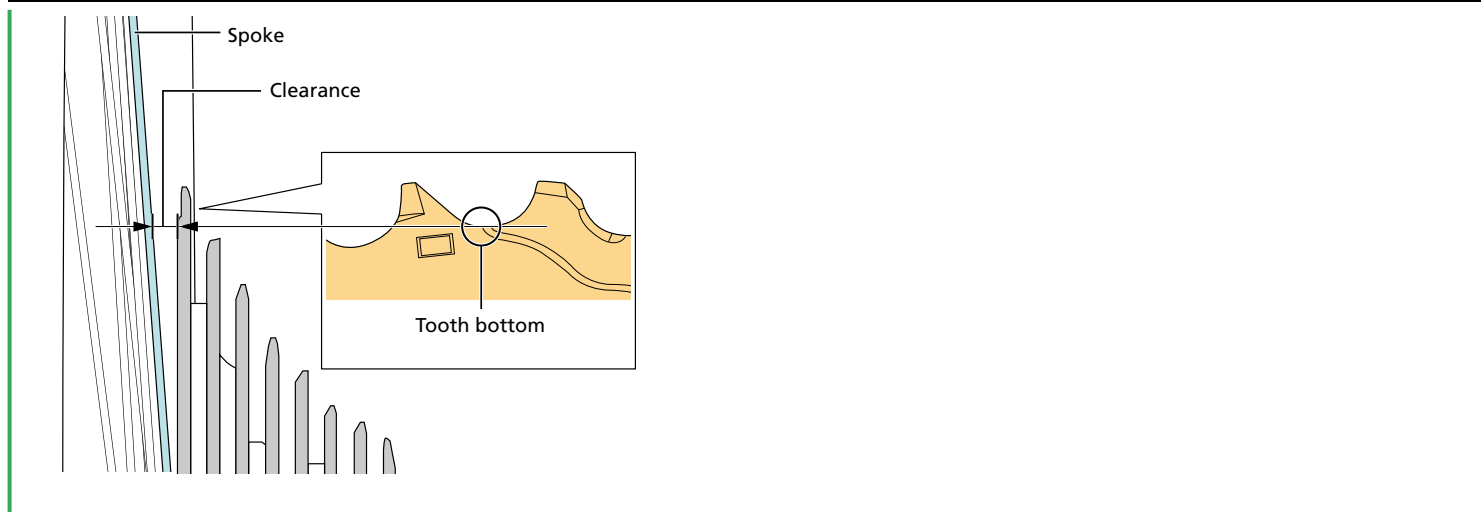

List of tools to be used

The following tools are needed for installation/removal, adjustment, and maintenance purposes.

Tool	
	2 mm hexagon wrench
	3 mm hexagon wrench
	4 mm hexagon wrench
	5 mm hexagon wrench
	Cross head screwdriver[#2]
	TL-CT12

Installation / removal


Installing the rear derailleur

TECH TIPS

- The rear derailleur will not shift properly if the derailleur hanger is not straight. Use TL-RD11 to check whether the derailleur hanger is straight or not.


1. Secure the rear derailleur.

Be careful not to insert the B-axis in the derailleur hanger at an angle. In addition, be sure to install the rear derailleur so that the stopper plate contacts the B-tension stop with no gap in between.

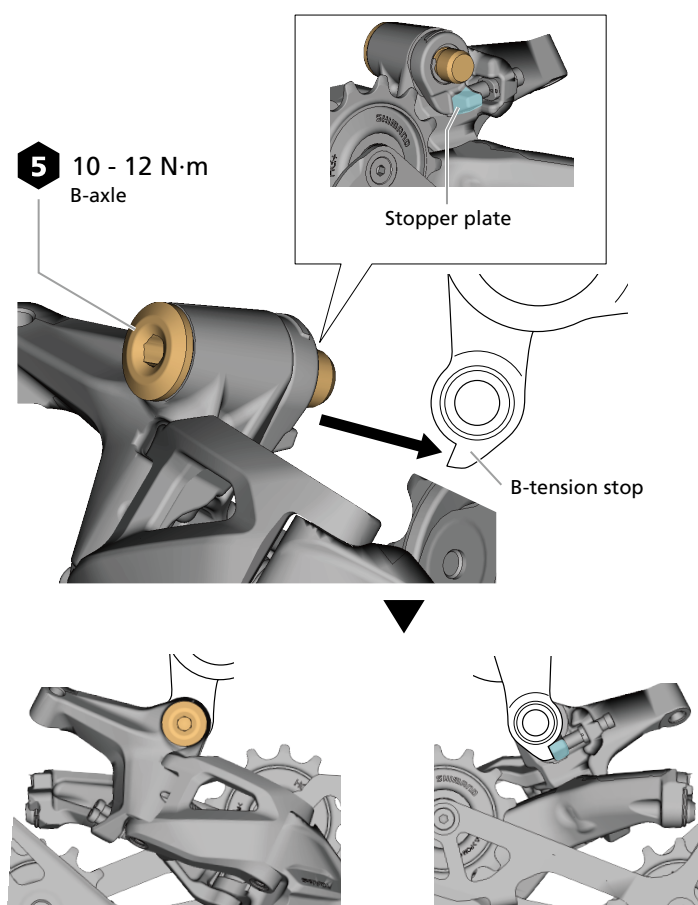

NOTICE

- Periodically check to make sure that there is no gap between the B-tension stop and the stopper plate. If there is a gap between these two parts, problems with gear shifting performance may occur.

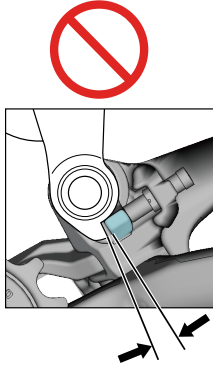


Adjustment

Adjusting the stroke on the high limit

1. Adjust by turning the high limit screw.


Adjust so that the center of the guide pulley is aligned with the outer face of the smallest sprocket when viewed from the rear side.

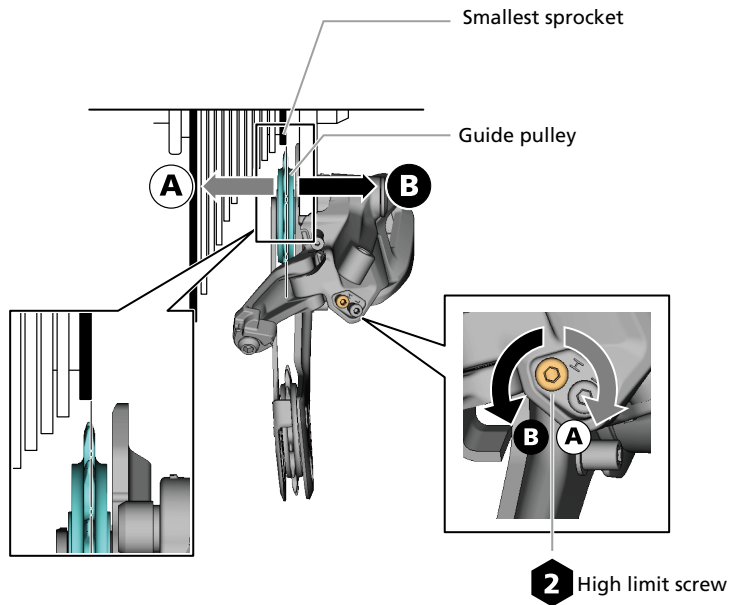

Checking the chain length

1. Join the chain at the largest sprocket.

In order to check the length at the rear of the cassette, join the two ends of the chain at the rear of the cassette as shown in the figure.

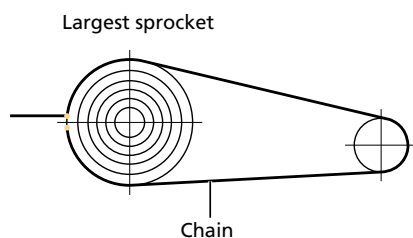



2. Check the length of the chain.

With the zero point of the chain established on the rear of the largest sprocket, the proper final chain length is determined by adding a certain number of links to this resulting chain length. The number of links is dependent on the chain connection method. See the figures.

* For full suspension bikes, check the length of the chain with the suspension in its fully extended, uncompressed position.



RD-M8200 / RD-M7200

- QUICK-LINK

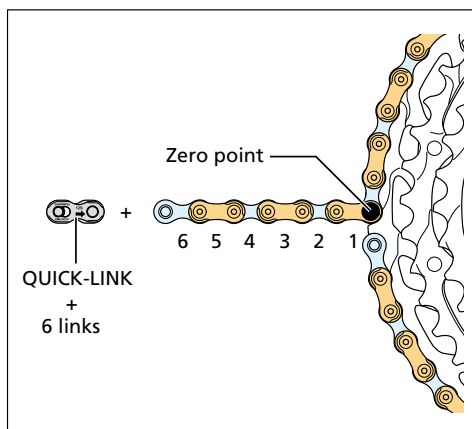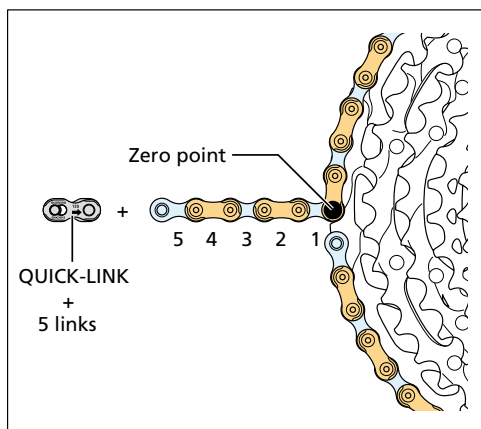


RD-M8230 / RD-M7230

- QUICK-LINK

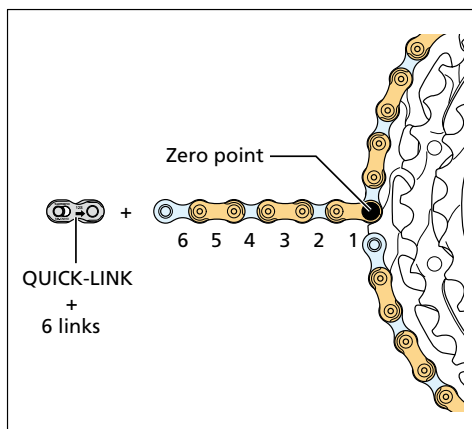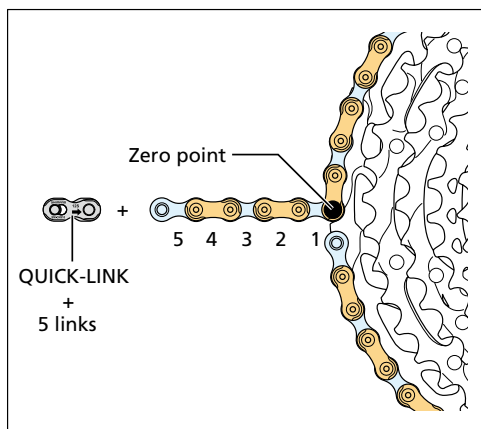


- Connecting pin

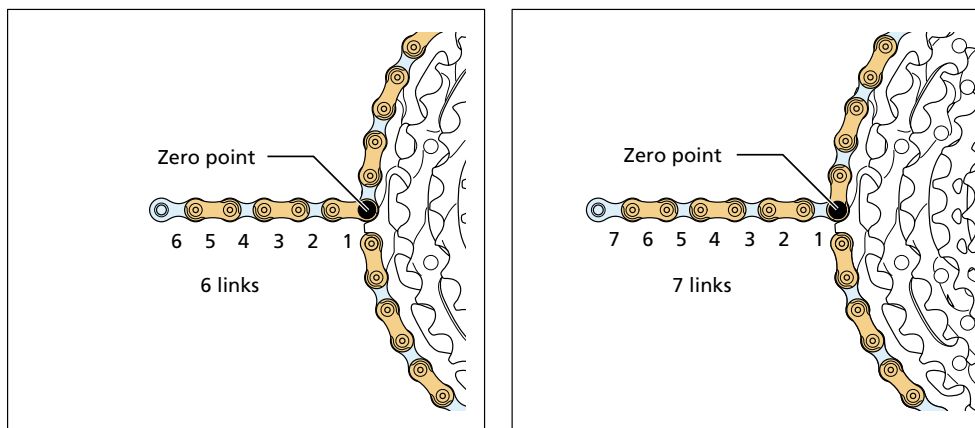


NOTICE

- The rear derailleur plate assembly is equipped with a pin or plate that prevents chain derailment. When routing the chain through the rear derailleur plate assembly, route it so that it is on the rear derailleur body side of the chain derailment prevention plate, as shown in the figure. If the chain is not passed through the correct position, damage may be caused to the chain or the rear derailleur.

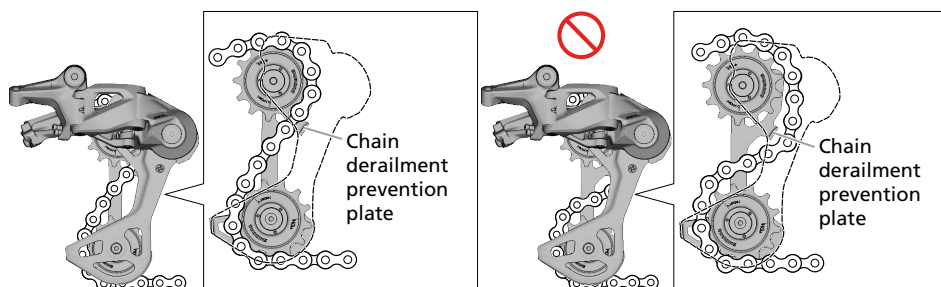

- For full suspension bikes, length [a] will vary according to the movement of the rear suspension. After shifting to the largest sprocket, make sure that the chain length is not too short when dimension [a] is at its maximum extension. If the chain length is too short, drivetrain components may be damaged due to excessive load on the drivetrain.

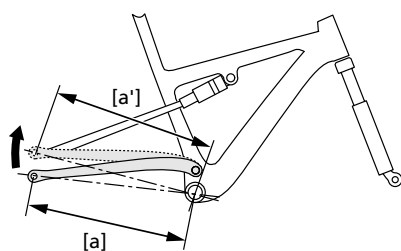

Installing the chain

Refer to the dealer's manual for the chain to find instructions on installing/removing the chain.


[12-speed type](#)

[11-speed type / 10-speed type](#)

Connection and securing of the inner cable

Outer casing length


1. Loosen the B-screw so that the distance between the self-locking plate and the tip of the B-screw is 2 mm.

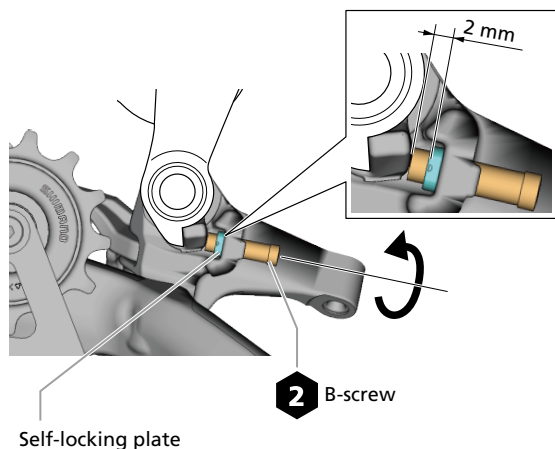

2. Determine the length of the outer casing.

Temporarily attach a sealed outer cap to the end of the outer casing. Align the end of the outer cap to the bottom edge of the outer casing holder on the rear derailleur.

Make sure to leave enough slack in the outer casing.

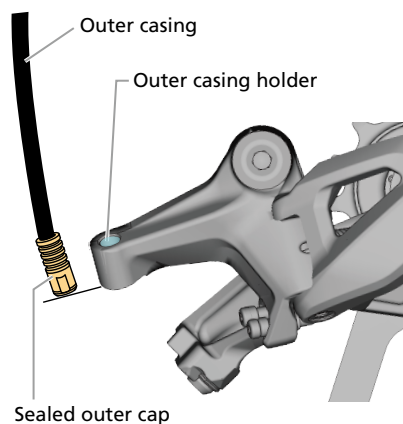


NOTICE

- The length of the outer casing may be insufficient as the rear suspension moves through its travel. Determine the appropriate length at the point in the rear suspension travel where the potential length of the outer casing is the greatest.

TECH TIPS

 - If the motion of the rear derailleur is extreme, such as in bicycles with a rear suspension, replacing the sealed outer cap with the supplied aluminum type sealed outer cap is recommended.




Sealed outer cap

Sealed outer cap
(aluminum type)


3. Cut off any excess outer casing with the cable cutter.

After cutting, return the outside of the outer casing to a perfect circle so that the inside of the hole has a uniform shape.

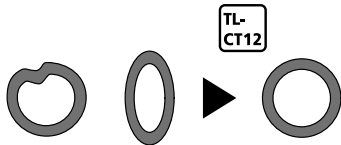

4. Install the sealed outer cap to the end of the outer casing.


Route the inner cable through the outer casing.

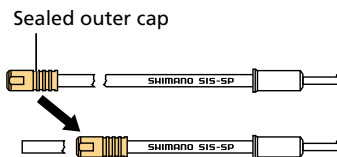

5. Install the sealed outer cap with tongue and rubber shield onto the outer casing stopper of the frame.

For bikes with full-length outer casing, this step is not necessary.

Be careful not to bend the cover with tongue.

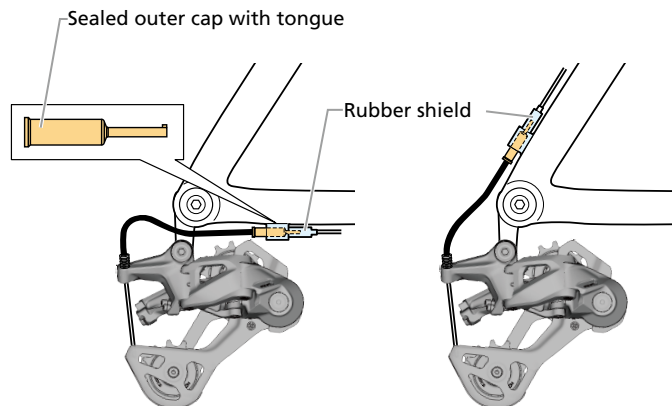

Connection and securing of the inner cable


⚠ CAUTION

- Do not allow the wheel to turn while securing the inner cable and installing the inner end cap. Otherwise, you may touch the wheel and be injured.

1. Set the shifter in its initial position.

Operate the release lever 11 or more times for a 12-speed and 10 or more times for an 11-speed.

2. Secure the inner cable to the rear derailleur.

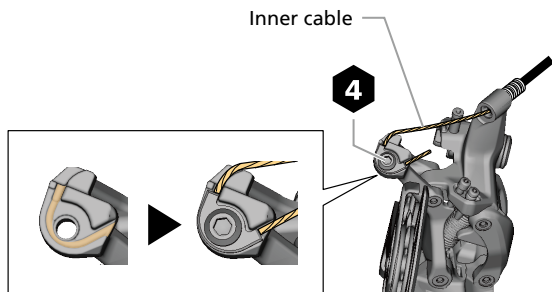

NOTICE

- Cables with a polymer coating may develop a fuzzy appearance or texture through natural wear when used. However, if the cables are installed with care according to the procedures outlined in this manual, this is strictly cosmetic and performance will not be affected where the inner cables are housed by outer casing.

3. Remove the initial slack from the inner cable.


Hold the rear derailleur so that it won't move under load from the shift cable. Operate the shifter several times in order to tension the shift cable assembly and fully seat all the shift cable components.

NOTICE

- Do not apply excessive force when operating the lever. Doing so may damage the lever.

4. Re-secure the inner cable to the rear derailleur.

While pulling the inner cable, be sure that it is securely in the cable fixing groove.

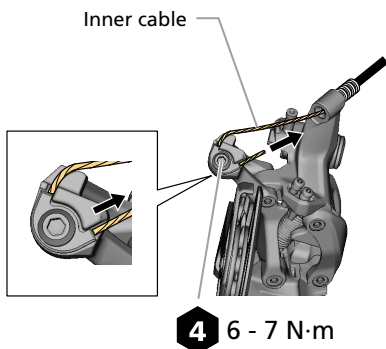


5. Cut the inner cable so that the protruding length is approximately 20 mm.

Install the inner end cap.

Adjustment

Connection and securing of the inner cable

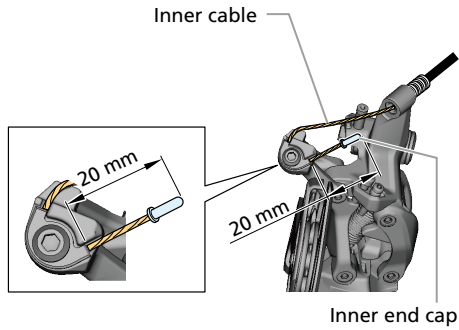

NOTICE

- Check that the inner cable does not interfere with the spokes of the wheel.


Adjusting the stroke on the low limit

NOTICE

- If the B-screw is loose when adjusting the stroke on the low limit, the largest sprocket and chain may interfere. Before adjusting the stroke on the low limit, tighten the B-screw to some extent to open a gap between the largest sprocket and guide pulley.


1. Adjust by turning the low limit screw.

Align the center of the guide pulley with the center of the largest sprocket while moving the guide pulley using the shifter, etc.

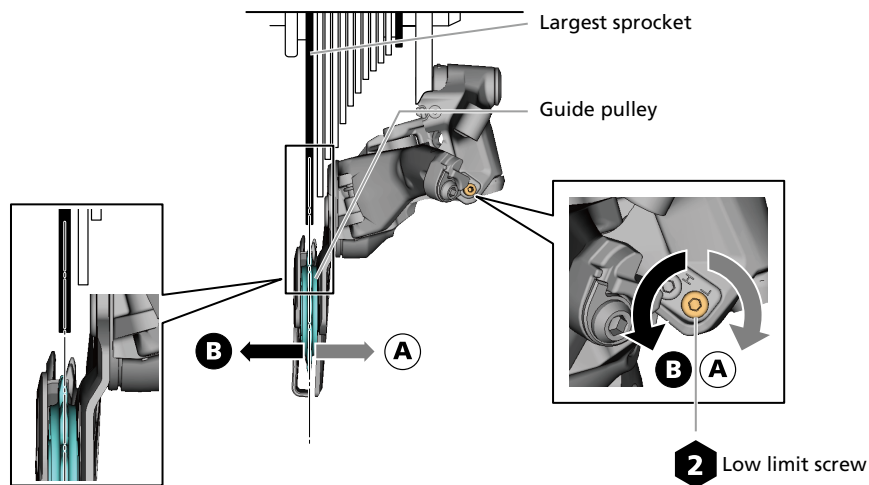

Adjusting the B-screw

1. Turn the crank arm forward and shift the chain to the largest sprocket.

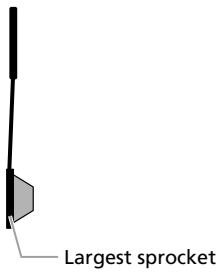


NOTICE

- If there is interference between the sprocket and plate when gear shifting, tighten the B-screw to a position that eliminates the interference.

2. **Adjust the B-screw.**

Align the contour of the outer plate with the tip of the tallest tooth on the largest sprocket.

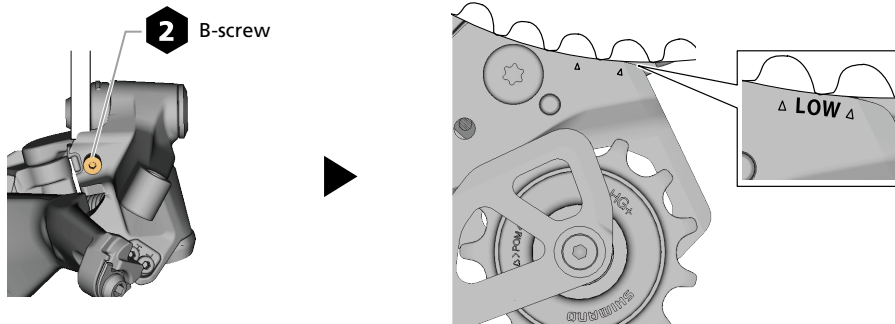

3. Turn the crank arm and shift through all the gears to ensure the shifting is smooth.

NOTICE

- Perform this adjustment again when using a cassette with a different number of teeth.


SIS adjustment

1. Operate the shifter several times to shift the chain to any gear that is five to seven steps from the largest sprocket.


NOTICE

- If the chain rubs against the larger adjacent sprocket and makes noise while turning the crank, turn the cable adjustment barrel clockwise until there is no noise.

2. Turn the cable adjustment barrel counterclockwise while turning the crank until you start to hear the chain rub on the larger sprocket.

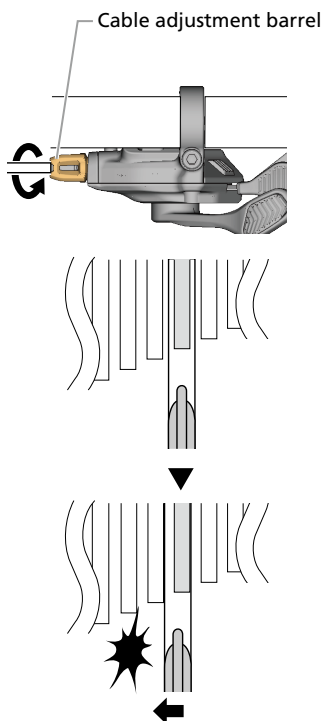

3. Turn the cable adjustment barrel five clicks in the clockwise direction.
This position will serve as the target for adjustment.

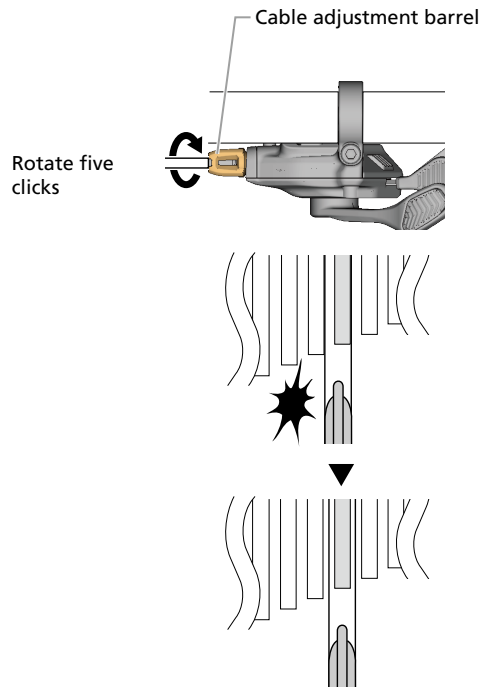

4. **Operate the shifter to change gears while turning the crank, and check that no noise occurs in any of the gear positions.**

If the chain makes noise, readjust from step [1](#).

TECH TIPS


- The rear derailleur will not shift properly if the derailleur hanger is not straight. Use TL-RD11 to check whether the derailleur hanger is straight or not.

Maintenance

Replacing the pulleys


1. Replace the guide pulley/tension pulley.

The pulleys do not have a specific direction of rotation.

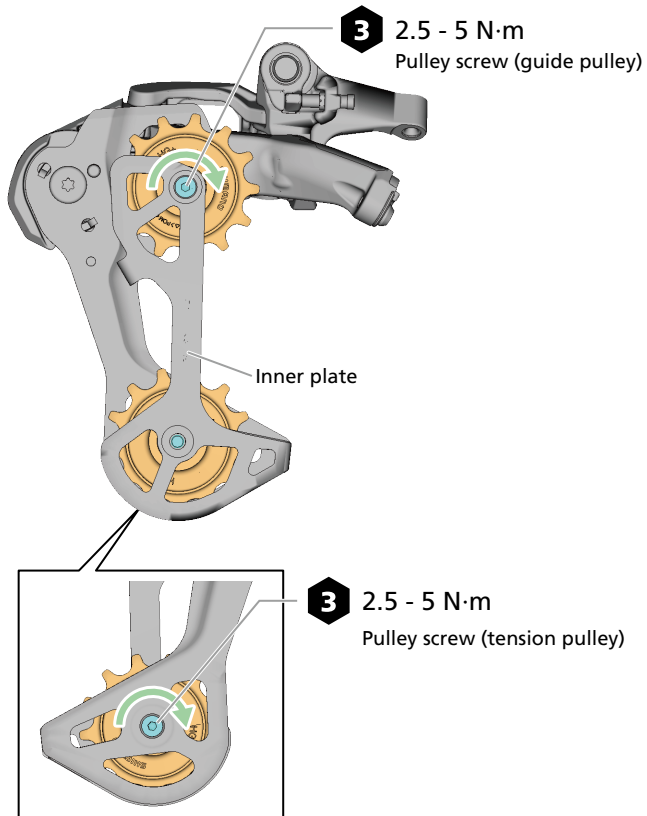

Replacing the B-axle

1. Push the B-axle from the inner side and use a tool such as a slotted screwdriver to widen and remove the snap ring.

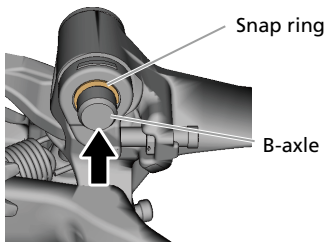

NOTICE


- Take care not to damage the screw thread with the tool such as a slotted screwdriver.

2. Replace the B-axle unit with a new one.

The disassembly can be performed as shown in the figure.

Install the parts in the reverse order that you removed them.

Wipe off the old grease from the B-axle bearing, and apply grease to the side of the B-axle.

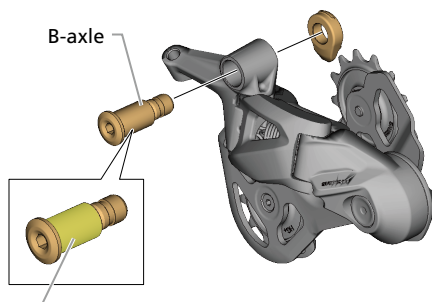

Grease application area
Grease number: Premium Grease(Y04110000)


NOTICE

- Do not apply grease to the threaded portion of the B-axle. If any grease adheres to it, wipe it off.

Removing the plate and replacing the P-tension spring

Removal


1. Remove the plate stopper pin.

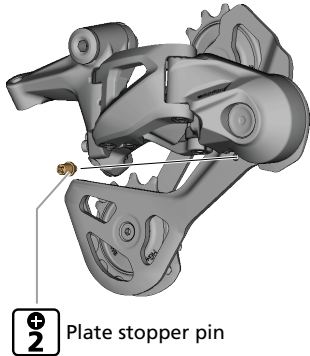

NOTICE


- Hold the plate and rear derailleur body firmly when working, as there is spring force applied to the plate.

2. Turn the plate to loosen the P-tension spring.

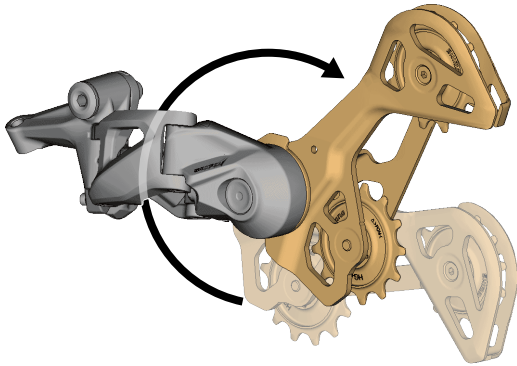


3. Remove the plate axle cap.


When using a tool with a flat end, such as a slotted screwdriver, take care to ensure that you do not damage the plate axle cap.

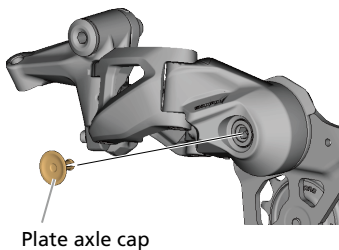

4. Remove the plate axle.

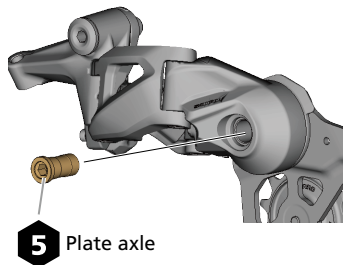


5. Detach the plate.

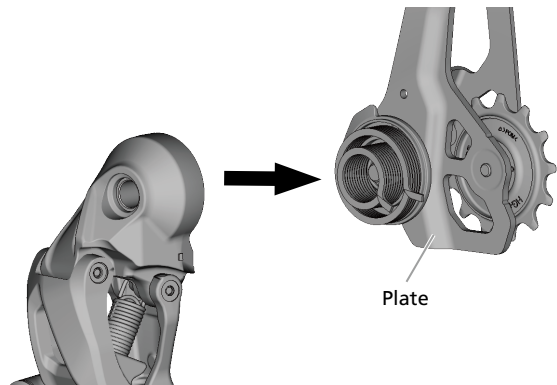


Installation

1. Install the plate bumper.

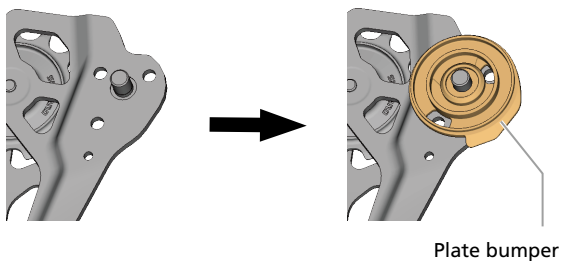


2. Apply special grease to the plate axle screw, center of the plate bumper, and P-tension spring.

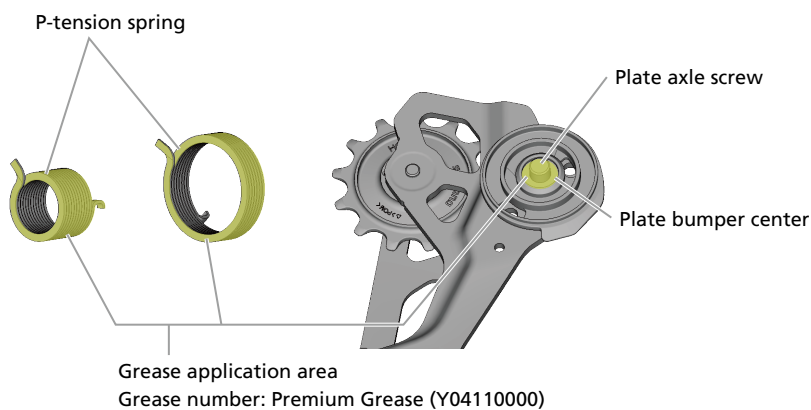


3. Fit the tip of the P-tension springs in the hole of the plate and insert the plate into the derailer body.
When performing insertion, confirm that the P-tension springs are inserted into the groove on the main

body side.

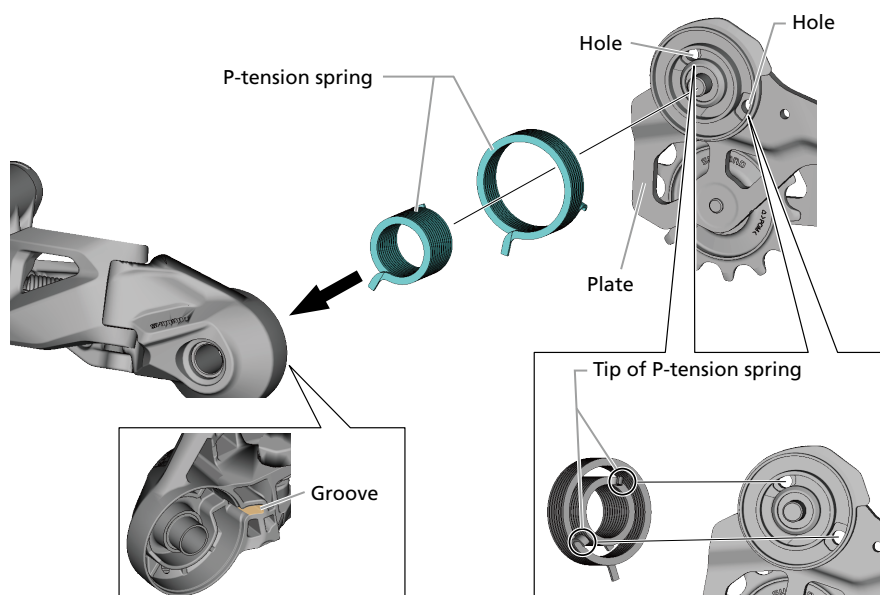


TECH TIPS

- The tip sticking out to the side when viewing the P-tension springs from above comes to the derailleur body side.

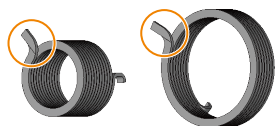


4. Install the plate axle.

Apply grease to the side of the plate axle.

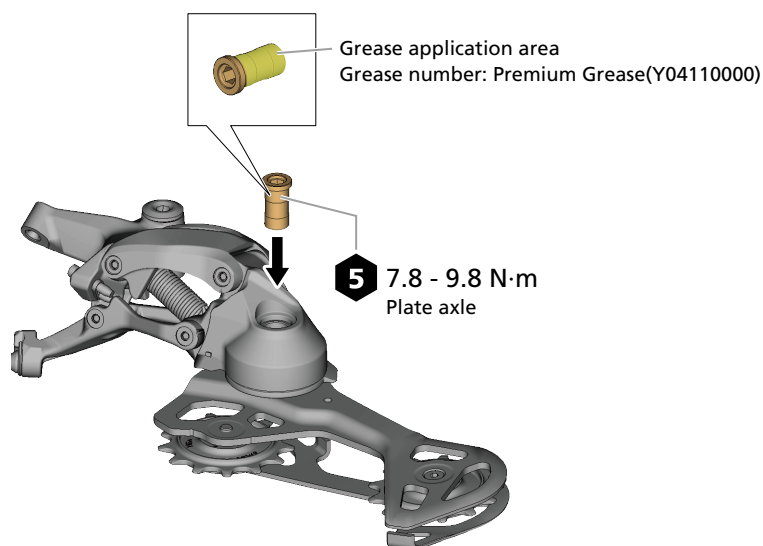


5. Twist the plate and install the plate stopper pin.

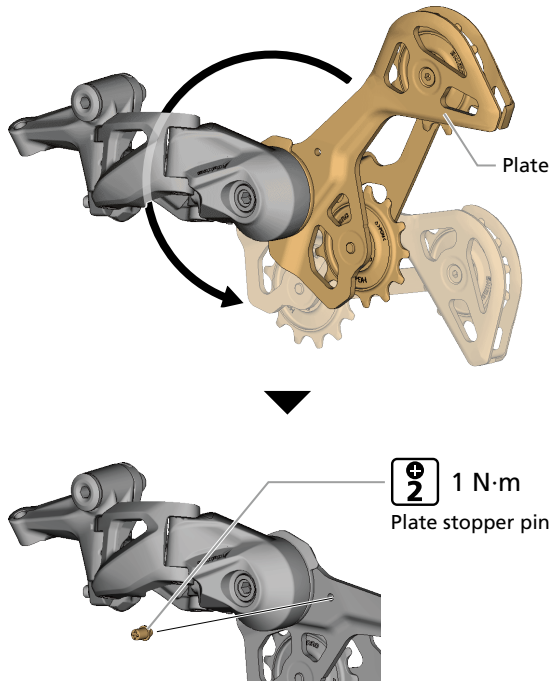

NOTICE

- Hold the plate and rear derailleur body firmly when working, as there will be spring force applied to the plate.

6. Install the plate axle cap.

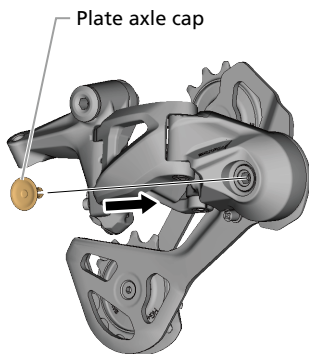

SHIMANO

SHIMANO NORTH AMERICA BICYCLE, INC.
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.
High Tech Campus 92, 5656 AG Eindhoven, The Netherlands Phone: +31-402-612222
Only EU General Contact : contactshimano@shimano-eu.com

SHIMANO INC.
3-77 Oimatsu-cho, Sakai-ku, Sakai City, Osaka 590-8577, Japan