A WARNING

 Obtain, read and carefully service instructions when installing parts. A loose, worn, or damaged parts may cause injury to the rider. We strongly recommend that only genuine Shimano replacement parts be used.

SERVICE INSTRUCTIONS SI-16S0A

FC-7710

Front Chainwheel

Bottom Bracket

Before use, read these instructions carefully, and follow them for correct use.

Product specifications

Front Chainwheel

Model number	FC-7710
Bolt circle diameter	144 mm
Crank length	165 mm, 167.5 mm, 170 mm, 172.5 mm, 175 mm
Pedal threads	B.C. 9/16" x 20 T.P.I. (English thread)
Chain size	1/2" x 1/8", 1/2" x 3/32"

Bottom Bracket

Model number	BB-7710
Spindle length	109.5 mm
Chain line	42.5 mm
Thread dimensions	68 mm (B.C. 1.37 x 24 T.P.I.)

Note

- Use the applicable chain and bottom bracket mentioned above.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- For any questions regarding methods of handling or maintenance, please contact the place of purchase.

SHIMANO®

SHIMANO AMERICAN CORPORATIONOne Holland Irvine CA 92618 U.S.A. Phone 949-951-5003

SHIMANO EUROPA

SHIMANO EUROPA Industrieweg 24 NL-8071 CT Nunspeet Holland Phone 31-341-272222

SHIMANO INC. 77 Oimatsu-cho 3-cho Sakai Osaka 590-8577 Japan Phone 0722-23-3243 These service instructions are printed on recycled paper and can be recycled again

Please note: specifications are subject to change for improvement without notice. (English)

© Sep. 2024 by SHIMANO INC. ITP


Installation of the front chainwheel

- Place the crank arm onto the bottom bracket spindle so that it meshes with the serrations on the spindle.
- 2. Install the washer and fixing bolt and tighten the fixing bolt.

Tightening torque: 35 - 50 Nm {305 - 435 in. lbs.}

3. Lastly, attach the cap.

Tightening torque: 5 - 7 Nm {44 - 60 in. lbs.}

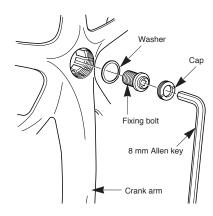


- The crank arm can be removed simply by turning the fixing bolt counterclockwise.
- Apply grease to the reverse side of the cap and to the contact surface of the fixing bolt.

Installation of the Bottom Bracket

 Use the special tool (TL-UN74-S) to install the bottom bracket. First install the main body, then the adapter.

> Adapter/bottom bracket tightening torque: 50 - 70 Nm {435 - 608 in. lbs.}

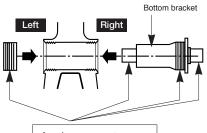

Apply grease to the bottom bracket before installing it.