# FH-A416

Freehub

Before use, read these instructions carefully, and follow them for correct use.

# **Product specifications**

#### Freehub

FH-A416
8
32 / 36
130 mm

## Cassette sprocket

Mo	del No.	CS-HG50-8
Sprocket tooth configuration		
S	12T - 21T #	12T, 13T, 14T, 15T, 16T, 17T, 19T, 21T
Т	13T - 23T	13T, 14T, 15T, 16T, 17T, 19T, 21T, 23T
U	12T - 23T	12T, 13T, 14T, 15T, 17T, 19T, 21T, 23T
٧	13T - 26T	13T, 14T, 15T, 17T, 19T, 21T, 23T, 26T
W	12T - 25T	12T, 13T, 15T, 17T, 19T, 21T, 23T, 25T

### NOTE

\* Always be sure to use the sprocket set bearing the same group marks. Never use in combination with a sprocket bearing a different group mark.




## Installation of the sprockets

For each sprocket, the surface that has the group mark should face outward and be positioned so that the triangle (A) mark on each sprocket and the A part (where the groove width is wide) of the freewheel body are aligned.



 For installation of the sprockets. use the special tool (TL-HG16) to tighten the lock ring.



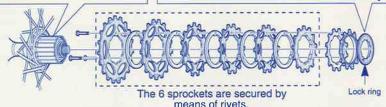

# Replacement of the freewheel body

After removing the hub axle, remove the freewheel body fixing bolt (inside the freewheel body), and then replace the freewheel body.

#### Note:

Do not attempt to disassemble the freewheel body, because it may result in a malfunction.

> Tightening torque: 35 - 50 Nm (305 - 434 in. lbs.)



© Apr. 1999 by Shimano Inc. XBC SZK Printed in Japan

#### SHIMANO EUROPA

Industrieweg 24 NL-8071 CT Nunspeet, Holland Phone 31-3412-72222 3-77 Oimatsucho, Sakai, Osaka, Japan Phone 0722-23-3243 Please note: specifications are subject to change for improvement without notice. (English)

These service instructions are printed on recycled paper and can be recycled again



