


# General Safety Information

## WARNING

- Obtain and read the service instructions carefully prior to installing the parts. Loose, worn, or damaged parts may cause injury to the rider. We strongly recommend only using genuine Shimano replacement parts.
- Be careful not to let the cuffs of your clothes get caught in the chain while riding, otherwise you may fall off the bicycle.
- Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

## Note

- If gear shifting operations cannot be carried out smoothly, clean the derailleur and lubricate all moving parts.
- If the amount of looseness in the links is so great that adjustment is not possible, you should replace the derailleur.
- When the chain is in the position shown in the illustration, the chain may contact the front chainrings or front derailleur and generate noise. If the noise is a problem, shift the chain onto the next-larger rear sprocket or the one after.
- For smooth operation, use the specified outer casing and the bottom bracket cable guide.
- Grease the inner cable and the inside of the outer casing before use to ensure that they slide properly.
- For the chain, be sure to use only the Shimano super-narrow type of chain. The wide type of chain cannot be used.
- Parts are not guaranteed against natural wear or deterioration resulting from normal use.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- For any questions regarding methods of installation, adjustment, maintenance or operation, please contact a professional bicycle dealer.

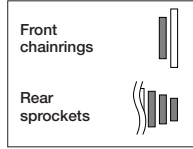

# Technical Service Instructions

SI-5K70A

## FD-4500

Front derailleur

In order to realize the best performance, we recommend that the following combination be used.


Series	TIAGRA
Shifting lever	ST-4500
Outer casing	SP41
Gears	18
Front derailleur	FD-4500
Front chainwheel	FC-4500
Rear derailleur	RD-4500
Freehub	FH-4500
Cassette sprocket	CS-HG50-9
Chain	CN-HG53
Bottom bracket cable guide	SM-SP17

## Specifications

Type	Band type / Brazed on type
Front derailleur installation band diameter	S (28.6mm), M (31.8mm), L (34.9mm)
Front chainwheel tooth difference	15 teeth or less
Chainstay angle (α)	61° - 66°
Chain line	43.5mm


## Installation of the front derailleur

- Adjust so that the clearance between the chain guide outer plate and the large gear is 1 - 3 mm before installing.

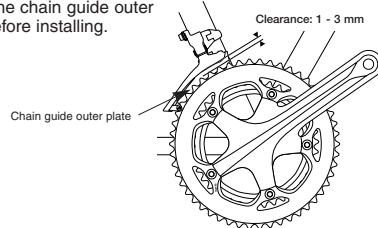

- The level section of the chain guide outer plate should be directly above and parallel to the largest chainring.

- Secure using a 5mm Allen key.

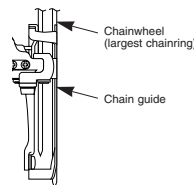

Tightening torque:  
5 - 7 N·m  
{44 - 60 in. lbs.}

These service instructions are printed on recycled paper.

# SHIMANO

SHIMANO AMERICAN CORPORATION  
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.  
Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222


 
SHIMANO INC.  
3-77 Oimatsu-cho Sakai-ku, Sakai, Osaka 590-8577, Japan

Please note: specifications are subject to change for improvement without notice. (English)  
© Mar. 2006 by Shimano Inc. XBC SZK Printed in Japan.

## SIS adjustment


### 1. Low adjustment

Set so that the clearance between the chain guide inner plate and the chain is 0 - 0.5 mm.

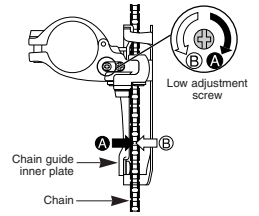


### 2. Connection and securing of cable

While pulling the inner cable, tighten the wire fixing bolt with a 5 mm allen key to secure the cable.

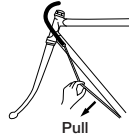



Tightening torque:  
5 - 7 N·m {44 - 60 in. lbs.}

After taking up the initial slack in the cable, re-secure to the front derailleur as shown in the illustration.

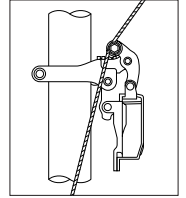



### 3. Top adjustment

 Set so that the clearance between the chain guide outer plate and the chain is 0 - 0.5 mm.

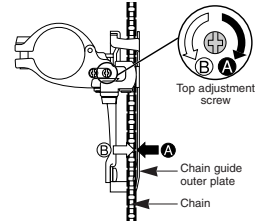

### 4. Adjustment of the cable tension

 - When making the cable adjustment, place the chain on the largest sprocket at the rear; and at the front, shift the chain to the inner chainring and then set it back onto the outer chainring.

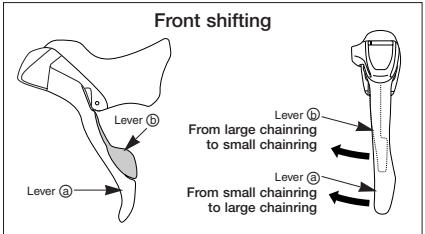


- Perform the trimming. (ST-4500)

■ Trimming (noise-prevention mechanism)  
Gently press the lever (b).  
(A "click" sound will be heard.)

While turning the crank arm, gently operate lever (b) and check that the front derailleur moves slightly toward the small chainring. If the front derailleur moves by a large amount and the chain is set onto the small chainring at this time, loosen the top adjustment bolt by 1/8th of a turn. Then, after returning the chain to its original position, adjust and check the trimming mechanism.



#### Note:

 There are two derailleur positions for the outer chainring. Make sure the derailleur is in the inner side of the two positions.



Shift the derailleur from the inner chainring (L) to the outer chainring (T), then gently press the small lever (b) until a small click is felt. (trim function).

 - After trimming, adjust the clearance (by using the cable-adjustment bolt) of the chain and chain guide to the minimum (0 - 0.5 mm).

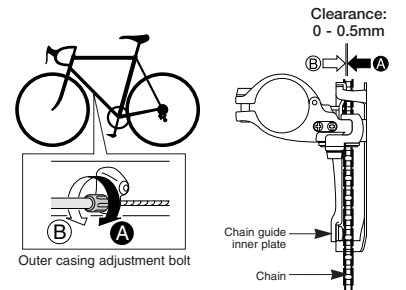

### 5. Troubleshooting chart

After completion of steps 1 - 4, move the shifting lever to check the shifting. (This also applies if shifting becomes difficult during use.)

If the chain falls to the crank side	Tighten the top adjustment screw clockwise (about 1/4 turn).
If shifting is difficult from the small chainring to the large chainring	Loosen the top adjustment screw counterclockwise (about 1/8 turn).
If shifting is difficult from the large chainring to the small chainring	Loosen the low adjustment screw counterclockwise (about 1/8 turn).
If the chain falls to the bottom bracket side.	Tighten the low adjustment screw clockwise (about 1/8 turn).
If the gear shifting to the small chainring is stiff and difficult to carry out after trimming.	Turn the outer casing adjustment bolt clockwise (1/8 of a turn at a time) until shifting to the small chainring becomes smooth. Be careful not to turn the outer casing adjustment bolt too far at this time, otherwise shifting to the large chainring will become more difficult.

Be sure to read these service instructions in conjunction with the service instructions for the ST-4500 before use.