

 
WARNING

- Use neutral detergent to clean the chain. Do not use alkali-based or acid based detergent such as rust cleaners as it may result in damage and/or failure of the chain.
- Use the reinforced connecting pin only for connecting the narrow type of chain.
- There are two different types of reinforced connecting pin available. Be sure to check the table below before selecting which pin to use. If connecting pins other than reinforced connecting pins are used, or if a reinforced connecting pin or tool which is not suitable for the type of chain is used, sufficient connection force may not be obtained, which could cause the chain to break or fall off.

Chain	Reinforced connecting pin	Chain tool
9-speed super narrow chain such as CN-7700 / CN-HG92	 6.5mm Silver	TL-CN31/TL-CN22
Chaîne étroite à 9/7/6 vitesses comme CN-HG50 / CN-IG51	 7.1mm Black	TL-CN31/TL-CN22 and TL-CN30/TL-CN21

- If it is necessary to adjust the length of the chain due to a change in the number of sprocket teeth, make the cut at some other place than the place where the chain has been joined using a reinforced connecting pin or an end pin. The chain will be damaged if it is cut at a place where it has been joined with a reinforced connecting pin or an end pin.

- Obtain, read and carefully service instructions when installing parts. A loose, worn, or damaged parts may cause injury to the rider. We strongly recommend that only genuine Shimano replacement parts be used.



SERVICE INSTRUCTIONS

SI-F870A

Front Drive System

Before use, read these instructions carefully, and follow them for correct use.

In order to realize the best performance, we recommend that the following combination be used.

Series	NEXAVE
Shifting lever	SL-C900-L
Outer casing	SP40
Front derailleur	FD-C900
Front chainwheel	FC-C900
Bottom bracket	BB-C900
Chain	CN-HG92

Specifications


Front Derailleur	
Model number	FD-C900
Bottom bracket	BB-C900
Normal type	○
Top route type	○
Front chainwheel tooth difference	12T
Chainstay angle (α)	63° - 66° / 66° - 69°
Applicable chain line	52.5mm

Chainwheel	
Model number	FC-C900
Chainwheel tooth combination	46T - 34T
Bolt circle diameter	112 mm
Crank arm length (mm)	170 mm, 175 mm
Pedal thread dimensions	BC 9/16" X 20 T.P.I.

Bottom Bracket	
Model number	BB-C900
Front derailleur	FD-C900
Spindle length	121 mm
Chain line	52.5 mm
Thread dimensions	BC1.37" X 24 T.P.I. (68 mm)

Note


- Apply grease to the bottom bracket before installing it.
- For smooth operation, use the specified SIS-SP outer casing.
- When installing the top route type, choose a frame that has three outer casing holders as shown in the illustration at right.
- Use an outer casing which still has some length to spare even when the handlebars are turned all the way to both sides. Furthermore, check that the shifting lever does not touch the bicycle frame when the handlebars are turned all the way.
- Grease the inner cable and the inside of the outer casing before use to ensure that they slide properly.
- Operation of the levers related to gear shifting should be made only when the front chainwheel is turning.
- When installing the front chainwheel, check that the cam on the bracket of the front derailleur is not raised. If it is raised, press one of the buttons (L or H) to lower the cam.

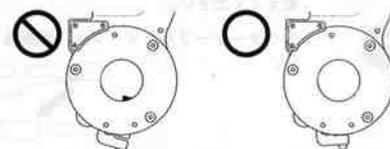

- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- For any questions regarding methods of installation, adjustment, maintenance or operation, please contact a professional bicycle dealer.

Installation of the Front Derailleur, Bottom Bracket and Front Chainwheel


Install using the TL-UN74-S special tool. First install the main body, then the adapter. After this, use an 8 mm Allen key to install the front chainwheel.

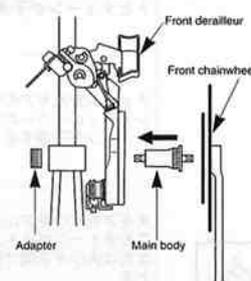

Adapter / bottom bracket tightening torque: 50 - 70 Nm (435 - 608 in. lbs.)
Front chainwheel tightening torque: 35 - 50 Nm (305 - 435 in. lbs.)

Chain length

Add 2 links (with the chain on both the largest sprocket and the largest chainring)

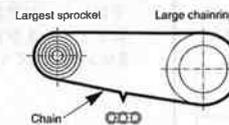


Installation of the lever

Use a handlebar grip with a maximum outer diameter of 32 mm.

Install the brake lever in a position where it will not obstruct brake operation. Do not use in a combination which causes brake operation to be obstructed.

Allen key tightening torque: 5 Nm (44 in. lbs.)

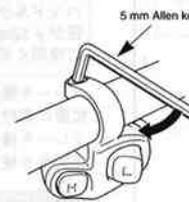


SIS adjustment

Be sure to follow the sequence described below.

1. Top adjustment

Set so that the clearance between the chain guide inner plate and the chain is 0-0.5 mm inner plate and the chain is 0-0.5 mm.

 Chain position





2. Connection and securing the inner cable



Press the H button to set the lever to the initial position.

While pulling the inner cable, tighten the wire fixing bolt with a 5 mm allen key to secure the cable.

Pass the cable through as shown in the illustration.

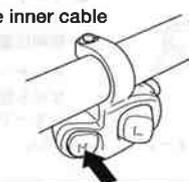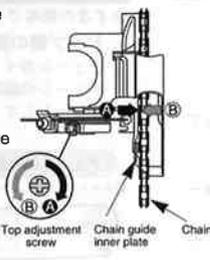

Tightening torque: 5 - 7 Nm (44 - 60 in. lbs.)

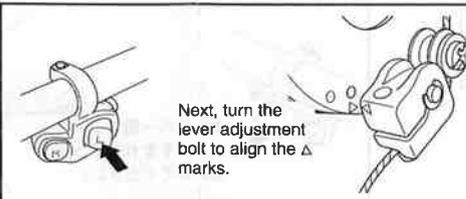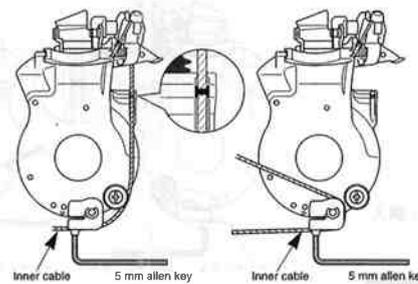


Next, turn the lever adjustment bolt to align the Δ marks.

Gear shifting operation

When operating one of the buttons, always be sure to turn the crank arm at the same time.


To shift from a small chainring to a larger chainring
When button (H) is pressed once, there is a shift of one step from a small chainring to a larger chainring.

Example:
from small chainring to large chainring.

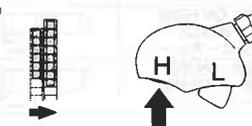

To shift from a large chainring to a smaller chainring
When button (L) is pressed once, there is a shift of one step from a large chainring to a smaller chainring.

Example:
from large chainring to small chainring.

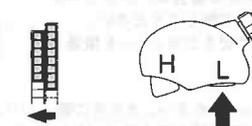


After taking up the initial slack in the cable, re-secure to the front derailleur as shown in the illustration.

Normal type



Top route type

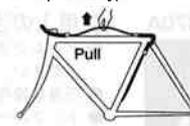

Inserting the inner cable

Insert the inner cable into the outer casing from the end with the marking on it. Apply grease from the end with the marking in order to maintain cable operating efficiency.

 


Cutting the outer casing

When cutting the outer casing, cut the opposite end to the end with the marking. After cutting the outer casing, make the end round so that the inside of the hole has a uniform diameter.



Attach the same outer end cap to the cut end of the outer casing.



3. Troubleshooting chart


After completion of steps 1 - 2, move the shifting lever to check the shifting. (This also applies if shifting becomes difficult during use.)

If shifting from the small chainring to the large chainring is difficult	Tighten the adjustment bolt by turning it about 1/2 a turn clockwise.
If shifting from the large chainring to the small chainring is difficult	Loosen the adjustment bolt by turning it about 1/2 a turn counterclockwise.
If the chain is on the large chainring and the front derailleur inner plate is obstructing the chain	Set the chain onto the large chainring and the largest sprocket, and then turn the adjustment bolt counterclockwise to adjust the clearance between the chain guide inner plate and the chain to 0-0.5 mm.
If the chain is on the large chainring and the front derailleur outer plate is obstructing the chain	Set the chain onto the large chainring and the smallest sprocket, and then turn the adjustment bolt clockwise to adjust the clearance between the chain guide inner plate and the chain to 0-0.5 mm.
If the chain guide does not move when shifting from the large chainring to the small chainring, or it moves to a position in between the chainrings	With the SL-C900 set to the Low position, turn the outer adjustment bolt on the SL-C900 counterclockwise so that the triangular marks on the bracket and the reel unit are aligned.
If the chain guide does not move when shifting from the small chainring to the large chainring, or it moves to a position in between the chainrings	With the SL-C900 set to the Low position, turn the outer adjustment bolt on the SL-C900 clockwise so that the triangular marks on the bracket and the reel unit are aligned.

Replacing the inner cable

Taking out the inner cable

- Press button L fully to lift up the inner end.
- Press button H fully and pull out the inner cable.

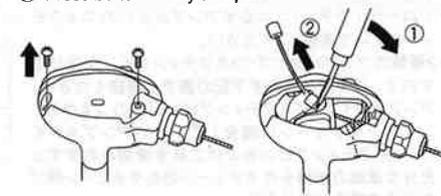

Installing the inner cable

- Press button H fully and insert the inner cable part of the way in.
- Press button L fully and pass the end of the inner cable through the hole in the adjustment bolt and pull it out the other side.




Replacement of the left link cable

- Operate the shifting lever to set the front derailleur to the low position, and fully loosen the top adjusting bolt. Then remove the front chainwheel.

- Remove the plastic cover from the front derailleur.



- Loosen the cable fixing bolt on the left link, and then remove the cable.

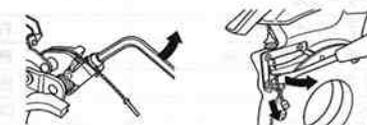

- Install the new cable, and provisionally secure it to the left link. (See illustration.)



- Install the plastic cover, and then install the front chainwheel.

- Operate the shifting levers to set the chain onto the largest chainring and the largest sprocket, and then adjust so that the gap between the chain guide inner plate and the chain is 0-0.5 mm.

- Tighten the cable fixing bolt on the left link.

Tightening torque: 5 - 7 Nm (44 - 60 in. lbs.)

This service instruction explains how to use and maintain the Shimano bicycle parts which have been used on your new bicycle. For any questions regarding your bicycle or other matters which are not related to Shimano parts, please contact the place of purchase or the bicycle manufacturer.

SHIMANO®

SHIMANO AMERICAN CORPORATION

One Howard Irvine CA 92618 U.S.A. Phone 949-951-5003

SHIMANO EUROPA

Industrieweg 24 NL-8071 CT Huusveldt Holland Phone 31-541-272222

SHIMANO INC.

77 Oomasa-cho 3-cho Sakai Osaka 590-8577 Japan Phone 072-233-2473

Please note: specifications are subject to change for improvement without notice. (English)

© Jun. 2000 by Shimano Inc. XBC SZK Printed in Japan