

SERVICE INSTRUCTION

For proper and safe performance, read and follow these instructions carefully.

Shifting Lever **SL-BS50**



■ Specifications

- Type: with SIS/friction-selection mechanism (for 7-speed or 6-speed use)
- Installation position: bar end
- Material: light alloy
- Weight: 183g

■ Note

- For Shimano Index System (SIS) use, the following combination of components must be used.


	7-speed	6-speed
Shifting lever	SL-BS50	SL-BS50 (with the 6-speed adaptor)
Rear derailleur	RD-6400 / RD-1051	RD-6400 / RD-1050
Freehub/ cassette sprocket	FH-6400-7 / FH-1051-7 CS-6400-7	FH-6400-6 / FH-1051-6 CS-6400-6
Chain	UG chain (narrow type)	UG chain
Outer cable	Shimano SIS-SP cable	

- The SL-BS50 cannot be used in combination with the RD-7401 rear derailleur.
- For SIS use, the wire efficiency for the inner cable incorporated handlebar is not good, and so it cannot be used.
- The SL-BS50 can be installed to a handlebar with an inner diameter of from 19 to 22mm.

Lever installation

(The illustration shows the example for installation of the lever for the rear to a drop handlebar, but the lever for the front is installed in the same manner.)

- 1 Set the body unit to the handlebar, and then tighten the body fixing bolt in the counterclockwise direction by using a 6mm hexagonal wrench.

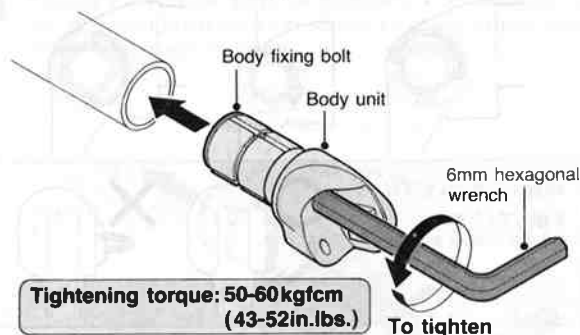


• Please note: Specifications are subject to change for improvement without notice. (English)

SHIMANO AMERICAN CORPORATION
One Shimano Drive, Irvine, California U.S.A. 92718 Tel. (714) 951-5003
SHIMANO (EUROPA) GmbH.
Kleinhülsen 1-3 4010 Hilden, West Germany Tel. 02103-5005-0


- 2 Install the lever boss to the body unit.




- 3 Set so that the projection of the lever boss cover faces downward.

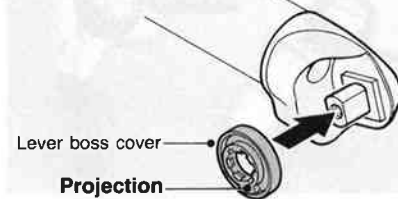

- 4 Align the ▼ SIS letters and the red ▲, and then set so that the grip part of the lever unit faces downward.

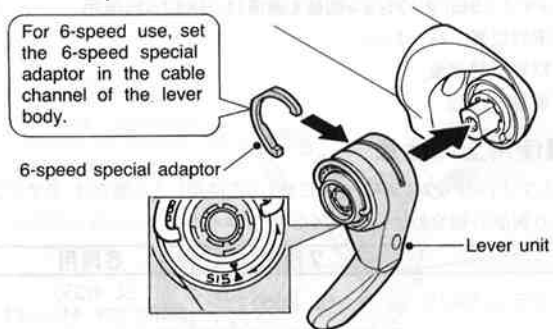


- 5 Tighten the lever fixing bolt by using a flat-tip screwdriver.

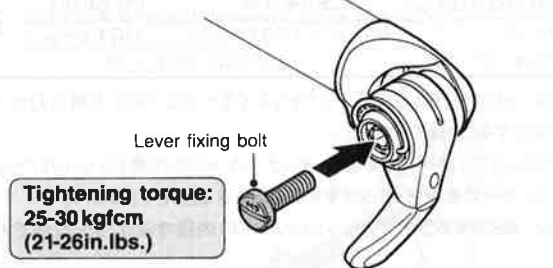


SIS operation

Turn the ring to select either SIS or friction. Turn the ring until the red ▲ of the ring is correctly aligned with the SIS ▼ mark.

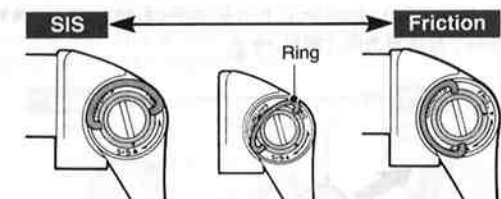

After making a selection, be sure to fold the ring downward.

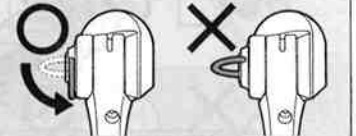

SHIMANO (SINGAPORE) PTE. LTD.
No. 20, Benoi Sector, Jurong Town, Singapore 2262 Tel. 2654777
SHIMANO INDUSTRIAL CO., LTD.
3-77 Oimatsucho, Sakai, Osaka, Japan Tel. (0722) 23-3243

© Sep. 1988 by Shimano S-1 PIT. SZK. Printed in Japan