

## General Safety Information

**⚠ WARNING** – To avoid serious injuries:

Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

**NOTE:**

Parts are not guaranteed against natural wear or deterioration resulting from normal use.

SI-SP41B-001


# SIS-SP41

Outer Casing

## Technical Service Instructions



### Installation of the outer cap

Use the cable cutter (TL-CT10/CT11) to cut the SIS-SP41 outer casing.

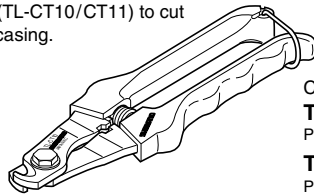


Cable cutter  
**TL-CT10**  
Part No. Y098 00010  
**TL-CT11**  
Part No. Y098 98000

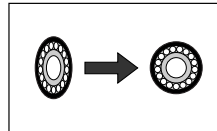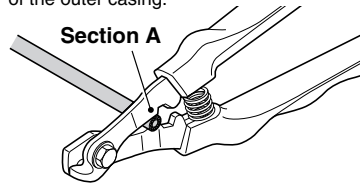

1. Use the cable cutter to cut the outer casing to the necessary length.
2. After cutting, use the section A of the cable cutter to correct the distortion of the outer casing.

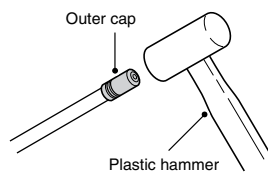

3. Insert the outer casing into the outer cap (sold separately) until it is securely touching the inside end of the outer cap.



 
 
Outer cap (6 mm in diameter),  
sold separately

 Normal type  
Part No. Y6ZA 98010  
 Sealed type  
Part No. Y6Z2 98010

**If the outer cap is not securely installed to the outer casing, the SIS might not operate properly.**

**Normal outer cap**

**Sealed outer cap**



These service instructions are printed on recycled paper.  
Please note: Specifications are subject to change for improvement without notice. (English)

**SHIMANO AMERICAN CORPORATION**  
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

**SHIMANO EUROPE B.V.**  
Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

**SHIMANO INC.**  
3-77 Oimatsu-cho, Sakai-ku, Sakai, Osaka 590-8577, Japan

© Sep. 2007 by Shimano Inc. PIT. SZK. Printed in Japan