


**FH-5001
FH-6401
FH-1055
FH-A550**

Freehubs

Notes

- Always be sure to use the HG (Hyper Glide) sprocket set bearing the same group marking. Never use in combination with a sprocket bearing a different group marking.
- Freehubs (FH-5001, FH-6401, FH-1055, FH-A550) for the HG sprockets can also be used with the former UG sprockets (CS-6400, CS-1000), but never use the HG sprockets and UG sprockets in combination.
- For the HG sprockets, be sure to use a hyper glide compatible narrow type UG chain.

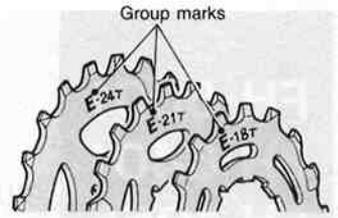


For proper and safe performance, read and follow these instructions carefully.

Installation of the HG sprocket


For each sprocket, the surface that has the group mark should face outward and positioned so that the triangle (▲) mark on each sprocket and the A part (where the groove width is wide) of the freewheel are aligned.

The groove width is wide at one place only.

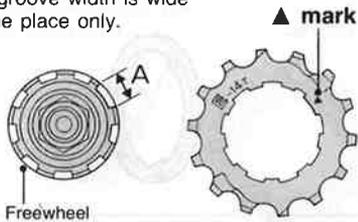


Sprocket spacers D (color: grey / t=3.1mm)

※ The three projections of sprocket spacers D should face toward the low side, and be aligned with the sprocket fixing bolts.

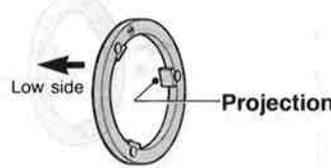

Sprocket spacer C (color: black / t=3.3mm)

※ The three holes of sprocket spacer C should be aligned with the sprocket fixing bolts.

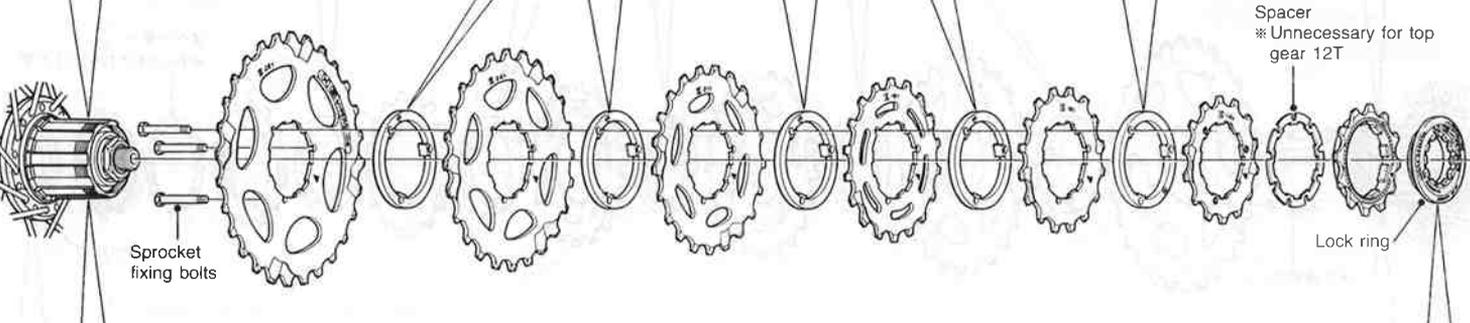


Spacer
※ Unnecessary for top gear 12T

Lock ring

Replacement of the freewheel

After removing the hub axle, remove the freewheel mechanism fixing bolt (within the freewheel mechanism), and then replace the freewheel mechanism.

Note: Do not attempt to disassemble the freewheel mechanism, because it may result in a malfunction.

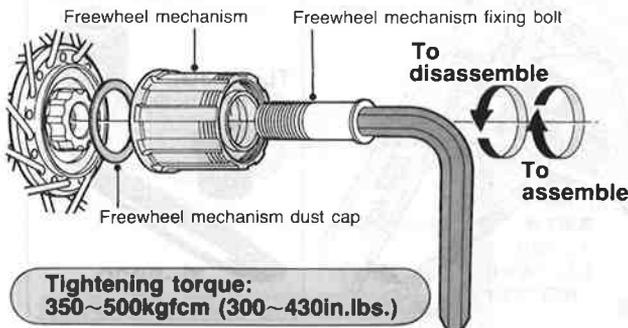


TL-WR37
Hexagonal Wrench (10mm)

- For installation of the HG sprocket, use the special tool (TL-HG15) to tighten the lock ring.

Tightening torque: 300~500kgfcm(260~430in.lbs.)

- To replace the HG sprocket, use the special tool (TL-HG15) and TL-SR20 to remove the lock ring.

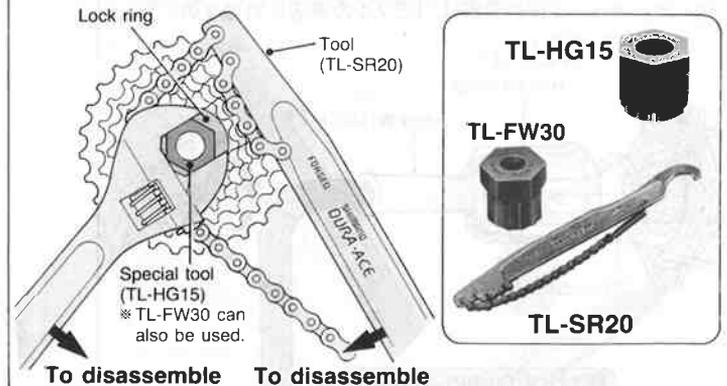

• Please note: Specifications are subject to change for improvement without notice. (English)

SHIMANO AMERICAN CORPORATION
One Shimano Drive, Irvine, California U.S.A. 92718 Tel. (714) 951-5003
SHIMANO (EUROPA) GmbH.
Kleinhülsen 1-3 4010 Hilden, West Germany Tel. 02103-5005-0
SHIMANO (SINGAPORE) PTE. LTD.
No. 20, Benoi Sector, Jurong Town, Singapore 2262 Tel. 2654777
SHIMANO INDUSTRIAL CO., LTD.
3-77 Oimatsucho, Sakai, Osaka, Japan Tel. (0722) 23-3243