



Electric Wires / Electric Wire Covers / Junctions / Grommets

IMPORTANT NOTICE

- Contact the place of purchase or a distributor for information on installation, adjustment, and replacement of the products which are not found in the user's manual. A dealer's manual for professional and experienced bicycle mechanics is available on our website (<https://si.shimano.com>).

For safety, be sure to read this "user's manual" thoroughly before use, follow it for correct use, and store it so that it can be referenced at any time.

The following instructions must be observed at all times in order to prevent personal injury and physical damage to equipment and surroundings. The instructions are classified according to the degree of danger or damage which may occur if the product is used incorrectly.

DANGER	Failure to follow the instructions will result in death or serious injury.
WARNING	Failure to follow the instructions could result in death or serious injury.
CAUTION	Failure to follow the instructions could cause personal injury or physical damage to equipment and surroundings.

Important safety information

WARNING

- Do not disassemble or modify the product. This may cause the product to not operate correctly, and you may suddenly fall and be seriously injured.
- **Do not touch the front derailleur when operating the shift switch. Doing so may result in injury due to trapped fingers.**

Notice

- Do not keep connecting and disconnecting the small waterproof connector. It may impair the function.
- The components are designed to be fully waterproofed to withstand wet weather riding conditions; however, do not deliberately place them into water.
- Do not clean the bicycle with a high-pressure washer. If water gets into any of the components, operating problems or rusting may result.
- Handle the components carefully, and avoid subjecting them to strong shock.
- Contact the place of purchase for updates of the component software. The most up-to-date information is available on the SHIMANO website.

- Do not use thinner or other solvents to clean the products. Such solvents may damage the surface.
- Be careful not to get water into the E-TUBE ports.
- Store in a safe place out of the reach of small children to avoid letting them swallow by mistake.
- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend SHIMANO lubricants and maintenance products.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Regular inspections before riding the bicycle

Before riding the bicycle, check the following items. If any problems are found, consult your place of purchase or a distributor.

- Is there sufficient charge remaining in the battery?
- Is there any noticeable damage to the electric wires?


Names of parts

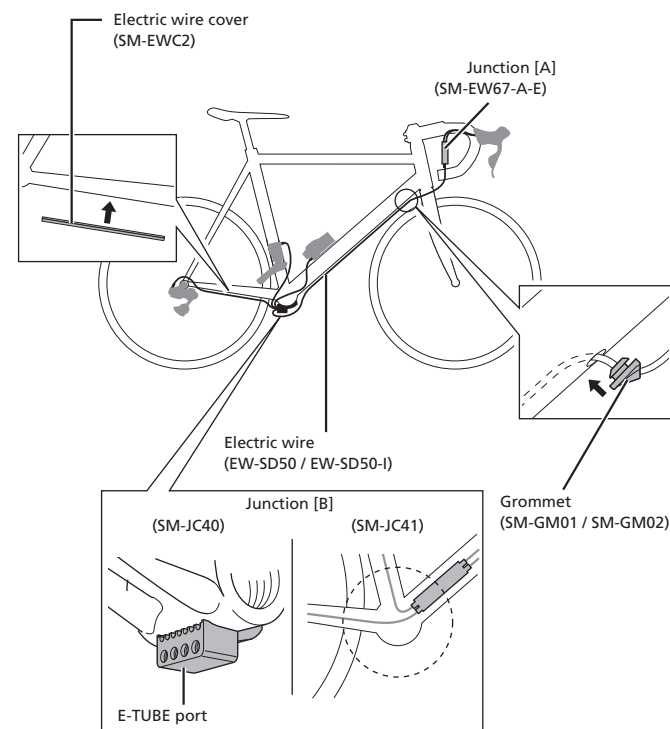

Battery level indicator function

Press and hold the shift switch for 0.5 seconds or more. You can check the battery

level with the battery indicator of junction [A].

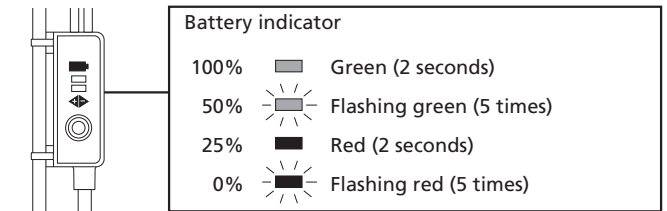


- * When the battery level is low, the front derailleur stops operating first, then the rear derailleur. When the battery is completely drained, the derailleurs are fixed at the last gear position. It is recommended to charge the battery as soon as possible when the battery indicator lights red.

Protection function

- * Rotate the front chainwheel while restoring operation after the protection function has activated.

In order to protect the system when the bicycle falls and is subjected to a strong impact, the protection function will activate and momentarily sever the connection between the motor and the link, impairing the proper function of the rear derailleur. When this happens, hold down the rear derailleur adjustment button on the junction [A] of SM-EW67-A-E for 5 seconds or more. This will restore the connection between the motor and the link, and clear the protection function for the rear derailleur. If it is not restored, operate the cage manually. Check that the connection is restored by operating the shift switch.

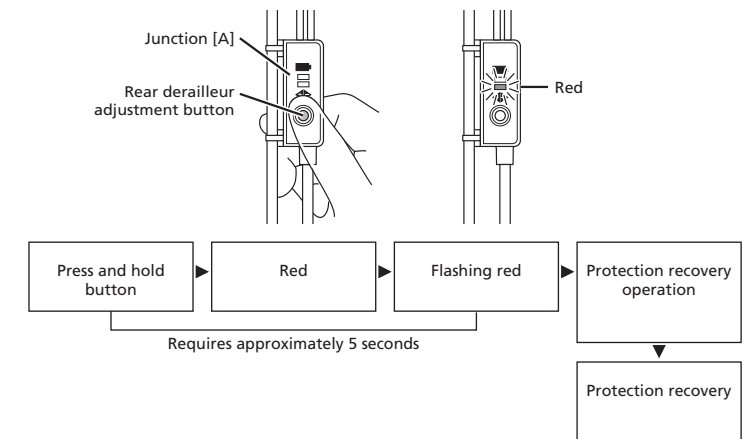

When the red LED of junction [A] is lit, the rear derailleur will not shift. Press the rear derailleur adjustment button until the red LED turns off.

SHIMANO



SHIMANO NORTH AMERICA BICYCLE, INC.
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.
High Tech Campus 92, 5656 AG Eindhoven, The Netherlands Phone: +31-402-612222

MADISON (A DIVISION OF H.YOUNG (OPERATIONS) LTD)
Roebuck Way, Knowlhill, Milton Keynes, Buckinghamshire, MK5 8HL, United Kingdom

SHIMANO INC.
3-77 Oimatsu-cho, Sakai-ku, Sakai City, Osaka 590-8577, Japan