

QUICK-LINK



Technical Service Instructions in further languages are available at : <http://si.shimano.com>

Important Safety Information

For replacement information, contact the place of purchase or a bicycle dealer.

WARNING

Do not reuse a QUICK-LINK that has been removed. If the QUICK-LINK is reused, there is a risk that it will loosen and become detached, which may result in an accident.

"Maintenance interval depends on the usage and riding circumstances. Clean the chain and QUICK-LINK regularly with an appropriate chain cleaner. Never use alkali based or acid based solvents such as rust cleaners. If any of these are used, the chain or QUICK-LINK might break resulting in serious injury."

- Check the chain and QUICK-LINK for any damage (deformations or cracks), chain skipping, or other abnormalities such as unintended gear shifting. If any problems are found, consult a dealer or an agency. There is a risk of the chain breaking or the QUICK-LINK disengaging, which may cause the bicycle to collapse.
- When replacing the chain with a new one, be sure to also replace the QUICK-LINK with a new one. If you do not replace it, the QUICK-LINK may break and you may fall.
- When attaching the QUICK-LINK, make sure that the pins on the link plates are pushed all the way in and securely planted in the link holes.
- Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

Note


- You should periodically wash the chainrings/sprockets in a neutral detergent and then lubricate them again. In addition, cleaning the chain and QUICK-LINK with a neutral detergent and lubricating it can be an effective way of extending its useful life.
- Shimano original tool is required to remove the QUICK-LINK. Consult a dealer or an agency.
- When using a QUICK-LINK, be sure to install it so that the arrow on the surface faces in the direction of rotation of the crank.
- SM-CN900-11 is compatible with all 11-speed chains.
- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.

Regular inspections before riding the bicycle

Before riding the bicycle, check the following items. If any problems are found with the following items, contact the place of purchase or a bicycle dealer.


- Is the chain or QUICK-LINK deformed or cracked?
- Does any chain skipping or unintended gear shifting occur?
- Is the arrow facing in the direction of rotation of the crank when viewed from the front?

Names of parts

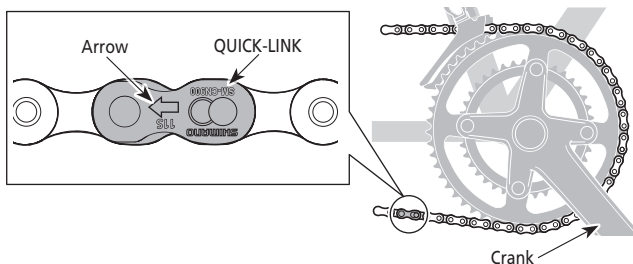


Installing a QUICK-LINK


1. Insert the pins of the QUICK-LINK into the spaces in the inner link from both sides as shown in the illustration.

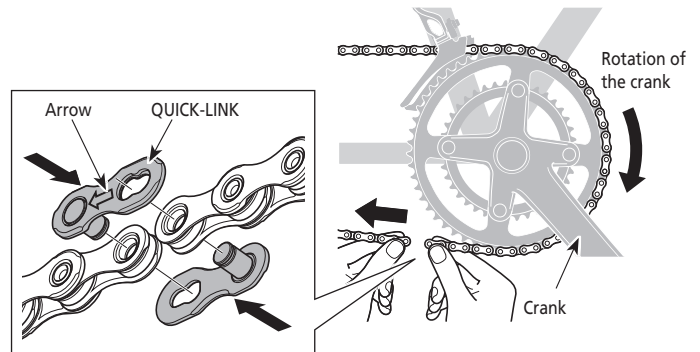

2. Use Shimano original tool TL-CN10 to slide the pins and insert them firmly.

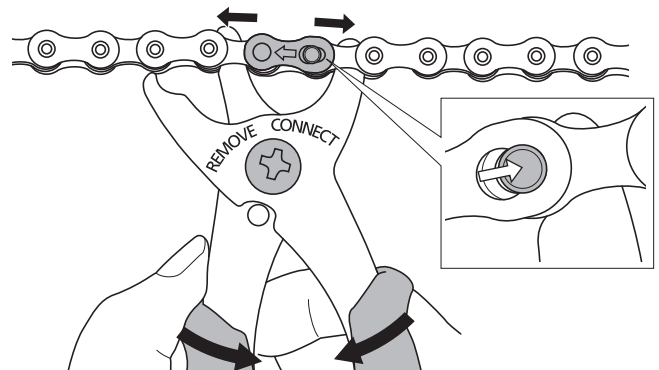


Check that both QUICK-LINK plates are firmly fastened in position as shown in the illustration.

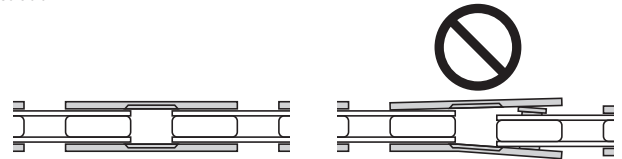

Removing a QUICK-LINK

Set Shimano original tool TL-CN10 as shown in the illustration, slide the pins and remove the QUICK-LINK.

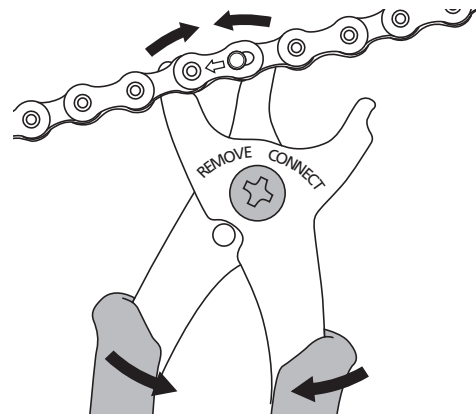

SHIMANO

SHIMANO AMERICAN CORPORATION

One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.

High Tech Campus 92, 5656 AG Eindhoven, The Netherlands Phone: +31-402-612222

SHIMANO INC.

3-77 Oimatsu-cho, Sakai-ku, Sakai-shi, Osaka 590-8577, Japan

Please note: specifications are subject to change for improvement without notice. (English)
© May 2017 by Shimano Inc. ITP