

# Dual Control Lever (DI2) For Hydraulic Disc Brake



User's manuals in other languages are available at :  
<http://si.shimano.com>

## IMPORTANT NOTICE

- Contact the place of purchase or a bicycle dealer for information on installation and adjustment of the products which are not found in the user's manual. A dealer's manual for professional and experienced bicycle mechanics is available on our website (<http://si.shimano.com>).
- Do not disassemble or alter this product.


**For safety, be sure to read this user's manual thoroughly before use, and follow them for correct use.**

## Important Safety Information

For replacement information, contact the place of purchase or a bicycle dealer.

### WARNING

- When the shifting switch is operated, the motor which drives the front derailleur will operate to the shifting position without stopping, so be careful not to get your fingers caught.
- This hydraulic brake system has different braking characteristics from those of the rim brake type. Familiarize yourself sufficiently with the braking characteristics before use. If you ride the bicycle without becoming sufficiently familiar with the braking characteristics, braking may cause you to fall off the bicycle, potentially causing serious injury or a fatal accident.
- Do not use 203 mm and 180 mm disc brake rotors. The braking force increases excessively and goes out of control.
- The 160 mm disc brake rotors provide a higher braking force than the 140 mm disc brake rotors. Make sure that you have a complete feel for the braking characteristics before using the brakes.
- Please use extra caution to keep your fingers away from the rotating disc brake rotor. The disc brake rotor is sharp enough to inflict severe injury to your fingers if caught within the openings of moving rotor.
- The calipers and disc brake rotor will become hot when the brakes are operated, so do not touch them while riding or immediately after dismounting from the bicycle, otherwise you may get burned.
- Be careful not to allow any oil or grease to get onto the disc brake rotor and brake pads, otherwise the brakes may not work correctly.
- If any oil or grease does get on the pads, you should consult a dealer or an agency. There is the danger that the brakes may not work correctly.
- If noise occurs during brake operation, the pads may have been worn down to the usable limit. Check that the brake system temperature has been cooled down sufficiently, and then check that the thickness of each pad is 0.5 mm or more. Or, consult a dealer or an agency.

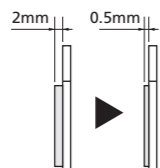

- If the disc brake rotor is cracked or deformed, immediately stop using the brakes and consult a dealer or an agency.
- If the disc brake rotor becomes worn down to a thickness of 1.5 mm, immediately stop using the brakes and consult a dealer or an agency. The disc brake rotor may break, and you may fall off the bicycle. For an Ice-Technologies rotor, if the aluminum surface becomes visible, immediately stop using the brakes as well.
- Vapor lock may occur if the brakes are applied continuously. To relieve this condition, momentarily release the lever.

Vapor lock is a phenomenon in which the oil inside the brake system becomes heated, which causes any water or air bubbles inside the brake system to expand. This can then result in a sudden increase in the brake lever stroke.

- The disc brake is not designed to work with the bicycle upside down. If the bicycle is turned upside down or on its side, the brake may not work correctly, and a serious accident could occur. Before riding the bicycle, be sure to operate the brake lever a few times to check that the brakes operate normally. If the brakes do not operate normally, stop using the brakes and consult a dealer or an agency.
- If you feel no resistance when depressing the brake lever, immediately stop using the brakes and consult a dealer or an agency.
- If fluid leaks occur, immediately stop using the brakes and consult a dealer or an agency.
- It is important to completely understand the operation of your bicycle's brake system. Improper use of your bicycle's brake system may result in a loss of control or a fall, which could lead to severe injury. Because each bicycle may handle differently, be sure to learn the proper braking technique (including brake lever pressure and bicycle control characteristics) and operation of your bicycle. This can be done by consulting your professional bicycle dealer and the bicycle's owners manual, and by practicing your riding and braking technique.
- If the front brake is applied too strongly, the wheel may lock and the bicycle may fall forward, and serious injury may result.
- Always make sure that the front and rear brakes are working correctly before you ride the bicycle.
- The required braking distance will be longer during wet weather. Reduce your speed and apply the brakes early and gently.
- If the road surface is wet, the tires will skid more easily. If the tires skid, you may fall off the bicycle. To avoid this, reduce your speed and apply the brakes early and gently.
- After reading the user's manual carefully, keep it in a safe place for later reference.

### CAUTION

#### ■ Cautions on the mineral oil

- Contact with eyes may result in irritation. In the event of eye contact, flush with fresh water and seek medical assistance immediately.
- Contact with skin may cause a rash and discomfort. In the event of skin contact, wash well with soap and water.
- Inhalation of mineral oil mist or vapors may cause nausea. Cover nose and mouth with a respirator type mask and use in a well ventilated area. If mineral oil mist or vapor is inhaled, go immediately to an area with fresh air. Cover up with a blanket. Stay warm and stable and seek professional medical advice.

#### ■ Burn-in period

- Disc brakes have a burn-in period, and the braking force will gradually increase as the burn-in period progresses. Make sure that you are aware of any such increases in braking force when using the brakes during the burn-in period. The same thing will happen when the brake pads or disc brake rotor are replaced.

## Note:


- Be sure to rotate the crank when carrying out any switch operations which are related to gear shifting.
- A software update with the E-TUBE PROJECT used after connecting to the wireless unit (SM-EWW01/EW-WU101/EW-WU111) enables the remote switch to operate. For details, consult the place of purchase.
- The components are designed to be fully waterproofed to withstand wet weather riding conditions; however, do not deliberately place them into water.
- Do not clean the bicycle in a high-pressure car wash. If water gets into any of the components, operating problems or rusting may result.
- Handle the products carefully, and avoid subjecting them to any strong shocks.
- Be careful not to let water get into the terminal.
- Do not use thinners or similar substances to clean the products. Such substances may damage the surfaces.
- When the bicycle wheel has been removed, it is recommended that pad spacers should be installed. Do not depress the brake lever while the wheel is removed. If the brake lever is depressed without the pad spacers installed, the pistons will protrude further than is normal. If that happens, consult a dealer.
- Use soapy water or a dry cloth when carrying out cleaning and maintenance of the brake system. Do not use commercially-available brake cleansers or silencing agents, as they can cause damage to parts such as seals.
- Contact the place of purchase for updates of the product software. The most up-to-date information is available on the Shimano website.
- Also read the manuals for the brake and other equipment to be connected.
- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.

## Regular inspections before riding the bicycle

Before riding the bicycle, check the following items. If any problems are found with the following items, contact the place of purchase or a bicycle dealer.

- Is the brake oil leaking?
- Do the front and rear brakes work correctly?
- Does each pad have a thickness of 0.5 mm or more?
- Is the disc brake rotor cracked or deformed?
- Does gear shifting occur when the shifting switches are operated?
- Are the levers securely installed to the handlebar?
- Do any abnormal noises occur during operation?

## Names of parts

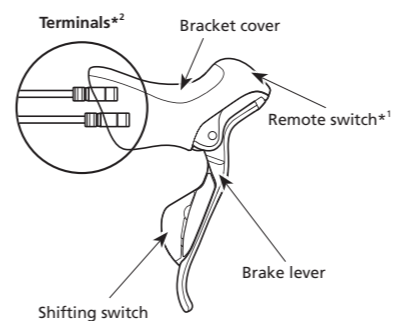

\*1 Depending on the specifications, some models do not have the function.

Pull back the bracket cover of each lever and check whether it is fitted with a remote switch.

\*2 The number of ports in the terminal section varies by model.

## Operation

### Gear shifting operation

Be sure to rotate the crank when carrying out any switch operations which are related to gear shifting.

### Remote switch (initial setting)

The remote switch transmits signals to compatible components via the wireless unit (SM-EWW01/EW-WU101/EW-WU111). Operation and functions differ depending on the compatible component. Refer to the instruction manual for the compatible component in question.


### Rear shifting switch operation (Initial settings)

#### < Shifting switch (X) >

The chain moves from a small rear sprocket to a larger rear sprocket.

#### < Shifting switch (Y) >

The chain moves from a large rear sprocket to a smaller rear sprocket.

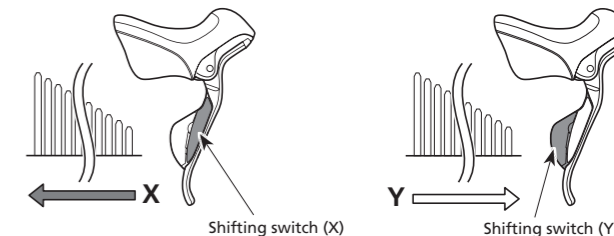


### Front shifting switch operation (Initial settings)

#### < Shifting switch (X) >

The chain moves from the small chainring to the large chainring.

#### < Shifting switch (Y) >

The chain moves from the large chainring to the small chainring.

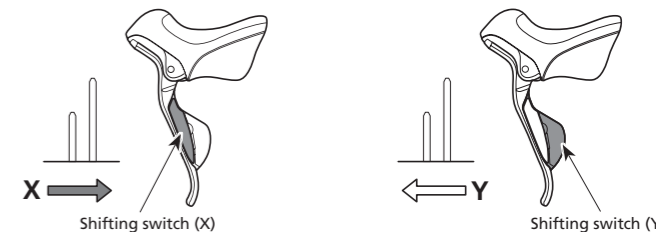

If the chain falls off on the inside, keep pressing shifting switch (X) for 1 second or more to move the front derailleur to the outermost position, and then keep it pressed for 10 seconds in order to reset the chain.

Actual behavior may differ depending on the connected components and software version.


The following changes can be made to the settings of each switch. For further details and setting adjustments, consult the place of purchase.

- Reverse the shifting up and down assignments of the shifting switches (X) and (Y)
- Reverse the rear and front shifting assignments of the shifting switches (right/left)
- Configure Multi shift mode settings
- Set the remote switches to function as shifting switches

### Braking operation

This product is equipped with a reach adjustment function and a Free Stroke adjustment function.

For further details and adjustments, consult the place of purchase.

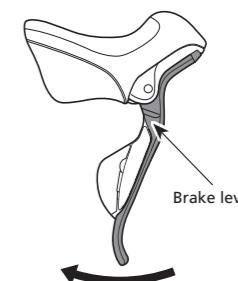

## SHIMANO

SHIMANO AMERICAN CORPORATION  
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.  
Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

SHIMANO INC.  
3-77 Oimatsu-cho, Sakai-ku, Sakai-shi, Osaka 590-8577, Japan

Please note: specifications are subject to change for improvement without notice. (English)  
© Aug. 2016 by Shimano Inc. HTR