


DURA-ACE Dual Control Lever

ST-7700-B

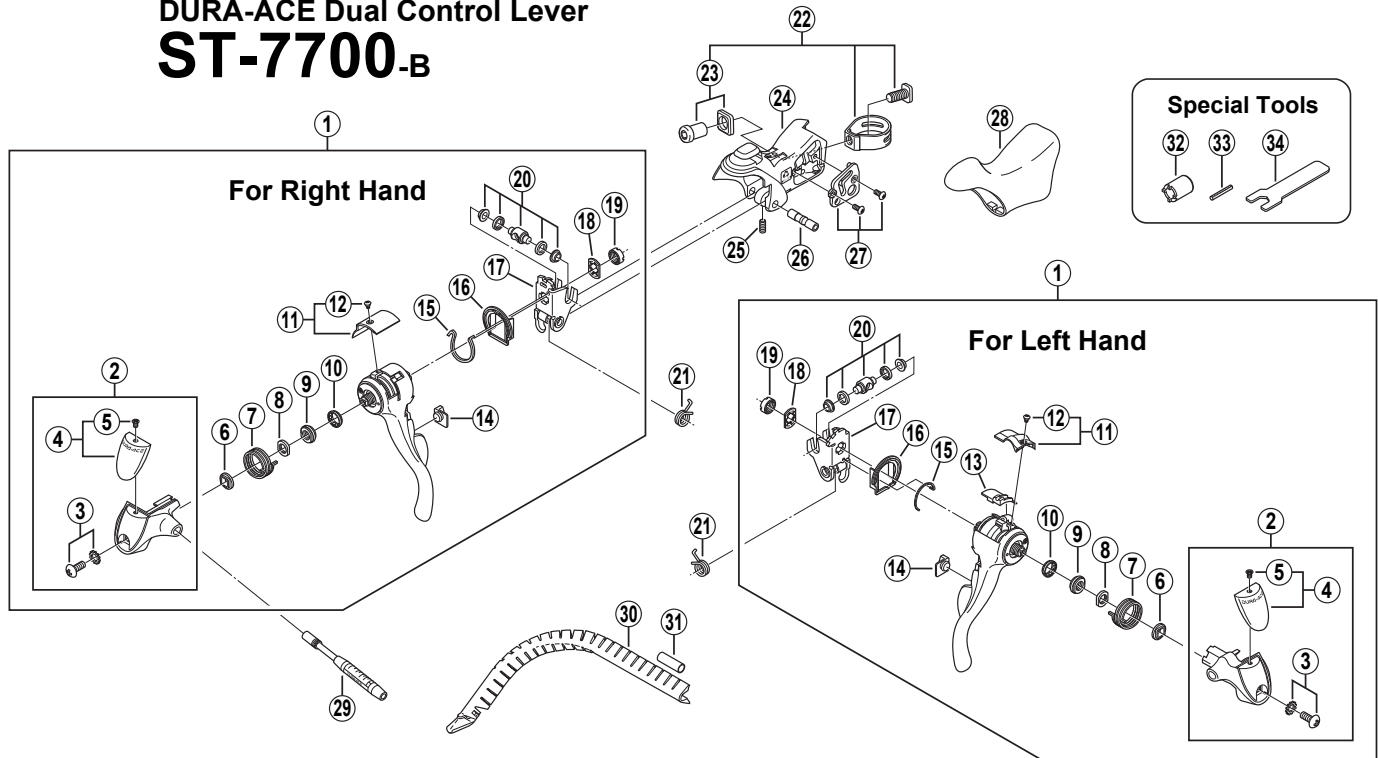

Q'TY	ITEM NO.	SHIMANO CODE NO.	DESCRIPTION
	1	Y-6BD98180	R.H. Main Lever Assembly
		Y-6BD98190	L.H. Main Lever Assembly
	2	Y-6BD98200	R.H. Outer Support Cap Unit
		Y-6BD98210	L.H. Outer Support Cap Unit
	3	Y-6BD98050	Cap Fixing Screw (M4 x 10) & Teethed Washer
	4	Y-6BD98060	Name Plate & Fixing Screw
	5	Y-6BD33000	Name Plate Fixing Screw
	6	Y-6BD37000	Bush for Outer Support Cap
	7	Y-6BD12000	R.H. Return Spring for Main Lever
		Y-6BD60000	L.H. Return Spring for Main Lever
	8	Y-6BD45000	Lock Nut for Cone
	9	Y-6BD48000	Cone
	10	Y-6BD91300	Ball Retainer (1/16" x 12)
	11	Y-6CX98060	R.H. Front Cover & Fixing Screw
		Y-6CX98070	L.H. Front Cover & Fixing Screw
	12	Y-6CX48000	Front Cover Fixing Screw
	13	Y-6BD66000	Cover for L.H. Main Lever
	14	Y-6CX10000	R.H. Release Lever Support Plate
		Y-6CX10010	L.H. Release Lever Support Plate
	15	Y-6BD17000	R.H. Release Plate Return Spring
		Y-67D 38000	L.H. Release Plate Return Spring
	16	Y-6CX19000	R.H. Dust Seal
		Y-6CX64000	L.H. Dust Seal
	17	Y-6CX98080	R.H. Adapter
		Y-6BD90800	L.H. Adapter
	18	Y-6BD39000	Non-Turn Washer
	19	Y-66E 33000	Lock Nut
	20	Y-6BD98110	Cable Hook Unit
	21	Y-6BD75000	R.H. Return Spring
		Y-6BD74000	L.H. Return Spring
	22	Y-6BD98120	Clamp Band Unit (φ23.8 mm - φ24.2 mm)
	23	Y-6BD98130	Clamp Nut & Washer
	24	Y-6BD98220	R.H. Bracket
		Y-6BD98230	L.H. Bracket
	25	Y-6BD76000	Lever Axle Fixing Screw
	26	Y-6BD85000	Lever Axle
	27	Y-6BD98240	R.H. Bracket Cap & Fixing Screws (M3 x 6.35)
		Y-6BD98250	L.H. Bracket Cap & Fixing Screws (M3 x 6.35)
	28	Y-6BD98260	Bracket Covers (Pair)
	29	Y-6BD91400	R.H. Indicator Unit
	30	Y-86B 90010	Outer Cable Guide
	31	Y-877 11000	Outer Cable Joint
	32	Y-130 03000	Lock Nut Removal Tool (TL-ST01)
	33	Y-130 03100	Return Spring Installation Tool (TL-ST02)
	34	Y-6BD00010	Cone Adjusting Spanner