

Brake Lever

# BL-5001

(aero type)

# BL-5002

(aero short type)

# Santé

by SHIMANO



Before use, read these instructions carefully, and follow them for correct use.

Be sure to use the Santé brake lever (BL-5001 or BL-5002) as a set together with the Santé series caliper brake (BR-5000) and the Shimano outer cable casing with liner.

## How to install the brake lever

1. 5-mm Allen key

Clamp bolt tightening torque: 60 – 80 kgfcm (50 – 70 in.lbs.)
2.

Wire hook  
Outer casing  
Inner end
3.

① Insert the joint part.


② Cut the outer guide (optional) to the length of the handlebars.

③ Tape at these places to hold temporarily.


Finally, wrap bar tape around the handlebars lever.

### Checking the outer casing

Check to be sure that the outer casing is securely fitted.

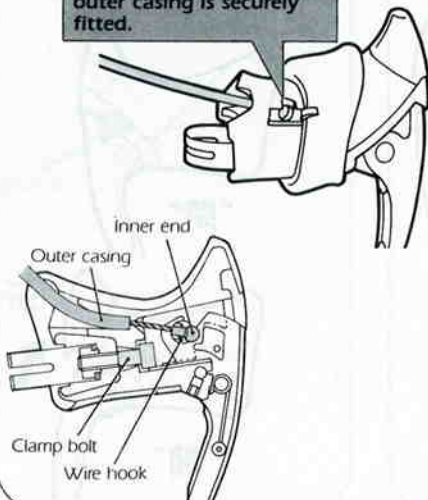

### How to use the quick release button

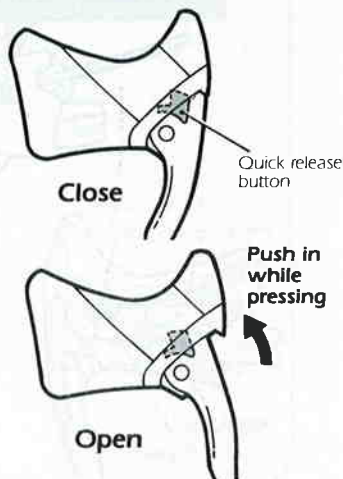

Please note: specifications are subject to change for improvement without notice. (English)



SHIMANO AMERICAN CORPORATION  
One Shimano Drive, Irvine, California U.S.A. 92718 Tel. (714) 951-5003  
SHIMANO (EUROPA) GmbH  
Im Hülsefeld 13 4010 Hilden, West Germany Tel. 02103-5005-0

SHIMANO (SINGAPORE) PTE. LTD.  
No. 20, Benoi Sector, Jurong Town, Singapore 2262 Tel. 2654777  
SHIMANO INDUSTRIAL CO., LTD.  
3-77 Omatsucho, Sakai, Osaka, Japan Tel. (0722) 23-3243