



UM-4RA0A-004-00

User's manual

Cross bike wheel set



User's manuals in other languages are available at :
<http://si.shimano.com>

IMPORTANT NOTICE

- Contact the place of purchase or a bicycle dealer for information on installation and adjustment of the products which are not found in the user's manual. A dealer's manual for professional and experienced bicycle mechanics is available on our website (<http://si.shimano.com>).
- Do not disassemble or alter this product.

For safety, be sure to read this user's manual thoroughly before use, and follow them for correct use.


Important Safety Information

Guidelines that require replacement, contact the place of purchase or a bicycle dealer.

WARNING

- Check that the wheels are fastened securely before riding the bicycle. If the wheels are loose in any way, they may come off the bicycle and serious injury may result.
- This wheel set is designed for recreation. Do not use this wheel set for aggressive uses such as competition. The wheel may break, and you may fall.
- Before use, check the wheels to make sure that there are no bent or loose spokes, dents, scratches or cracks on the rim surface. Do not use the wheel if any of these problems are found. The wheel may break, and you may fall.
- If the quick release mechanism is not used correctly, the wheel may come off the bicycle and serious injury could result. Read the Service Instructions for the quick release mechanism thoroughly before use.

- If the quick release lever is on the same side as the disc brake rotor, there is the danger that it may interfere with the disc brake rotor. Make sure that even if the quick release lever is tightened with your palm with all your strength, the quick release lever does not interfere with the disc brake rotor. If the lever interferes with the disc brake rotor, stop using the wheel and consult a dealer or an agency.

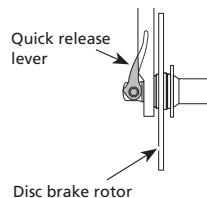

- After reading the user's manual carefully, keep it in a safe place for later reference.

CAUTION

- The tires should be inflated to the pressure indicated on the tires before use.

Note


- Do not apply any oil to the inside of the hub, otherwise the grease will come out.
- We recommend that you ask bicycle dealers to adjust the spoke tensions if there is any initial play in the spokes and after the first 1,000 km of riding.
- Do not use detergent or other chemicals when wiping the wheel, otherwise it may cause the sticker on the rim to peel off.
- Also read the user's manual for the disc brake.
- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.

Regular inspections before riding the bicycle

Before riding the bicycle, check the following items. If any problems are found with the following items, contact the place of purchase or a bicycle dealer.

- Are there any bent or loose spokes?
- Are there any dents, scratches, or cracks on the rim surface?
- Are the wheels fixed?
- Is the brake oil leaking?
- Does each pad have a thickness of 0.5 mm or more?
- Is the disc brake rotor cracked or deformed?
- Do the wheels rotate smoothly?
- Is there any noise from the wheels?

Names of parts

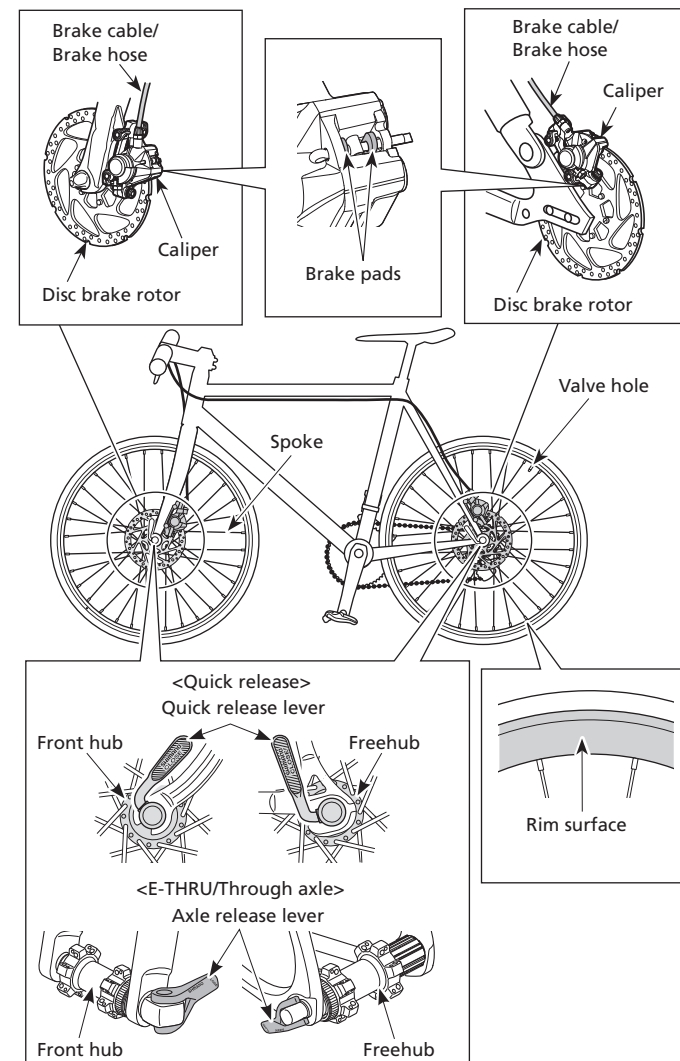

SHIMANO

SHIMANO NORTH AMERICA BICYCLE, INC.

One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.

High Tech Campus 92, 5656 AG Eindhoven, The Netherlands Phone: +31-402-612222

Only EU General Contact : contactshimano@shimano-eu.com

SHIMANO INC.

3-77 Oimatsu-cho, Sakai-ku, Sakai City, Osaka 590-8577, Japan

Please note: specifications are subject to change for improvement without notice. (English)
© Mar. 2025 by SHIMANO INC. ITP