

# Dealer's Manual

ROAD	MTB	Trekking
City Touring/ Comfort Bike	URBAN SPORT	E-BIKE

## Hydraulic Disc Brake

### XTR

BR-M9100  
BR-M9110  
BR-M9120  
BL-M9100  
BL-M9120  
RT-MT900

### SLX

BR-M7100  
BR-M7110  
BR-M7120  
BL-M7100

### DEORE XT

BR-M8100  
BR-M8110  
BR-M8120  
BL-M8100  
BL-T8100  
RT-MT800

---

## Contents

<b>IMPORTANT NOTICE.....</b>	<b>3</b>
<b>TO ENSURE SAFETY.....</b>	<b>4</b>
<b>List of tools to be used .....</b>	<b>12</b>
<b>Installation / removal .....</b>	<b>13</b>
Installing the brake lever.....	13
Installing the disc brake rotor .....	14
Removing the disc brake rotor.....	15
Installing the brake calipers .....	15
Installing the brake caliper (flat mount type).....	25
Installing the brake hose .....	35
<b>Adjustment.....</b>	<b>45</b>
Adjusting the free stroke .....	45
Adjusting the reach .....	47
<b>Maintenance.....</b>	<b>48</b>
Replacing the brake pads .....	48
SHIMANO genuine mineral oil replacement.....	51
Replacing the brake hose .....	60
Caliper piston maintenance .....	64
Replacing the diaphragm .....	66
Designated small parts for magnesium components .....	70




# IMPORTANT NOTICE

- This dealer's manual is intended primarily for use by professional bicycle mechanics.  
Users who are not professionally trained for bicycle assembly should not attempt to install the components themselves using the dealer's manuals.  
If any part of the information on the manual is unclear to you, do not proceed with the installation. Instead, contact your place of purchase or a distributor for assistance.
- Make sure to read all manuals included with each product.
- Do not disassemble or modify the product other than as stated in the information contained in this dealer's manual.
- All manuals and technical documents are accessible online at <https://si.shimano.com> .
- For consumers who do not have easy access to the internet, please contact a SHIMANO distributor or any of the SHIMANO offices to obtain a hardcopy of the user's manual.
- Please observe the appropriate rules and regulations of the country, state or region in which you conduct your business as a dealer.

**For safety, be sure to read this dealer's manual thoroughly before use, and follow it for correct use.**


The following instructions must be observed at all times in order to prevent personal injury and physical damage to equipment and surroundings.

The instructions are classified according to the degree of danger or damage which may occur if the product is used incorrectly.

 <b>DANGER</b>	Failure to follow the instructions will result in death or serious injury.
 <b>WARNING</b>	Failure to follow the instructions could result in death or serious injury.
 <b>CAUTION</b>	Failure to follow the instructions could cause personal injury or physical damage to equipment and surroundings.

# TO ENSURE SAFETY

## **WARNING**


- Be sure to follow the instructions provided in the manuals when installing the product.  
Only use SHIMANO genuine parts. If a component or replacement part is incorrectly assembled or adjusted, it can lead to component failure and cause the rider to lose control and crash.
-  Wear approved eye protection while performing maintenance tasks such as replacing components.

Be sure to also inform users of the following:

- Because each bicycle may handle slightly differently depending on the model, be sure to learn the proper braking technique (including brake lever pressure and bicycle control characteristics) and operation of your bicycle. Improper use of your bicycle's brake system may result in a loss of control or a fall, which may lead to serious injury.
- Riders must become accustomed to the higher performance of this brake before riding the bicycle. The 220 mm, 203 mm, and 180 mm disc brake rotors provide a higher braking force than the 160 mm disc brake rotors. If you ride the bicycle without becoming sufficiently familiar with the braking characteristics, braking may cause you to fall off the bicycle, potentially causing serious injury or a fatal accident.
- Please use extra caution to keep your fingers away from the rotating disc brake rotor. The disc brake rotor is sharp enough to inflict severe injury to your fingers if caught within the openings of moving rotor.



- Do not touch the calipers or disc brake rotor while riding or immediately after dismounting from the bicycle. The calipers and disc brake rotor will become hot when the brakes are operated, so you may get burned if you touch them.
- Do not allow any oil or grease to get onto the disc brake rotor and brake pads. Riding the bicycle with oil or grease on the disc brake rotor and brake pads may prevent the brakes from operating and result in serious injury due to a fall or collision.
- Check the thickness of the brake pads and do not use them if they have a thickness of 0.5 mm or less. Doing so may prevent the brakes from operating and result in serious injury due to a fall or collision.

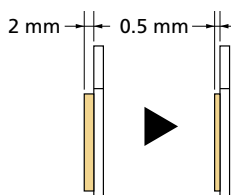

- Do not use the disc brake rotor if it is cracked or deformed. The disc brake rotor may break, and result in serious injury due to a fall or collision. Replace the disc brake rotor with a new one.


## TO ENSURE SAFETY

---

- Do not use the disc brake rotor if its thickness is 1.5 mm or less. Also do not use it if the aluminum surface becomes visible. The disc brake rotor may break, and result in serious injury due to a fall or collision. Replace the disc brake rotor with a new one.
- Do not continuously apply the brakes. Doing so may cause a sudden increase in the brake lever stroke, preventing the brakes from operating and resulting in serious injury due to a fall or collision.
- Do not use the brakes with oil leaking. Doing so may prevent the brakes from operating and result in serious injury due to a fall or collision.
- Do not apply the front brake too strongly. If you do so, the front wheel may lock and the bicycle may fall forward, and serious injury may result.
- Because the required braking distance will be longer during wet weather, reduce your speed and apply the brakes early and gently. You may fall or collide and be seriously injured.
- A wet road surface may cause tires to lose traction; therefore, to avoid this, reduce your speed and apply the brakes early and gently. If the tires lose traction, it may result in serious injury due to a fall or collision.
- If the quick release lever is on the same side as the disc brake rotor, confirm that it does not interfere with the disc brake rotor. Otherwise, the bicycle may fall forward, and serious injury may result.

### For installation to the bicycle and maintenance

- Do not use oil other than SHIMANO genuine mineral oil. Doing so may prevent the brakes from operating and result in serious injury.
- Use only mineral oil from a container that has been stored in a clean and sealed state. Doing otherwise may prevent the brakes from operating and result in serious injury.
- Do not let water or air bubbles get into the brake system. Doing so may prevent the brakes from operating and result in serious injury.
- Do not use with a tandem bicycle. Doing so may prevent the brakes from operating and result in serious injury due to a fall or collision.
- When installing the brake caliper using screw fixing pins, be sure to use fixing screws of the appropriate length. If not, the screw fixing pins may not be securely fastened, and the screws may fall out.

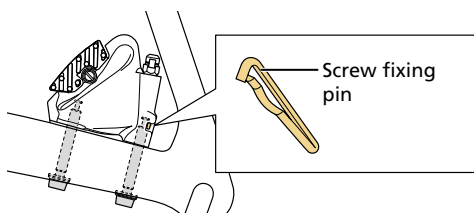

#### ■ Brake hose


- Refer to the table below, and do not use an incorrect connector insert. Doing so may prevent the brakes from

## TO ENSURE SAFETY

operating and result in serious injury due to a fall or collision.

Brake hose	Connector insert	
	Length	Color
SM-BH90	11.2 mm	Silver
SM-BH59 / 80	13.2 mm	Gold
YM-BH81	13.2 mm	Silver

- Do not reuse the olive piece or the connector insert when reinstalling. Doing so may prevent the brakes from operating and result in serious injury due to a fall.

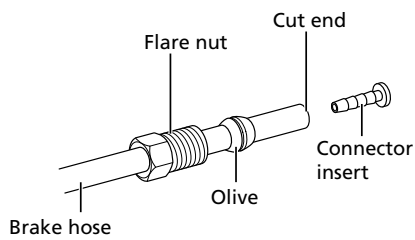

- Cut the brake hose so that the cut end is perpendicular to the length of the hose. If the brake hose is cut at an angle, fluid leaks may result. Fluid leaks may prevent the brakes from operating and result in serious injury due to a fall or collision.



### CAUTION

Be sure to also inform users of the following:

#### ■ Cautions on SHIMANO genuine mineral oil

- Use appropriate eye protection when handling, and avoid contact with eyes. In the event of eye contact, flush with fresh water and seek medical assistance immediately. Contact with skin may cause a rash and discomfort.
- Use gloves when handling. In the event of skin contact, wash well with soapy water. Contact with skin may cause a rash and discomfort.
- Cover nose and mouth with a respirator type mask and use in a well ventilated area. Inhalation of mineral oil mist or vapors may cause nausea.
- If mineral oil mist or vapor is inhaled, go immediately to an area with fresh air. Cover up with a blanket. Stay warm and stable and seek professional medical advice.

#### ■ Bed-in period

- Disc brakes have a bed-in period, and the braking force will gradually increase as the bed-in period progresses. You may lose control of the bicycle, which can result in serious injury due to a fall or collision. The same thing will happen when the brake pads or disc brake rotor are replaced.

For installation to the bicycle and maintenance

- When using the SHIMANO original tool (TL-FC36) to remove and install the disc brake rotor lock ring, wear gloves and be careful not to touch the outer edges of the disc brake rotor with your hands. Failure to do so may result in cuts to your hands.

#### ■ Handling SHIMANO genuine mineral oil

- Do not drink. May cause vomiting or diarrhea.
- Keep out of reach of children.
- Do not cut, let near heat, weld or pressurize the SHIMANO genuine mineral oil container. Doing so may cause an explosion or fire.
- Disposal of used oil: Follow local county and/or state codes for disposal. Use caution when preparing the oil for disposal.
- Directions: Keep the container sealed to prevent foreign objects and moisture from getting inside, and store it in a cool, dark area away from direct sunlight or heat. Keep from heat or flame.

#### ■ Brake hose

- When cutting the brake hose, handle the knife carefully so as not to cause injury.
- Be careful to avoid injury from the olive.



### ■ When using TL-BH62

- When cutting the brake hose, handle the knife carefully so as not to cause injury.
- Be careful to avoid pinching your fingers between the lever and the tool during operations.
- When replacing the knife blade, handle the knife carefully so as not to cause injury.
- If mineral oil adheres to the brake hose, use isopropyl alcohol to clean the hose and remove the oil.
- Keep the tool and the blades out of reach of children.

### **NOTICE**

Be sure to also inform users of the following:

- When the bicycle wheel has been removed, it is recommended that pad spacers are installed. Do not depress the brake lever while the wheel is removed. If the brake lever is depressed without the pad spacers installed, the pistons will protrude further than normal. If that happens, consult a place of purchase.
- Use soapy water and a dry cloth when cleaning and carrying out maintenance of the brake system. Do not use commercially available brake cleaners or silencing agents. Such substances can cause damage to parts such as seals.
- In the case of carbon levers, wash them with a soft cloth using a neutral detergent. Otherwise, the material may be damaged and lose strength.
- Avoid leaving the carbon levers in areas of high temperature. Also keep them well away from fire.
- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend SHIMANO lubricants and maintenance products.

For installation to the bicycle and maintenance















- The 220 mm, 203 mm, and 180 mm disc brake rotors have a larger diameter than the 160 mm disc brake rotor for cross-country bicycles, and so the warping of these disc brake rotors is greater. As a result, they may interfere with the performance of the brake pads.
- If the brake caliper mounting boss and the dropout are not parallel, the disc brake rotor and caliper may touch.
- When the bicycle wheel has been removed, it is recommended that pad spacers are installed. The pad spacers will prevent the piston from coming out if the brake lever is depressed while the wheel is removed.
- If the brake lever is depressed without the pad spacers installed, the pistons will protrude further than normal. Use a flat-shaped tool to push back the brake pad, while being careful not to damage the surface of the brake pads. (If the brake pads are not installed, use a flat-shaped tool to push the pistons straight back in, while being careful not to damage them.) If it is difficult to push the brake pads or pistons back, remove the bleed screws then try again. (Note that some oil may overflow from the reservoir tank at this time.)
- For cleaning brake hoses exposed to mineral oil, or cleaning and maintaining tools, use isopropyl alcohol or a dry cloth. Do not use commercially available brake cleaners. Doing so may cause damage to plastic parts.
- Do not remove the pistons when cleaning the calipers.
- If the disc brake rotor is worn, cracked or warped, it should be replaced.
- BL-M9100 is a magnesium component. Corrosion starts when these components come into contact with parts made of other types of metals, such as steel hardware. In the contact area, water residue, sweat, rain and other moisture particles may create a potential reaction. This forms an electrochemical cell, resulting in an electrochemical reaction. To prevent this problem, each part is treated with a special-purpose surface

treatment. Use appropriate parts to prevent the progression of corrosion. For details, refer to " Designated small parts for magnesium components " in "Maintenance."

The actual product may differ from the illustration because this manual is intended mainly to explain the procedures for using the product.

# List of tools to be used

The following tools are needed for installation/removal, adjustment, and maintenance purposes.

Tool	
	2 mm hexagon wrench
	2.5 mm hexagon wrench
	3 mm hexagon wrench
	4 mm hexagon wrench
	5 mm hexagon wrench
	8 mm spanner
	7 mm box wrench
	Adjustable wrench
	Slotted screwdriver
	Cross head screwdriver [#2]
	TL-BH62
	TL-FC36
	TL-LR15
	Micrometer

# Installation / removal

## Installing the brake lever


For the installation method when installing with an I-SPEC EV type shift lever, refer to the dealer's manual of the shift lever being used .

For information on how to install the BL-T8100, refer to the disc brake section of General Operations.


When installing parts onto a carbon frame/handlebar, confirm the recommended tightening torque with the carbon frame or handlebar manufacturer. This will prevent damage to the frame/handlebar due to over-torquing or inadequate securing of the components.

### 1. Open the clamp band of the brake lever.

- (1) Loosen the fixing screw.
- (2) Press the recessed area of the clamp band with a tool such as a 2 mm hexagon wrench to disengage the safety latch.

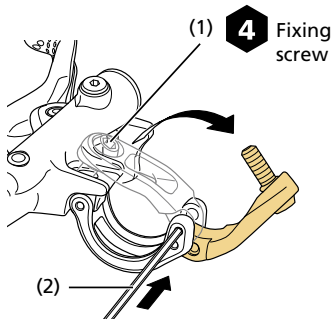


### 2. Pull an O-ring to the clamp band side as shown in the figure.

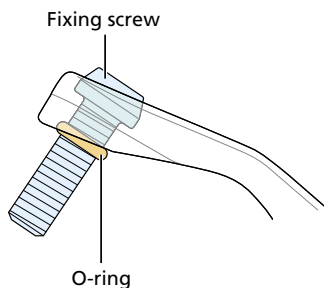


### 3. Attach the brake lever to the handlebar.

Secure the lever using the fixing screw.

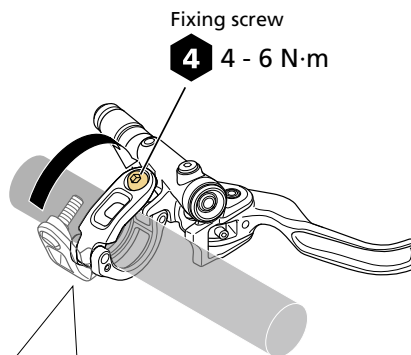


When installing the brake lever in combination with a standard type shift lever, install the brake lever so that the position of the shift lever band is within the range shown in the figure. After the shift lever is installed, install the brake lever while checking its position.

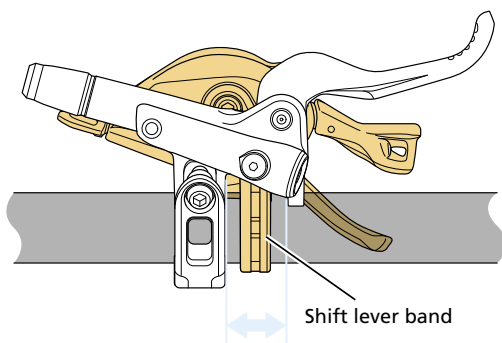

## Installing the disc brake rotor


### 1. Check that the spokes are laced as shown in the figure.



Radial lacing cannot be used.

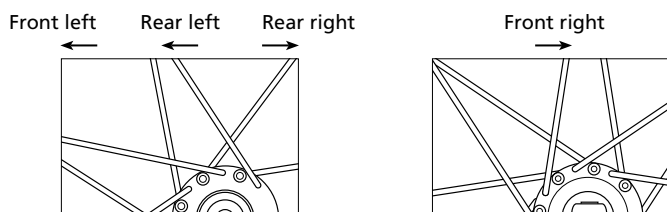

2. **Set the disc brake rotor on the hub, then secure it with the disc brake rotor lock ring.**

Secure with TL-LR15 and an adjustable wrench or TL-FC36.

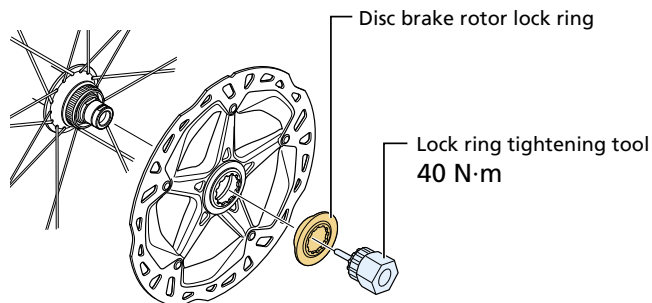

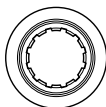	Internal spline type	External spline type
Disc brake rotor lock ring		
Lock ring tightening tool	TL-LR15 and adjustable wrench	TL-FC36

## Removing the disc brake rotor

Perform the removal of the disc brake rotor in the reverse order from the installation procedure.


## Installing the brake calipers

### Post mount type

1. **Install the wheel with an attached disc brake rotor onto the frame.**


### 2. Remove the bleed spacer (yellow).

- (1) Remove the retaining clip.
- (2) Remove the pad axle.
- (3) Remove the bleed spacer (yellow).

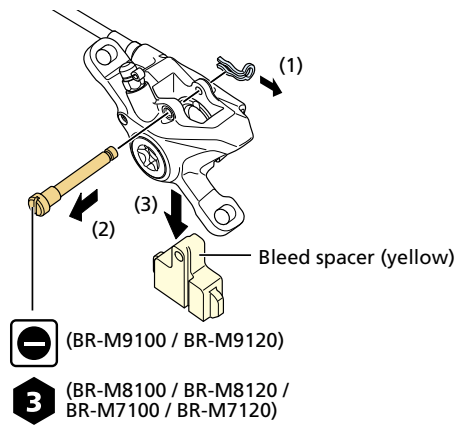

### 3. Set the brake pad presser spring in the brake pads.


Set the pads as shown in the figure.

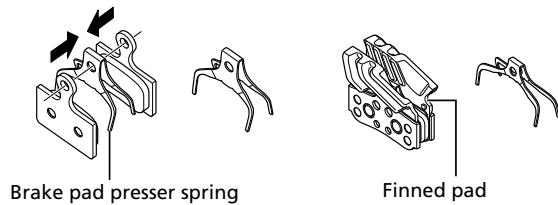



### 4. Install the brake pads.

- (1) Set the brake pads in the caliper.
- (2) Install the pad axle.
- (3) Install the retaining clip.

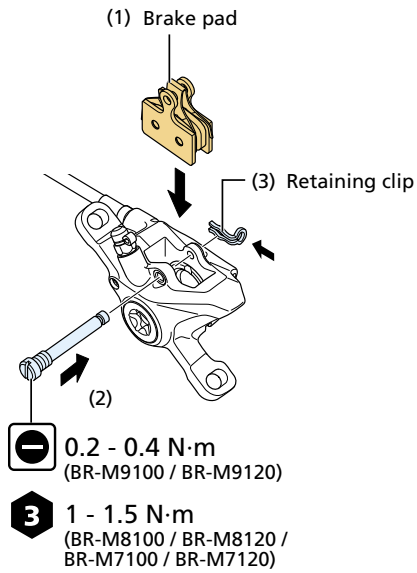


### **NOTICE**

- When a brake pad has markings, take note of the left (L) and right (R) markings to set it.


5. **Temporarily install the caliper on the frame without fully tightening the mounting screws so that the caliper can still move horizontally.**

If it is necessary to install a mount adapter, temporarily install the adapter after setting it on the caliper. Set the adapter so that the mark is facing up.

### Without mount adapter

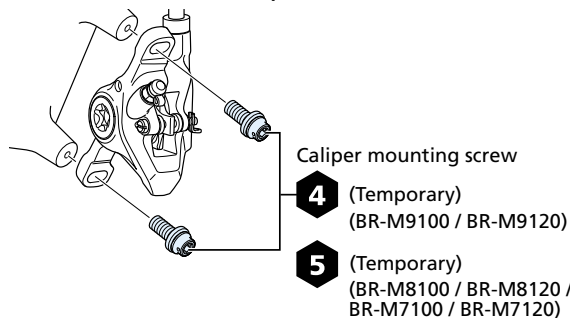


### With mount adapter

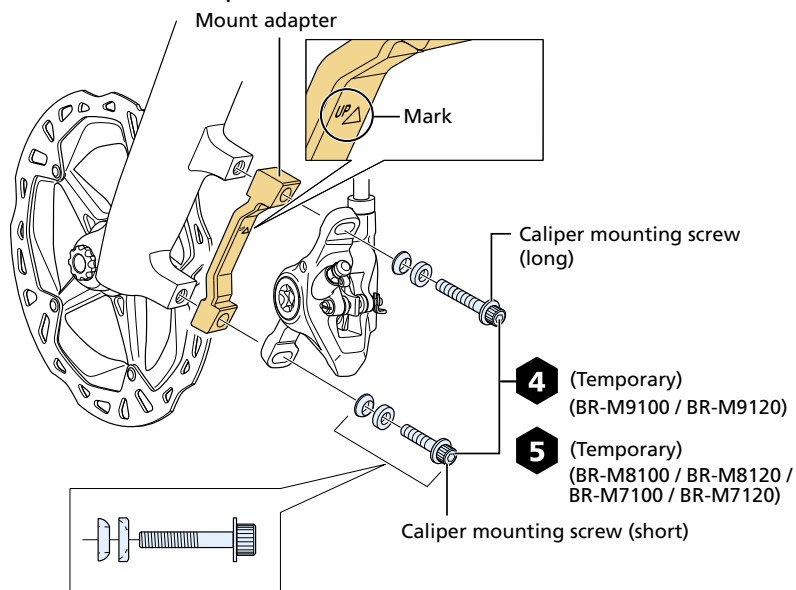


6. **Depress the brake lever so that the disc brake rotor is held between the pads, then tighten the caliper mounting screws.**

If the brake hose is not already installed in the caliper, install the brake hose then perform the step.

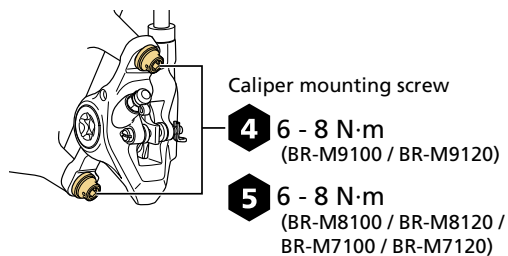


### 7. Secure the caliper mounting screws.

In order to prevent the screw from loosening, install a snap ring on the head of the screw. If there is a lock wire hole through the head of the screw, use lock wire to secure it.

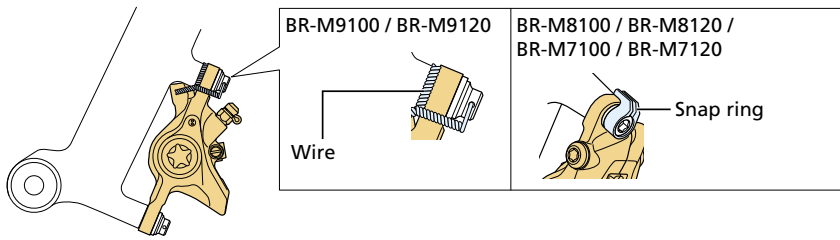

### **NOTICE**

- Use the supplied snap ring for BR-M8100 / BR-M8120 / BR-M7100 / BR-M7120. Other models of snap rings cannot be installed.

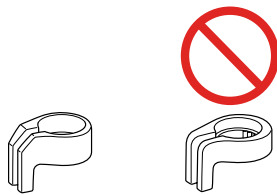

## International-standard mount type


### **NOTICE**

- For international-standard mounts, a dedicated adapter is required.

### 1. Install the wheel with an attached disc brake rotor onto the frame.


### 2. Remove the bleed spacer (yellow).

- (1) Remove the retaining clip.
- (2) Remove the pad axle.
- (3) Remove the bleed spacer (yellow).

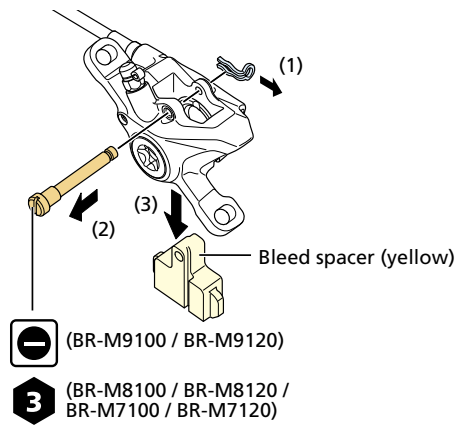


### 3. Set the brake pad presser spring in the brake pads.

Set the pads as shown in the figure.

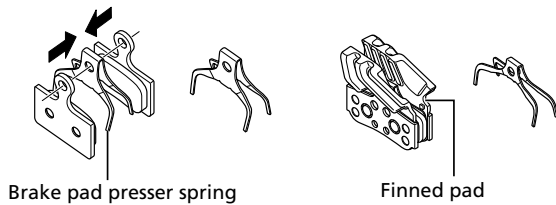

### 4. Install the brake pads.

- (1) Set the brake pads in the caliper.
- (2) Install the pad axle.
- (3) Install the retaining clip.

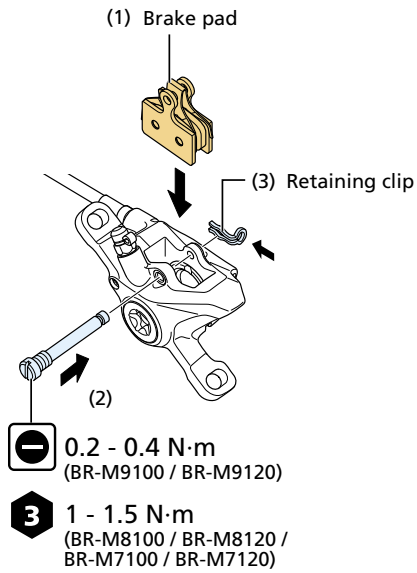

### **NOTICE**

- When a brake pad has markings, take note of the left (L) and right (R) markings to set it.


### 5. Temporarily install the caliper to the adapter, then install it onto the frame.

Tighten with the adapter mounting screws. Perform temporary installation until the caliper can only move a slight amount left and right.

Front

- 4** 6 - 8 N·m  
(BR-M9100 / BR-M9120)
  - 5** 6 - 8 N·m  
(BR-M8100 / BR-M8120 /  
BR-M7100 / BR-M7120)
- Adapter mounting screw


Adapter

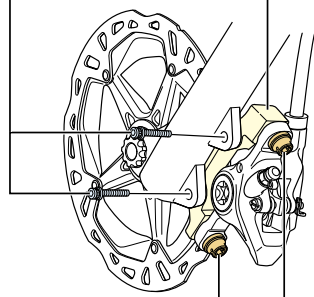

- 4** (Temporary)  
(BR-M9100 / BR-M9120)
  - 5** (Temporary)  
(BR-M8100 / BR-M8120 /  
BR-M7100 / BR-M7120)
- Caliper mounting screw

Rear

- 4** (Temporary)  
(BR-M9100 / BR-M9120)
  - 5** (Temporary)  
(BR-M8100 / BR-M8120 /  
BR-M7100 / BR-M7120)
- Caliper mounting screw

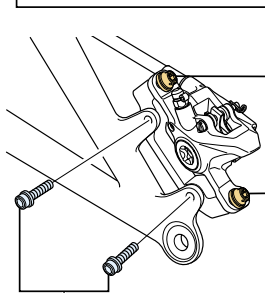


- 4** 6 - 8 N·m  
(BR-M9100 / BR-M9120)
  - 5** 6 - 8 N·m  
(BR-M8100 / BR-M8120 /  
BR-M7100 / BR-M7120)
- Adapter mounting screw

6. Depress the brake lever so that the disc brake rotor is held between the pads, then tighten the caliper mounting screws.


If the brake hose is not already installed in the caliper, install the brake hose then perform the step.

Front

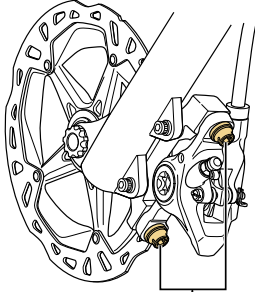

- 4** 6 - 8 N·m  
(BR-M9100 / BR-M9120)
- 5** 6 - 8 N·m  
(BR-M8100 / BR-M8120 /  
BR-M7100 / BR-M7120)  
Caliper mounting screw

Rear

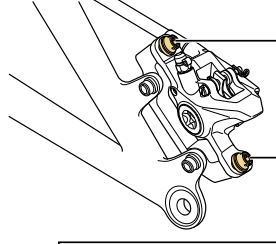


- 4** 6 - 8 N·m  
(BR-M9100 / BR-M9120)
- 5** 6 - 8 N·m  
(BR-M8100 / BR-M8120 /  
BR-M7100 / BR-M7120)  
Caliper mounting screw

### 7. Secure the caliper mounting screws.

In order to prevent the screws from loosening, secure the caliper mounting screws and adapter mounting screws with snap rings or a wire.

\* Install the snap rings or pass the wire through the holes in the heads of the mounting screws and twist as shown in the figure.

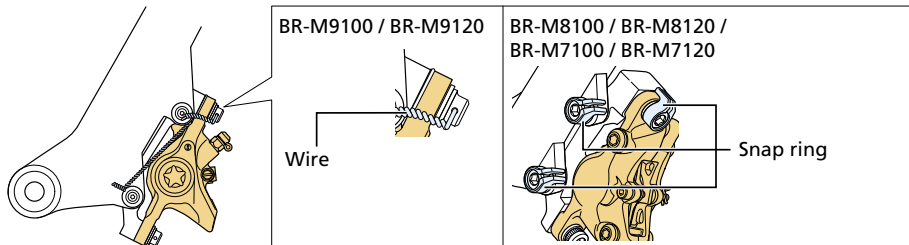


### NOTICE

- Use the supplied snap ring for BR-M8100 / BR-M8120 / BR-M7100 / BR-M7120. Other models of snap rings cannot be installed.



### TECH TIPS

- If screw (1) loosens (turns counterclockwise), force is applied via the wire to turn screw (2) in the tightening direction (clockwise). However, screw (2) cannot turn any further in the tightening direction. Accordingly, this prevents screw (1) from turning in the loosening direction because it is also connected via the wire. If either screw begins to loosen, force will be applied to the other screw, thereby turning the loosened screw in the tightening direction. In other words, this system prevents the screws from loosening.

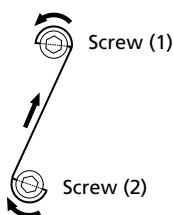




# Installing the brake caliper (flat mount type)

## Installing the brake pads


### 1. Remove the bleed spacer (yellow).

- (1) Remove the retaining clip.
- (2) Remove the pad axle.
- (3) Remove the bleed spacer (yellow).

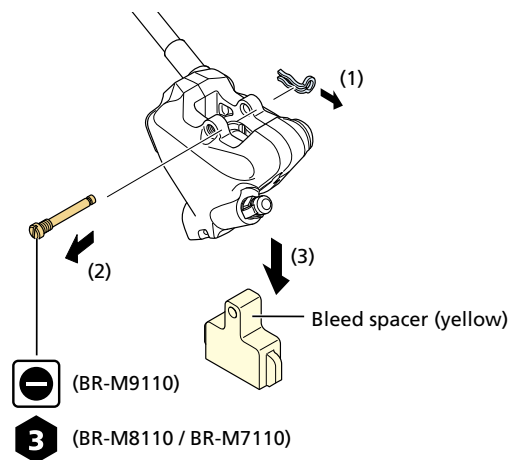

### 2. Set the pad presser spring in the brake pads.

Set the pads as shown in the figure.

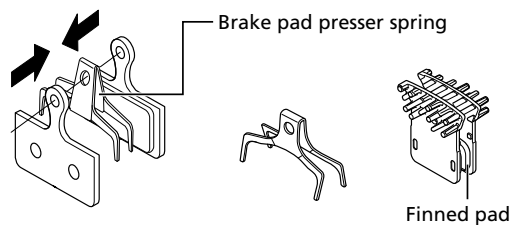


## Installation / removal

### Installing the brake caliper (flat mount type)

---

#### 3. Install the brake pads.

- (1) Set the brake pads in the caliper.
- (2) Insert the pad axle.
- (3) Install the retaining clip.

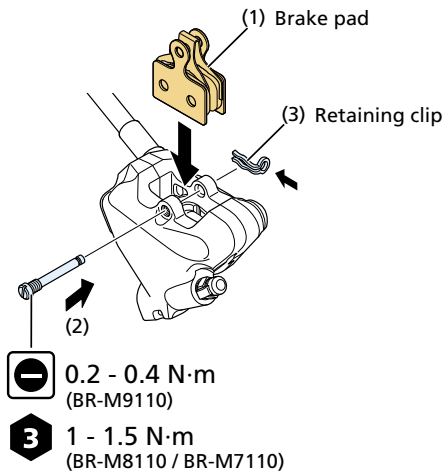

## Installing to the frame

With the brake pads in place, install the caliper to the frame. The installation method differs according to the disc brake rotor used.

**NOTICE**

- A dedicated mount bracket may be required depending on the frame and disc brake rotor combination.

Fork and frame mount type		Disc brake rotor size		
		140 mm (SS)	160 mm (S)	180 mm (M)
Flat mount Ø140 / 160	Rear	Mount bracket not required	SM-MA-R160 D / D	-
Flat mount Ø160 / 180	Rear	-	Mount bracket not required	SM-MA-R160 D / D

\* BR-M9110 is not compatible with rear 180 mm (M) disc brake rotor.

Installation / removal

Installing the brake caliper (flat mount type)

---

For rear 140 mm disc brake rotor


## Installation / removal

### Installing the brake caliper (flat mount type)

---


**1. Insert the brake caliper fixing screw C into the frame mount area.**

Make sure that the length of the protruding section of the brake caliper fixing screw C is 13 mm.

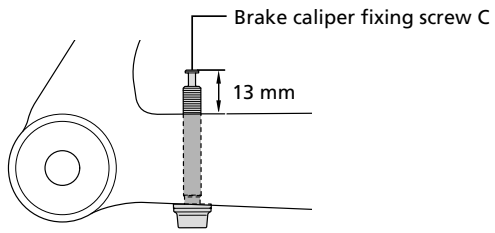


**NOTICE**

- When using a screw length selector, check whether the tip of brake caliper fixing screw C is within the range A.

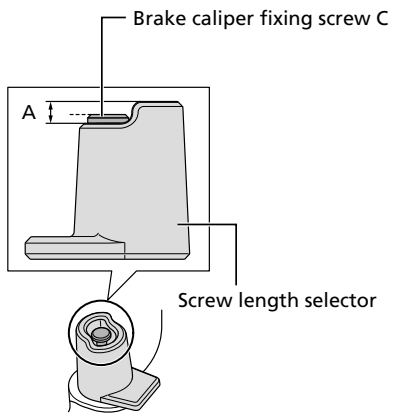

- Do not use a washer when checking the length of brake caliper fixing screw C.
- The length of brake caliper fixing screws C to be used varies depending on the thickness of the frame. Use brake caliper fixing screws C that are appropriate for the thickness of the frame.

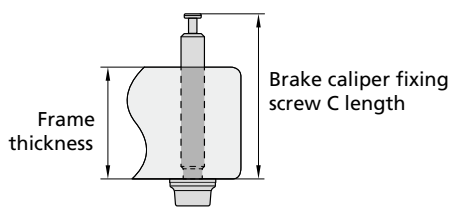


Frame thickness	Brake caliper fixing screw C length	Y-part
10 mm	23 mm	Y8N208000
15 mm	28 mm	Y8N208050
20 mm	33 mm	Y8N208010
25 mm	38 mm	Y8N208020
30 mm	43 mm	Y8N208030
35 mm	48 mm	Y8N208040

## Installation / removal

### Installing the brake caliper (flat mount type)

---


2. Temporarily install the brake caliper to the frame so that the brake caliper can still move horizontally.

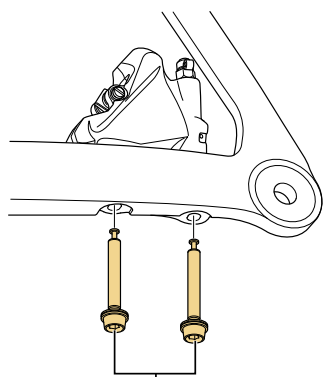

**4** (Temporary)

Brake caliper fixing screw C

3. Depress the brake lever so that the disc brake rotor is held between the pads, then tighten caliper fixing screws C.

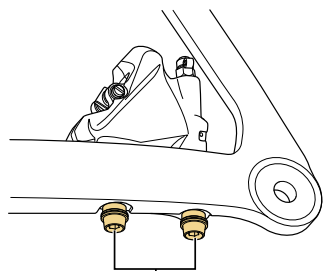


**4** 6 - 8 N·m

Brake caliper fixing screw C

4. Install the screw fixing pin.

Check that the screw fixing pin is fully inserted all the way to the back.

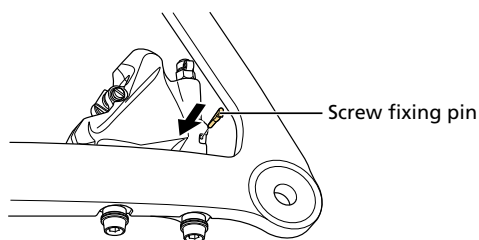

For rear 160 mm and rear 180 mm disc brake rotors


1. Check the length of brake caliper fixing screw C.

Refer to step 1 in "For a rear 140 mm disc brake rotor."

**2. Attach the mount bracket to the brake caliper.**

- (1) Tighten it using the brake caliper fixing screws B.
- (2) Install the screw fixing pin.

\* Check that the screw fixing pin is fully inserted all the way to the back.

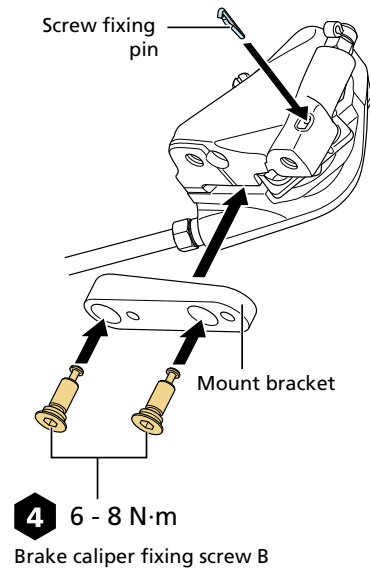

**NOTICE**

- Pay attention to the marking on the mount bracket when attaching it.






## Installation / removal

### Installing the brake caliper (flat mount type)


---

3. **Temporarily install the mount bracket to the frame so that it can move left and right.**


Temporarily install it using the brake caliper fixing screws C that have attached washers.

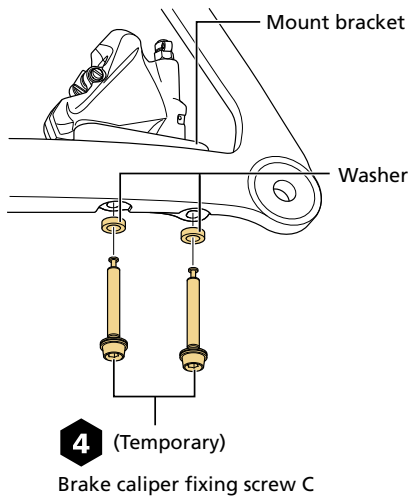

4. **Depress the brake lever so that the disc brake rotor is held between the pads, then tighten the caliper fixing screws C that have attached washers.**

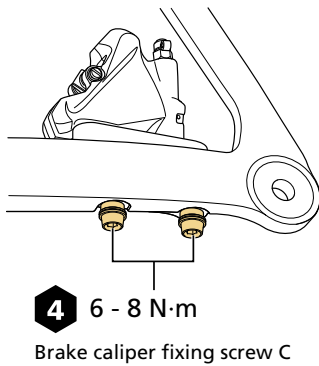


**5. Install the retaining clip.**

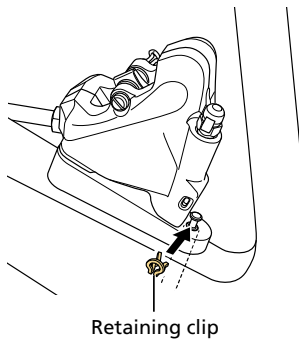


# Installing the brake hose

## Overview of the easy hose joint system

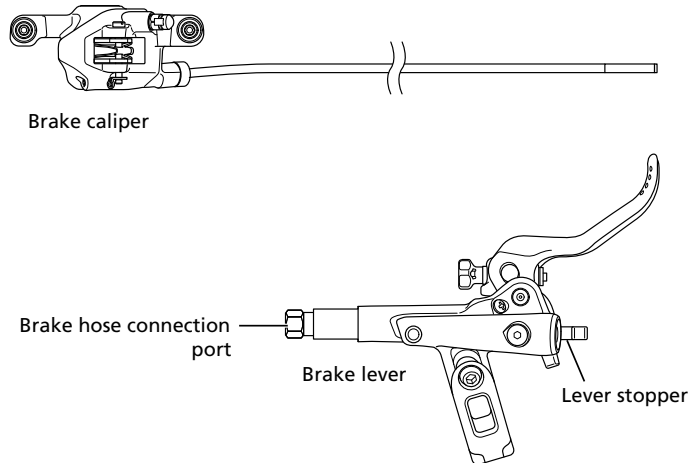

## Checking the length of the hose

1. Route the brake hose into the final installation position.

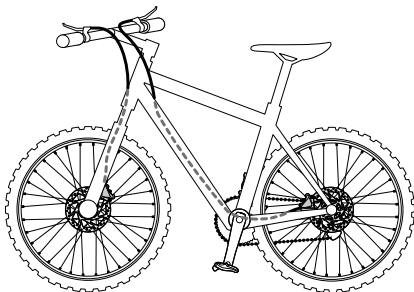

### **NOTICE**

- This figure is only for explanatory purposes. For details on how to route the brake hoses, consult the manufacturer of the bicycle or refer to the bicycle's manual.


### 2. Check the appropriate length of the brake hose.

Secure the brake lever in the position used when riding.

(BL-M9100 cannot be secured on the handlebars unless the lever stopper is removed. Place the lever in the position assumed to be used when riding, then perform a check.)

Check the mark on the brake hose with the edge of the brake lever flare nut.

- \* If the hose is at the appropriate length, it is not necessary to cut the hose. Proceed to the "Connecting the hose" section in "Installing the brake hose."
- \* If the hose needs to be shortened, proceed to "Cutting the hose" in "Installing the brake hose."
- \* If the hose length is insufficient, replace with a hose that has an appropriate length. Proceed to "Replacing the brake hose."

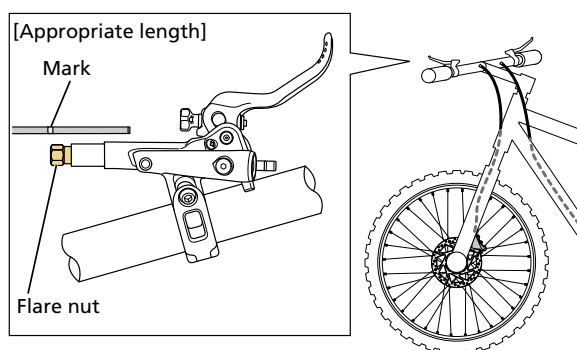


### Cutting the hose

Use care when cutting the hose, as oil may leak when the hose is cut.


## NOTICE

- Make sure to also refer to the manual for SHIMANO original tool TL-BH62.
- Do not move the lever indicated in the figure before disassembling SHIMANO original tool TL-BH62.

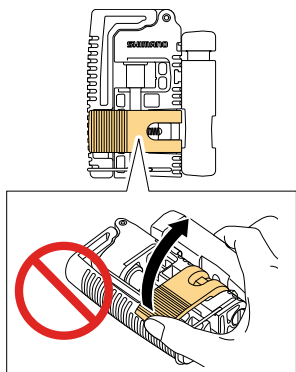

### 1. Determine the appropriate length and add a witness mark on the brake hose.


Add the mark so it is aligned with the edge of the flare nut.

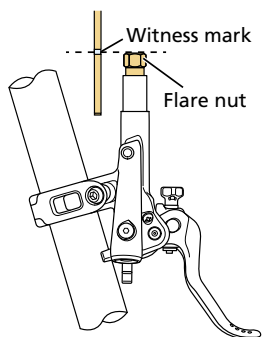

### 2. Add a cut mark.


Add a cut mark 18 mm towards the end of the hose from the witness mark.

\* When not using an easy hose joint system, add a cut mark 11 mm towards the end of the hose from the witness mark.

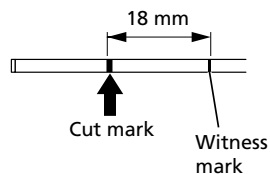


**3. Prepare tool TL-BH62 for the cutting of the brake hose.**

Disassemble the tool as shown in the figure.

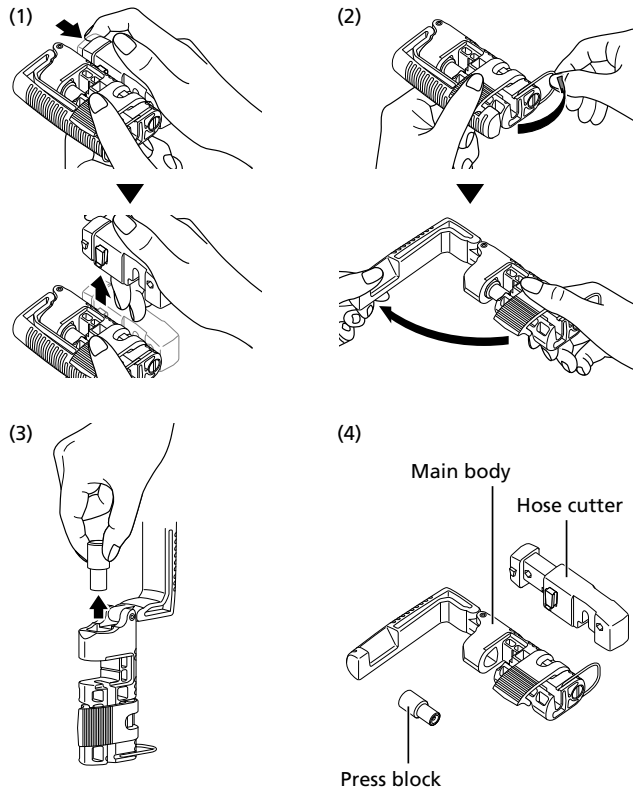

**4. Place the brake hose in the TL-BH62.**

When inserting the brake hose, make sure that the cut mark is parallel with the indicator groove in the tool.

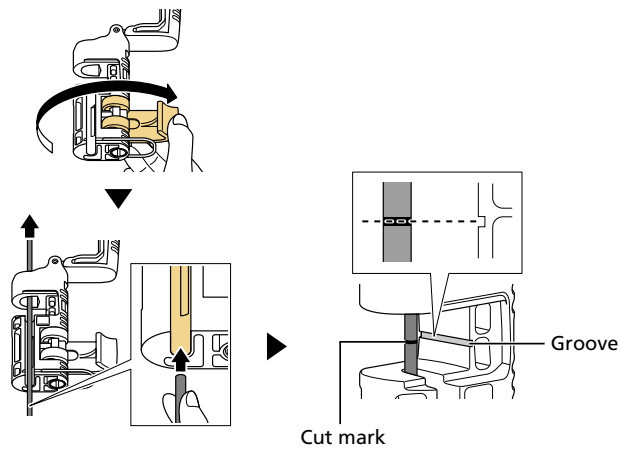


# Installation / removal


## Installing the brake hose

---


5. Check the cut location and secure the brake hose in place.

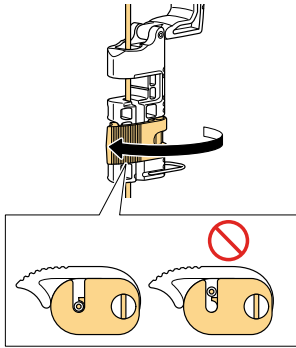


6. Check that the hose is secure, then install the hose cutter.

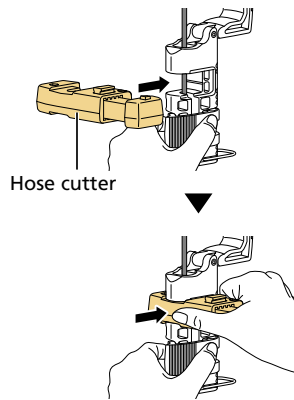

7. Press the hose cutter as shown in the figure to cut the brake hose.

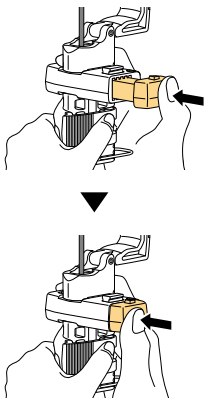


8. Remove the hose cutter and check that the cut end is even.

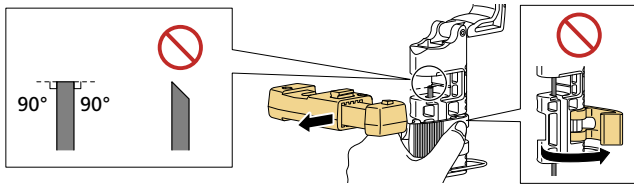

9. Install the connector insert in the press block, then set the press block in the TL-BH62.

Make sure that the tip of the connector insert is correctly positioned inside the opening of the brake hose.

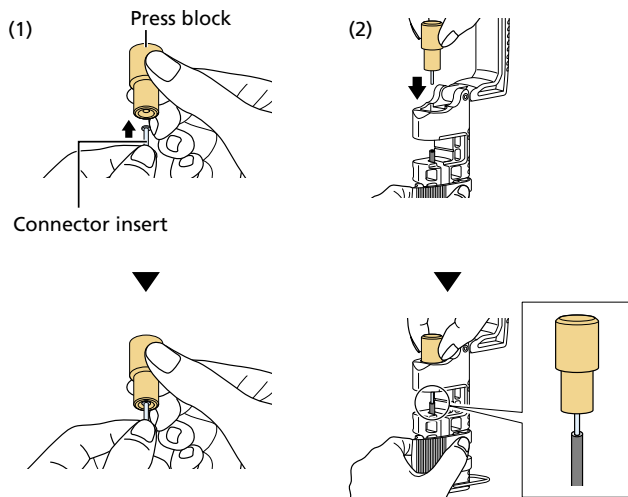

**NOTICE**

- When connecting with an easy hose joint system, a specialized Connector Insert (SHIMANO CODE No.: Y8JA98020/color: silver) must be used. Use of any connector insert other than the specified one may lead to oil leakage and other malfunctions.




## Installation / removal

### Installing the brake hose


---

#### 10. Depress the lever on the TL-BH62 to install the connector insert in the brake hose.

Check that the connector insert is installed correctly.

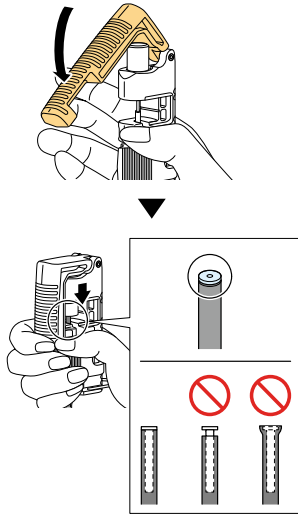


#### 11. Remove the brake hose from the TL-BH62.

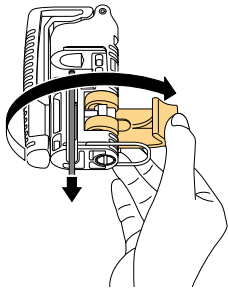

## Connecting the hose

#### 1. Pass the hose cover over the brake hose.

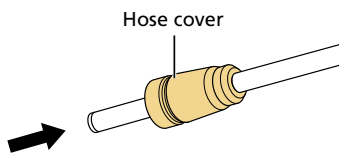


## Installation / removal

### Installing the brake hose

---


#### 2. Secure the brake lever with a tool such as a vise.

Secure the hose connection port so that it is facing upward.

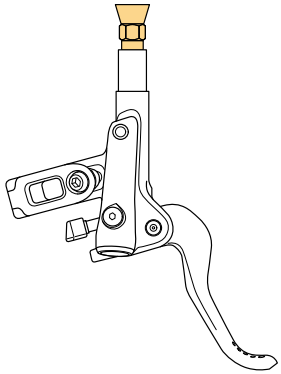

#### 3. Remove the seal plug.

Use a clean rag to keep oil from dripping off the seal plug.

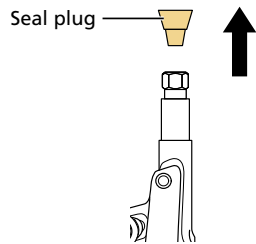


#### 4. Insert the brake hose in the brake hose connection port.


It comes with a pre-installed olive. When inserting the hose, ensure it does not snag on the olive.

Insert the hose up to the witness mark on the outer hose casing.


Cover with a clean rag while conducting this procedure as some of the internal oil may leak.

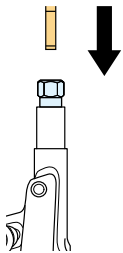

5. Tighten the flare nut.

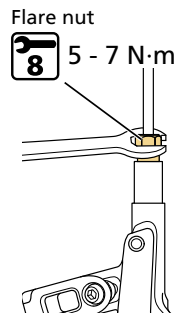


6. Wipe off any residual oil and install the hose cover.




7. Remove the lever stopper from the brake lever.

Pull out the lever stopper by means of short back and forth movements while taking care not to depress the brake lever.


BL-M9100

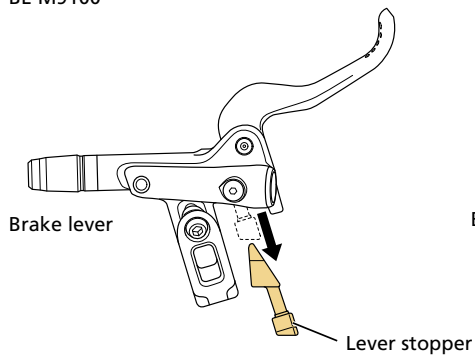

BL-M9120 / BL-M8100 / BL-M7100

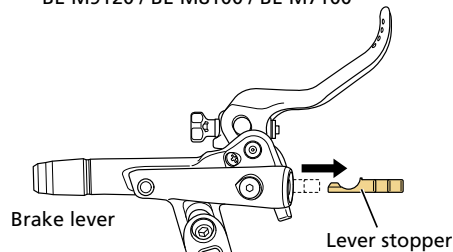

BL-T8100

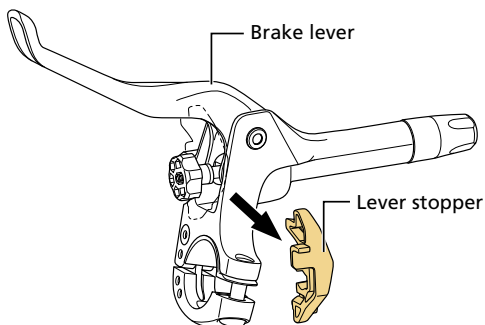

8. **Check that the pad spacer is installed in the caliper.**
9. **Operate the brake lever several times. Check that the brake pads grip the pad spacer and that the lever becomes stiff.**

If the lever does not become stiff, refer to "Adding SHIMANO genuine mineral oil and bleeding air" and bleed the air from the system.

# Adjustment

## Adjusting the free stroke

Adjust the amount of brake lever travel between the initial brake lever position and the point at which the brake pads contact the disc brake rotor. The free stroke adjustment moves only the initial position of the brake lever. So if you want to move the pad engagement point relative to the handlebar, you must also perform a reach adjustment.


## Adjustment

### Adjusting the free stroke

---

#### 1. Turn the free stroke adjustment screw to adjust the stroke.

Tightening the free stroke adjustment screw (clockwise) narrows the range of travel of the brake lever, while loosening the screw (counterclockwise) widens it.

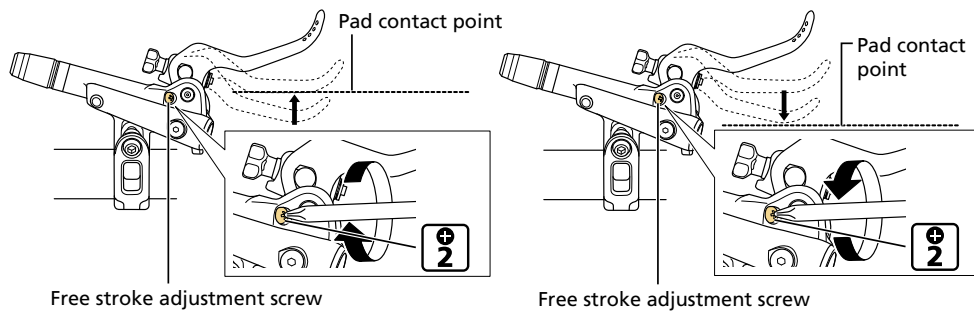

### **NOTICE**


- Free stroke cannot be adjusted for BL-M9100 / BL-M7100 / BL-T8100.

# Adjusting the reach

**1. Turn the reach adjustment screw or reach adjustment knob to adjust.**


Tightening the reach adjustment screw or reach adjustment knob (clockwise) widens the distance between the initial position of the brake lever and the handlebar, while loosening the screw or knob (counterclockwise) narrows it.

BL-M9100

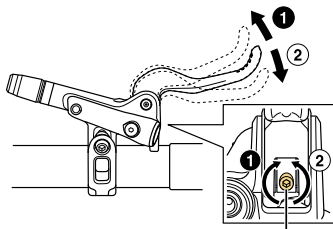


**2** Reach adjustment screw

BL-M9120 / BL-M8100 / BL-M7100

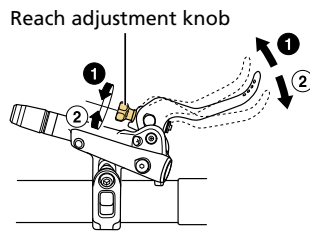

Reach adjustment knob

BL-T8100

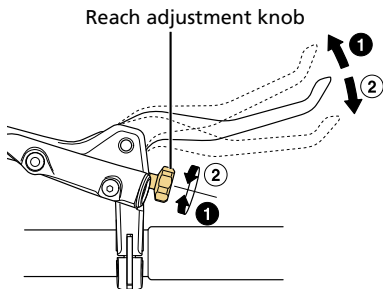

Reach adjustment knob

# Maintenance

## Replacing the brake pads


Replace the brake pads in the following circumstances:


- When oil adheres to the brake pads
- When the brake pads are worn down to a thickness of 0.5 mm
- When the brake pad presser spring is interfering with the disc brake rotor


### 1. Remove the wheel from the frame.

### 2. Remove the brake pads.

- (1) Remove the retaining clip.
- (2) Remove the pad axle.
- (3) Remove the brake pads from the caliper.

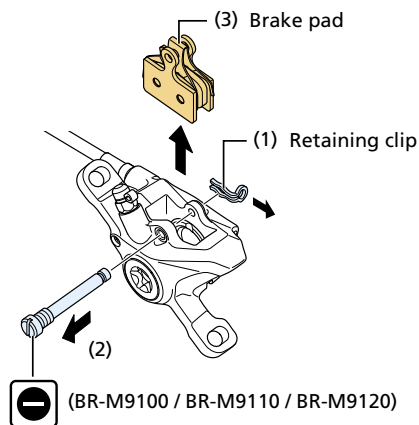

 (BR-M9100 / BR-M9110 / BR-M9120)

 (BR-M8100 / BR-M8110 / BR-M8120 /  
BR-M7100 / BR-M7110 / BR-M7120)

### 3. Clean the pistons and the surrounding area.




### 4. Push the pistons straight back as far as they will go.

This brake system is designed to automatically adjust the gap between the disc brake rotor and the brake pads by the pistons gradually protruding in relation to the wear of the brake pads. As a result, when the brake pads are replaced, the pistons need to be pushed back into position.

Use a flat-shaped tool to push the pistons back while being careful not to twist them.

Do not push the pistons with a sharp tool. Doing so may damage the pistons.

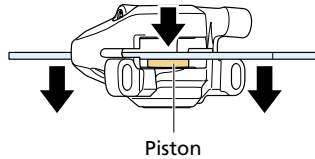


Piston

### **NOTICE**

- When pushing the pistons back, do so with the oil funnel attached to the brake lever. The diaphragm of the brake lever may be damaged by the oil pressure.

### 5. Set a brake pad presser spring in the new brake pads.

Set the pads as shown in the figure.

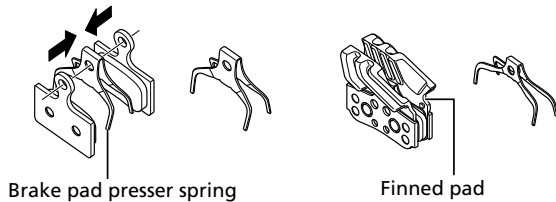



Brake pad presser spring


Finned pad

### 6. Install the brake pads.

- (1) Set the brake pads in the caliper.
- (2) Install the pad axle.
- (3) Install the retaining clip.
- (4) Install the pad spacer (red).

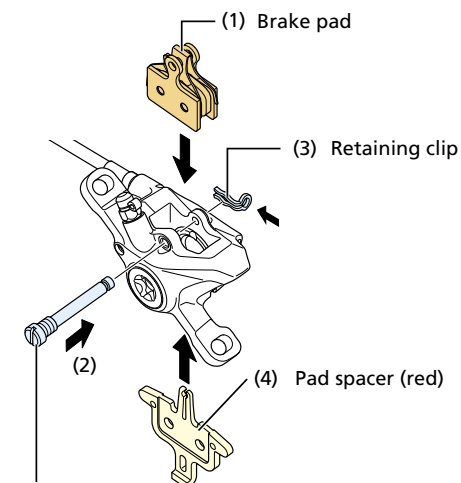

 0.2 - 0.4 N·m  
(BR-M9100 / BR-M9110 / BR-M9120)

 1 - 1.5 N·m  
(BR-M8100 / BR-M8110 / BR-M8120 /  
BR-M7100 / BR-M7110 / BR-M7120)

7. Depress the brake lever a few times and make sure that the lever operation becomes stiff.

8. Remove the pad spacer and install the wheel.

**9. Check that the disc brake rotor does not interfere with the brake pads.**

If there is interference, check if the wheel is installed correctly. If there is no problem with the installation of the wheel, refer to "Installing the brake calipers" and adjust the position of the caliper.

**NOTICE**

- To optimize the performance of the brake pads and disc brake rotor after replacing the brake pads, perform the bed-in procedure as explained in the steps below:
  - (1) Ride your bicycle in a flat and safe area without obstacles and accelerate to a moderate speed.
  - (2) Operate the brake lever until you slow down to walking speed.  
Do this only with one brake lever at a time. Be careful when performing this procedure.  
Always operate your brake lever with moderation, especially when you bed in the front brake.
  - (3) Repeat steps (1) and (2) for at least 20 times for both the front and rear brakes.  
While repeating the process, the brake force will increase.

## SHIMANO genuine mineral oil replacement

It is recommended to change the oil when it becomes noticeably discolored.


### Draining the mineral oil

**⚠ CAUTION**


- Note the following cautions when handling SHIMANO genuine mineral oil:
  - Do not drink. May cause vomiting or diarrhea.
  - Keep out of reach of children.
  - Do not cut, let near heat, weld or pressurize the SHIMANO genuine mineral oil container. Doing so may cause an explosion or fire.
  - Disposal of used oil: Follow local county and/or state codes for disposal.
  - Directions: Keep the container sealed to prevent foreign objects and moisture from getting inside, and store it in a cool, dark area away from direct sunlight or heat. Keep from heat or flame.

### 1. Position the bicycle as shown in the figure.


Install a bleed spacer (yellow) to the caliper and secure the bicycle with a stand, etc.

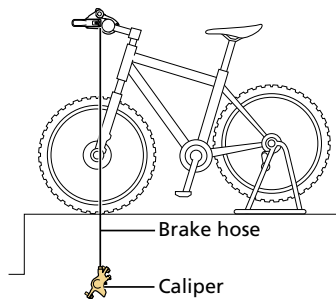

### 2. Set the brake lever so that it is parallel to the ground.

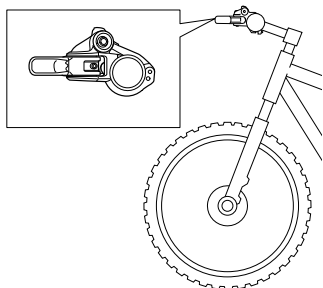


### 3. Remove the bleed screw and O-ring.

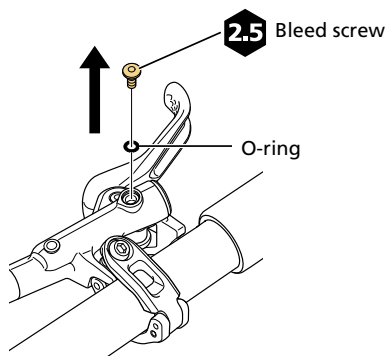


#### 4. Install a bag and tube on the bleed nipple.

- (1) Remove the bleed nipple cap.
- (2) Place a 7 mm box wrench in the position shown in the figure.
- (3) Connect the tube with bag attached to the bleed nipple.

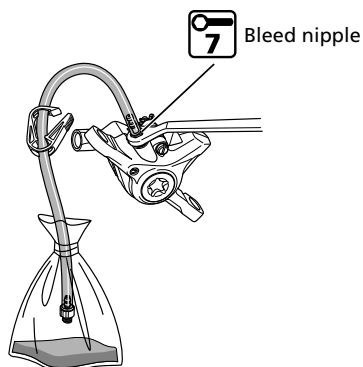

#### 5. Loosen the bleed nipple.

The oil will begin to drain. Operating the brake lever while the oil drains will allow the oil to drain more quickly.

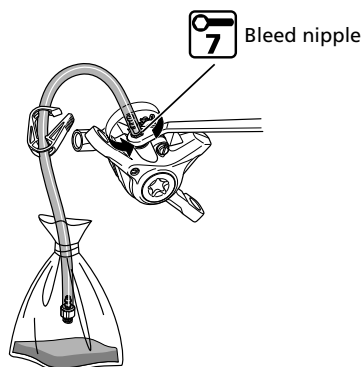

## Adding SHIMANO genuine mineral oil and bleeding air


When adding oil, use only SHIMANO genuine mineral oil.

### **NOTICE**


- When bleeding air you will need a SHIMANO original bleed tool such as the TL-BR001 or TL-BR003.

### 1. Position the bicycle as shown in the figure.

Install a bleed spacer (yellow) to the caliper and secure the bicycle with a stand, etc.

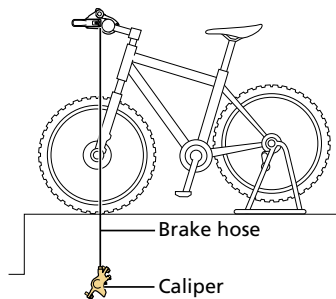


### 2. Set the brake lever so that it is parallel to the ground.

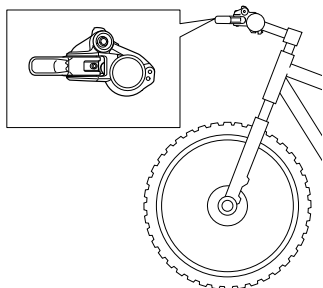


### 3. Remove the bleed screw and O-ring, and insert the oil funnel.

Do not insert the oil stopper.

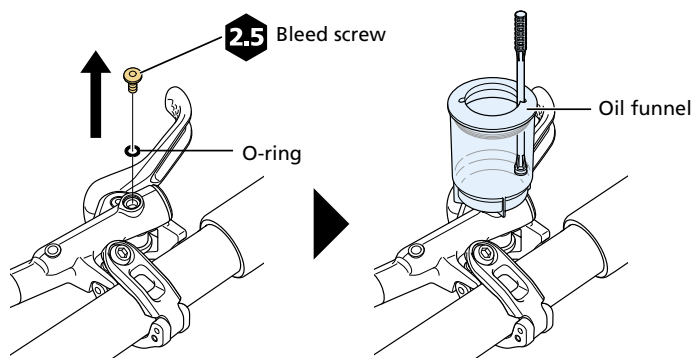


**4. Add the oil through the bleed nipple.**

Do not depress the brake lever while adding oil. Doing so may introduce air bubbles into the system. If the lever was depressed, drain the oil and re-start the process.

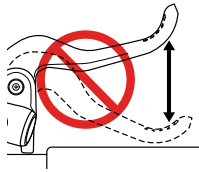


- (1) Remove the bleed nipple cap.
- (2) Place a 7 mm box wrench in the position shown in the figure.
- (3) Fill a syringe with oil, then connect the tube to the bleed nipple.
- (4) Loosen the bleed nipple by 1/8 of a turn.
- (5) Push the piston of the syringe to add the oil.
- (6) Oil will start to come out from the oil funnel. Continue adding the oil until there are no more air bubbles in the oil that is coming out.

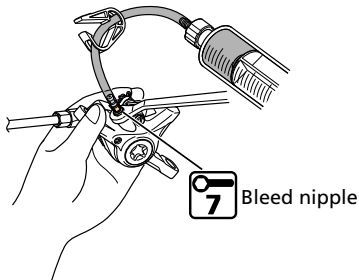

**TECH TIPS**

- If possible, secure the brake caliper body to prevent the tube from being accidentally disconnected.


**5. Once there are no more air bubbles mixed in with the oil, temporarily tighten the bleed nipple.**

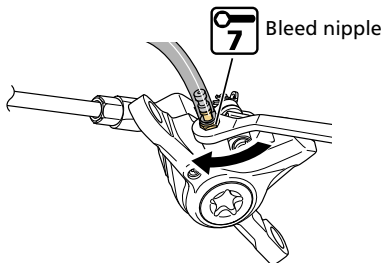

**6. Bleed the air.**


Most of the air bubbles remaining inside the brake system can be bled by performing the following operation:

- (1) Place a 7 mm box wrench in the position shown in the figure.
- (2) Connect the tube with bag attached to the bleed nipple.
- (3) Loosen the bleed nipple.
- (4) After a little while, the oil and air bubbles will flow naturally from the bleed nipple into the tube.

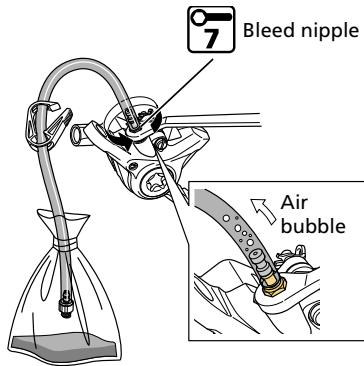


**TECH TIPS**

- It may help to gently shake the hose or lightly tap the reservoir tank or caliper with a non-marring screwdriver handle. Changing the caliper position may also improve results.

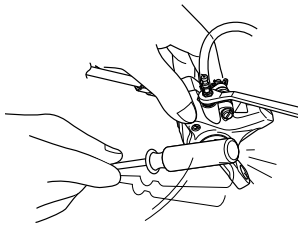


**7. As the oil level drops in the oil funnel, add oil to maintain the oil level and prevent air from getting into the system.**

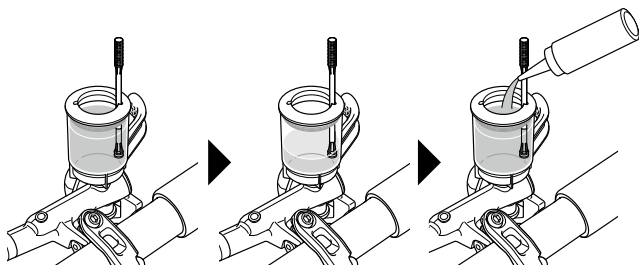




8. Once no more air bubbles come out from the bleed nipple, temporarily tighten the bleed nipple.

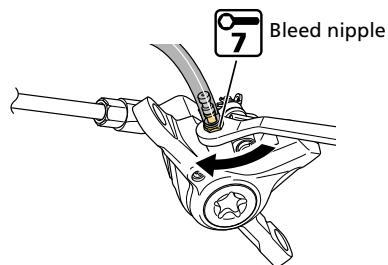


9. With the brake lever depressed, loosen and tighten the bleed nipple in rapid succession.

Loosen and tighten for approximately 0.5 seconds each time to release any air bubbles inside the caliper.

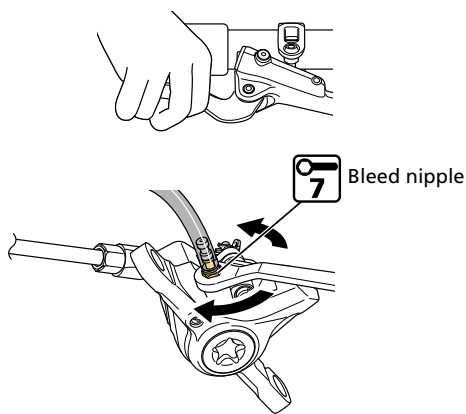


10. Repeat step 9 two to three times, then tighten the bleed nipple.

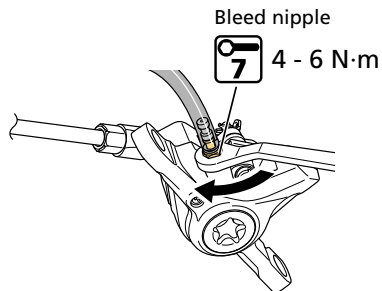

11. Wipe away any oil from the area around the bleed nipple, and attach the bleed nipple cap.


**12. Operate the brake lever.**

Air bubbles in the system rise up through the port into the oil funnel. Continue operating the brake lever until no more bubbles appear.

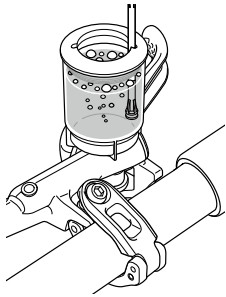


**13. Check that the lever has become stiff.**

If the lever does not become stiff, repeat the procedures from step 6 .

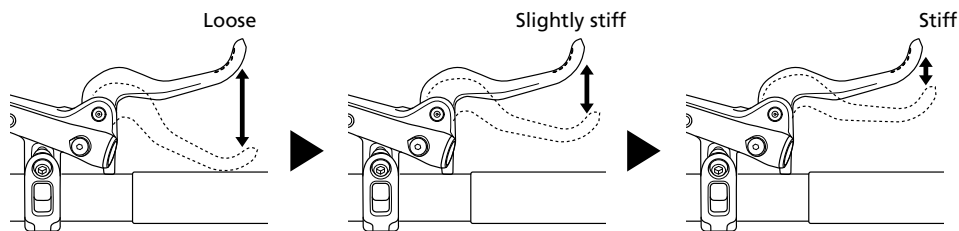


**14. Tilt the brake lever upwards 30° from the ground and conduct step 12 .**

Check that there are no remaining air bubbles.

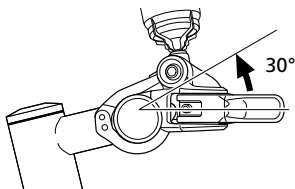

**15. Tilt the brake lever downwards 30° from the ground and conduct step 12 .**


Check that there are no remaining air bubbles.

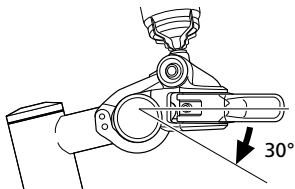


**16. Set the brake lever so that it is parallel to the ground.**

**17. Plug the oil funnel with the oil stopper.**

Make sure that the side of the oil stopper with the O-ring attached is facing downward.

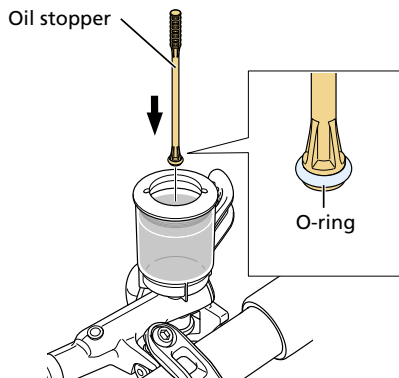


**18. Remove the oil funnel with the oil stopper still in place.**

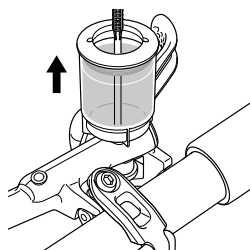


**19. Tighten with a bleed screw to which an O-ring has been attached.**

Tighten until oil overflows to make sure that no air bubbles remain inside the reservoir tank.  
Do not operate the brake lever. If operated, there is a risk of air bubbles entering the cylinder.

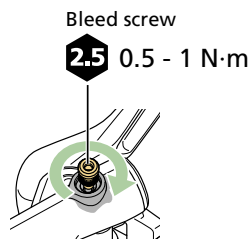

**20. Wipe away any oil that has overflowed.**

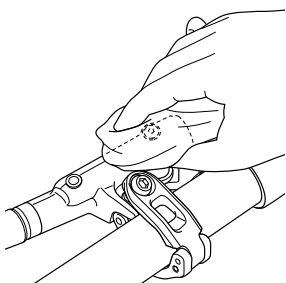

## Maintenance

### Replacing the brake hose

---

#### 21. Remove the bleed spacer (yellow).

Refer to "Installing the brake calipers" to perform the procedure.

#### 22. Install the brake pads.


Refer to step 5 and step 6 of "Caliper piston maintenance" to perform the procedure.

## Replacing the brake hose

After replacing the brake hose, refer to "SHIMANO genuine mineral oil replacement" to inject the mineral oil and bleed the air from the system.


### Checking the hose length and cutting the hose

#### 1. Route the brake hose into the final installation position.

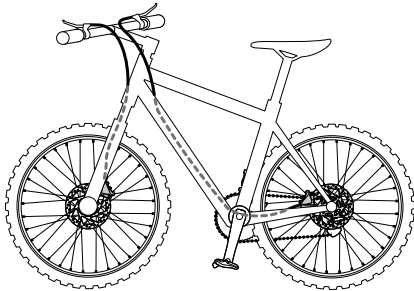

#### 2. After determining the appropriate length, add a witness mark on the brake hose as shown in the figure.

Add marks to both the brake lever side and caliper side of the hose.

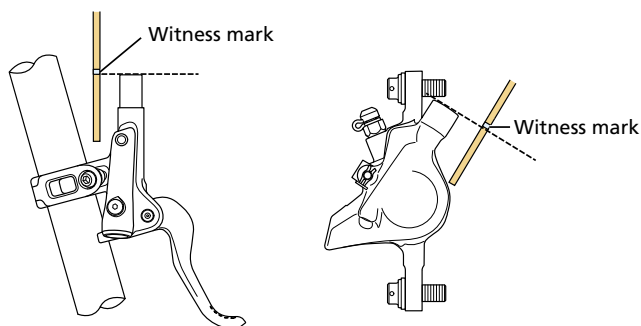


### 3. Cut the brake hose.


Refer to "Cutting the hose" in "Installing the brake hose."

## Assembly to the brake lever

### 1. Pass the cover, flare nut, and olive over the brake hose in the order shown below.

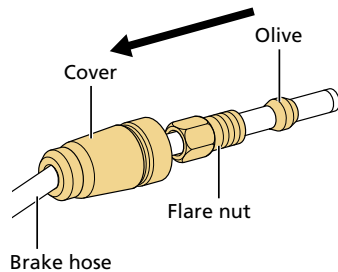


### 2. Check that the olive is in the position shown in the figure, then apply Premium Grease to the threads of the flare nut and outer surface of the olive.

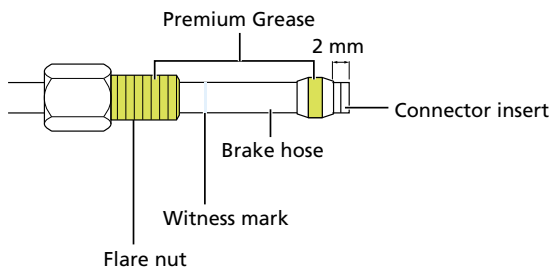

### 3. Install the brake hose in the brake lever.

Insert the hose up to the witness mark on the outer hose casing.

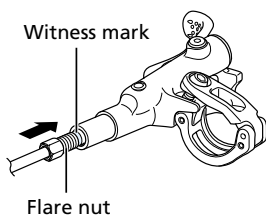


## Maintenance

### Replacing the brake hose


---

#### 4. Tighten the flare nut while pushing the brake hose in.

After tightening, install the cover.

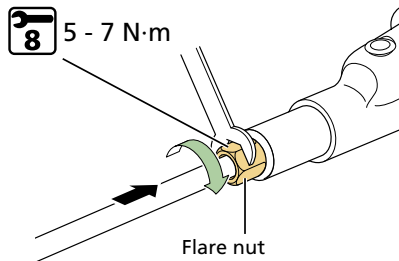


#### 5. Install the cover.

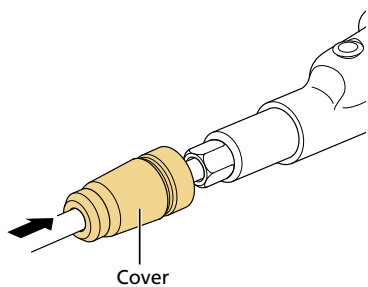

## Assembly to the brake caliper

### Straight type


#### 1. Pass the flare nut and olive over the brake hose in the order shown below.

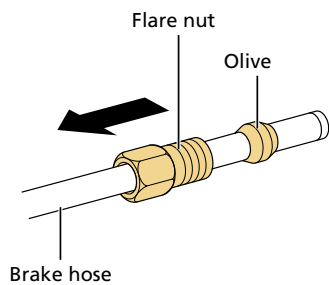

## Maintenance


### Replacing the brake hose

2. Check that the olive is in the position shown in the figure, then apply Premium Grease to the threads of the flare nut and outer surface of the olive.

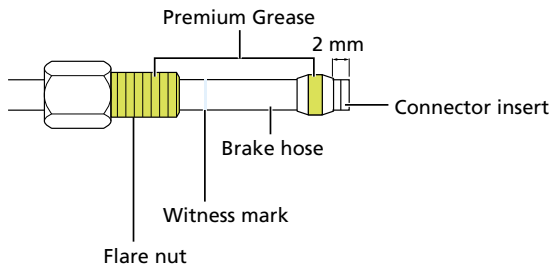


3. Install the brake hose in the caliper.

Insert the hose up to the witness mark on the outer hose casing.

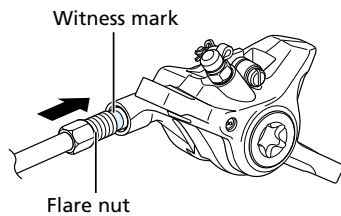


### **NOTICE**

- Do not let the brake hose become twisted when installing it. When the caliper and brake lever are not installed on the bicycle, there should be no twist in the hose if the caliper and brake lever are in the positions shown in the figure below.

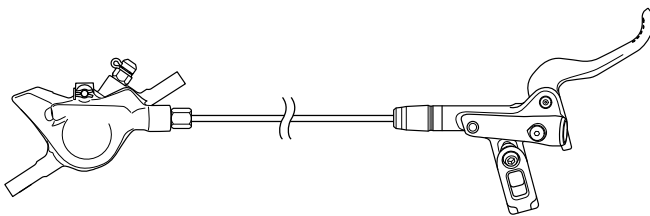


4. Tighten the flare nut while pushing the brake hose in.

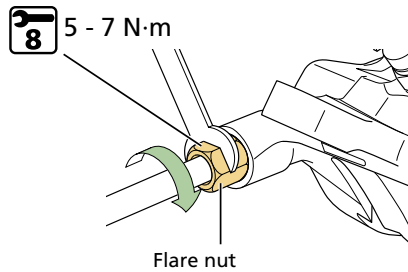

## Banjo type

Install the brake hose on the caliper as shown in the figure.

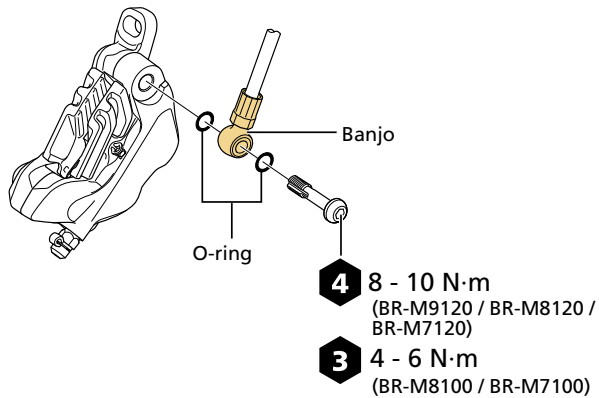

## Caliper piston maintenance


The caliper includes pistons. Adjust the pistons with the following procedure if these pistons do not operate properly, if they protrude unevenly, or if the brake pads remain in contact with the disc brake rotor.

1. Remove the wheel from the frame.



### 2. Remove the brake pads.


- (1) Remove the retaining clip.
- (2) Remove the pad axle.
- (3) Remove the brake pads from the caliper.

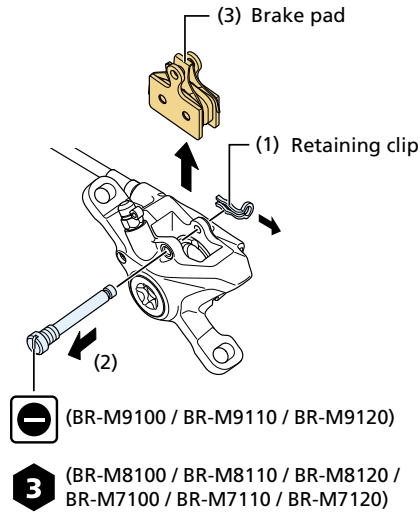

### 3. Clean the pistons and the surrounding area.

### 4. Push the pistons straight back as far as they will go.

Use a flat-shaped tool to push the pistons back while being careful not to twist them. Do not push the pistons with a sharp tool. Doing so may damage the pistons.

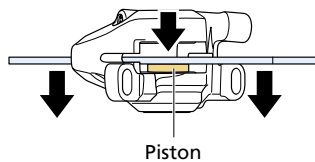


## **NOTICE**

- When pushing the pistons back, do so with the oil funnel attached to the brake lever. The diaphragm of the brake lever may be damaged by the oil pressure.

#### 5. Install the brake pads.

- (1) Set the brake pads in the caliper.
- (2) Install the pad axle.
- (3) Install the retaining clip.
- (4) Install the pad spacer (red).

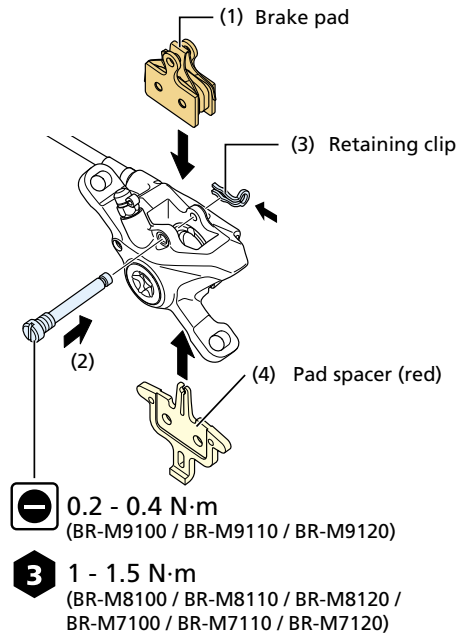

#### 6. Depress the lever a few times and make sure pistons protrude evenly.

If the pistons do not protrude evenly, repeat step 6 .

#### 7. Remove the pad spacer and install the wheel.

#### 8. Check that the disc brake rotor does not interfere with the brake pads.

If there is interference, loosen the mounting screw and adjust until there is no more interference.

## Replacing the diaphragm


After replacing the diaphragm, refer to “ SHIMANO genuine mineral oil replacement ” to inject the mineral oil and bleed the air from the system.

#### 1. Drain the mineral oil.

Refer to the “ Draining the mineral oil ” section to perform the procedure.


### 2. Loosen the cap fixing screw.

The cap fixing screw can be turned by pulling the lever. Loosen until one or two threads start to be seen. Do not completely remove the cap fixing screw.

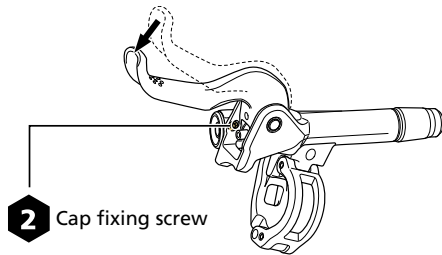


### NOTICE


- When loosening the cap fixing screw of the BL-M8100 or BL-M7100, the part indicated below may interfere with the cap fixing screw and be slightly pushed, but this is not a problem.

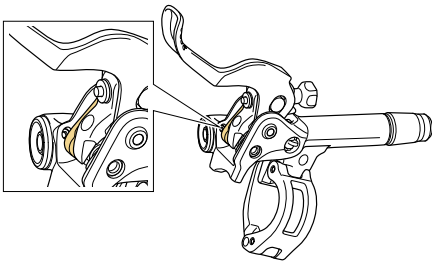

- The cap fixing screw of the BL-T8100 is found by opening the clamp band and removing the spacer.

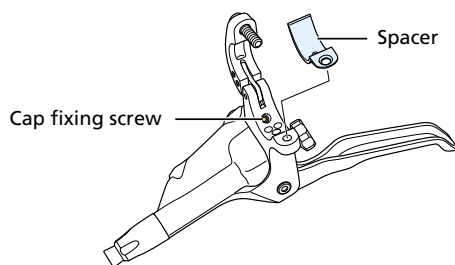


**3. Remove the bleed screw and O-ring.**

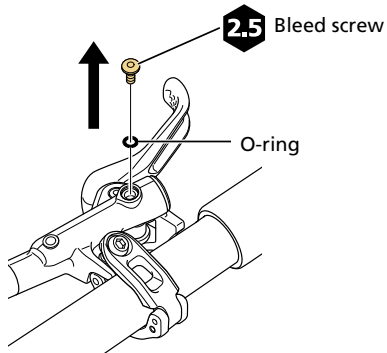


**4. Push the cap and diaphragm out.**

Insert a thin screwdriver or hexagon wrench into the hole where the bleed screw was removed, and push out the diaphragm.

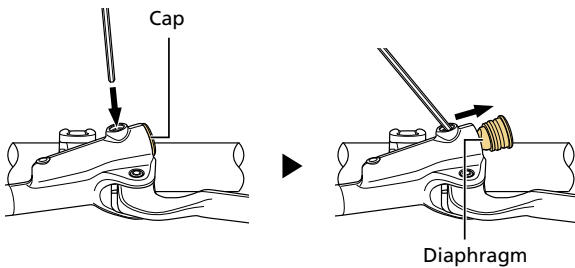


**5. Pull the cap and diaphragm out.**


Grasp the part that has been pushed out, and pull it out.

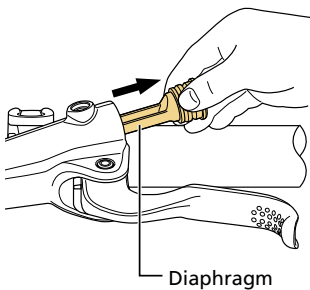

**6. Remove the cap from the diaphragm.**

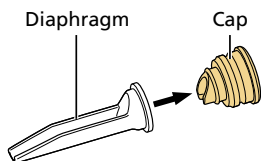


7. Attach the cap to a new diaphragm.

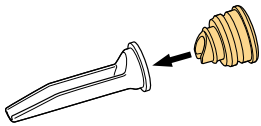
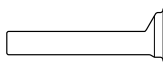


**NOTICE**

- Attach the cap to the diaphragm so that the diagonal parts indicated below are aligned.

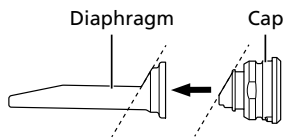


- Replace the diaphragm with one corresponding to each brake lever.

BL-M9100	BL-M9120 / BL-M8100 / BL-T8100 / BL-M7100
Y-part: Y8WM9801T	Y-part: Y1XK9801T
	


8. Insert the diaphragm into the brake lever body.

Insert the protrusion for cap positioning into the groove on the lever body.

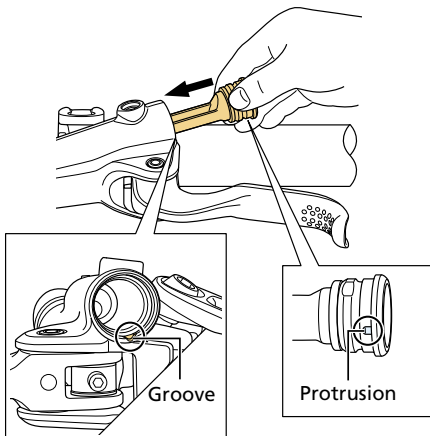


#### 9. Tighten the cap fixing screw.

The cap fixing screw can be turned by pulling the lever. Tighten while pushing the cap in so that there is no gap between the cap and the brake lever body. Be careful not to tighten excessively.

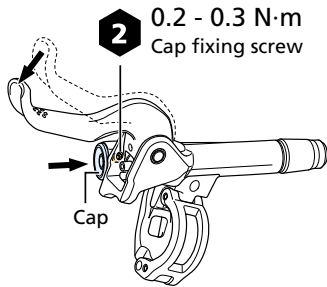

#### **NOTICE**

- If the part indicated below was pushed and became misaligned when loosening the cap fixing screw of the BL-M8100 or BL-M7100, push it back.

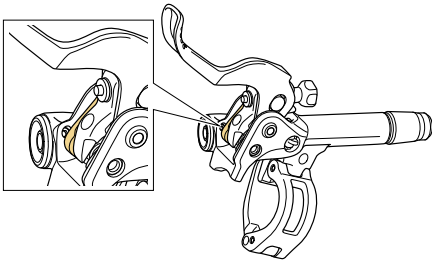

## Designated small parts for magnesium components

The BL-M9100 is made of magnesium. Use small parts designated for use with magnesium components as shown in the following figure.

If parts other than those designated for use with magnesium components are used, the rusting process will accelerate.

# Maintenance

## Designated small parts for magnesium components

---

